




INSTRUCTION

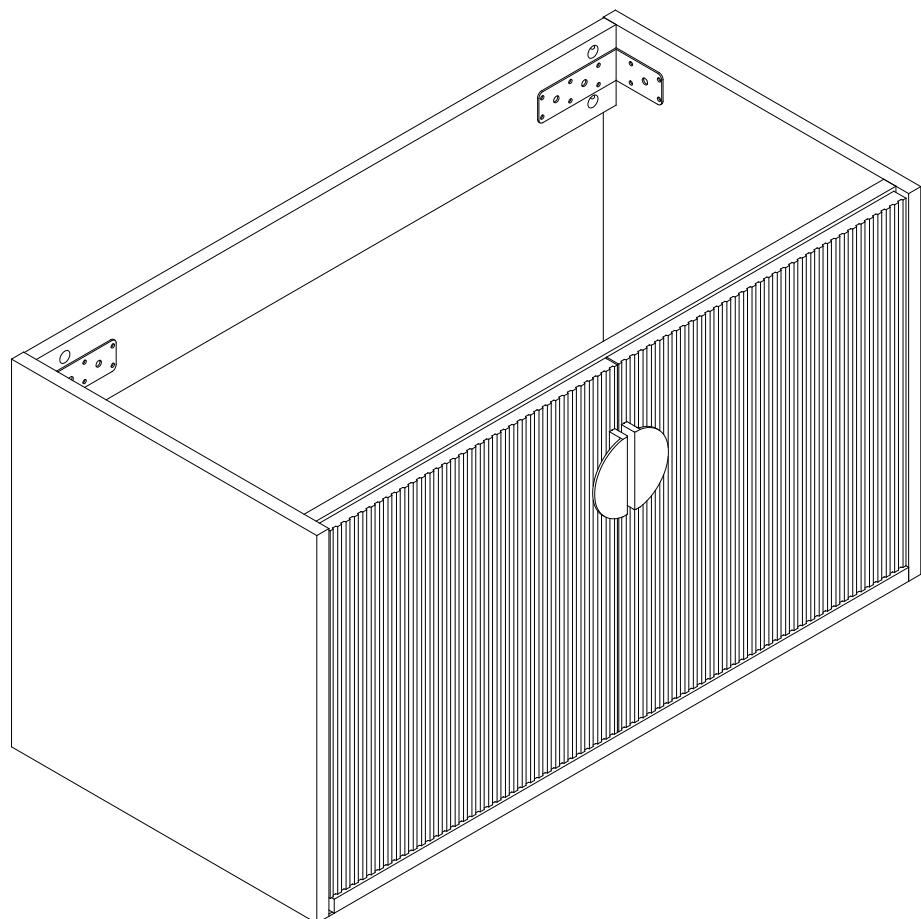


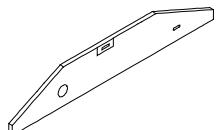


Spirit level



Tape measure
(3m~5m)

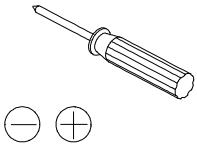

Screwdriver

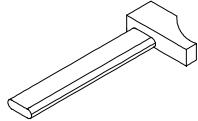

Hammer




Electric drill





Drill bit
(Ø8)




Pencil

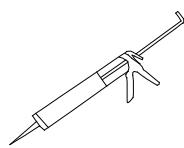


Silicone

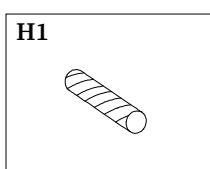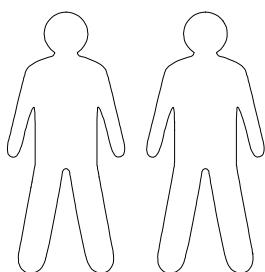


8*Ø8*30

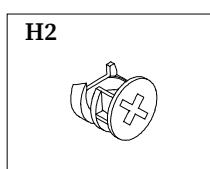


18*

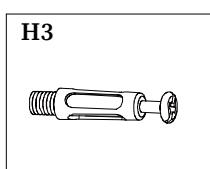


18*

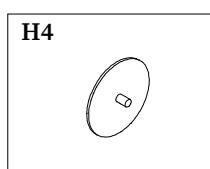


18*

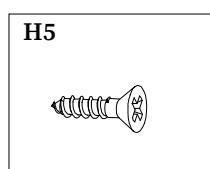


44*Ø4*16

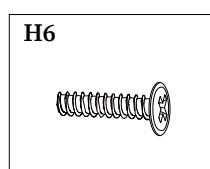


4*Ø4*22

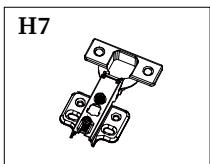


4*

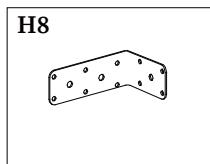


2*

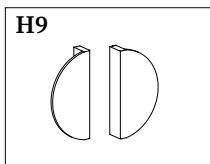


2*

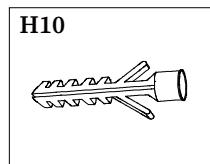

8*Ø8*40

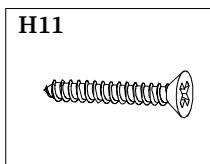

4*Ø4*50

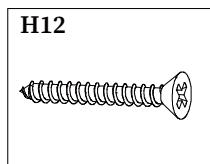


4*Ø4*70


Stand-by Spareparts




2x




2x






2x

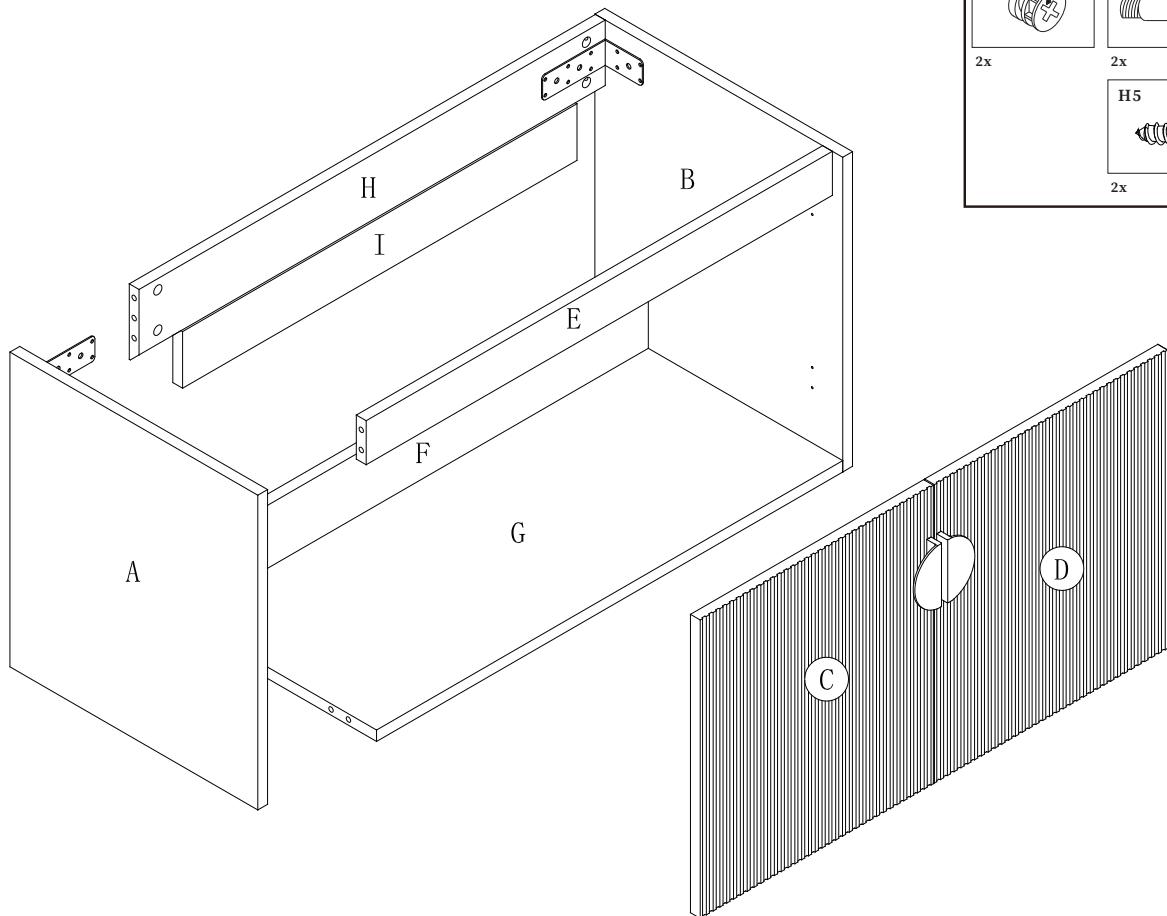



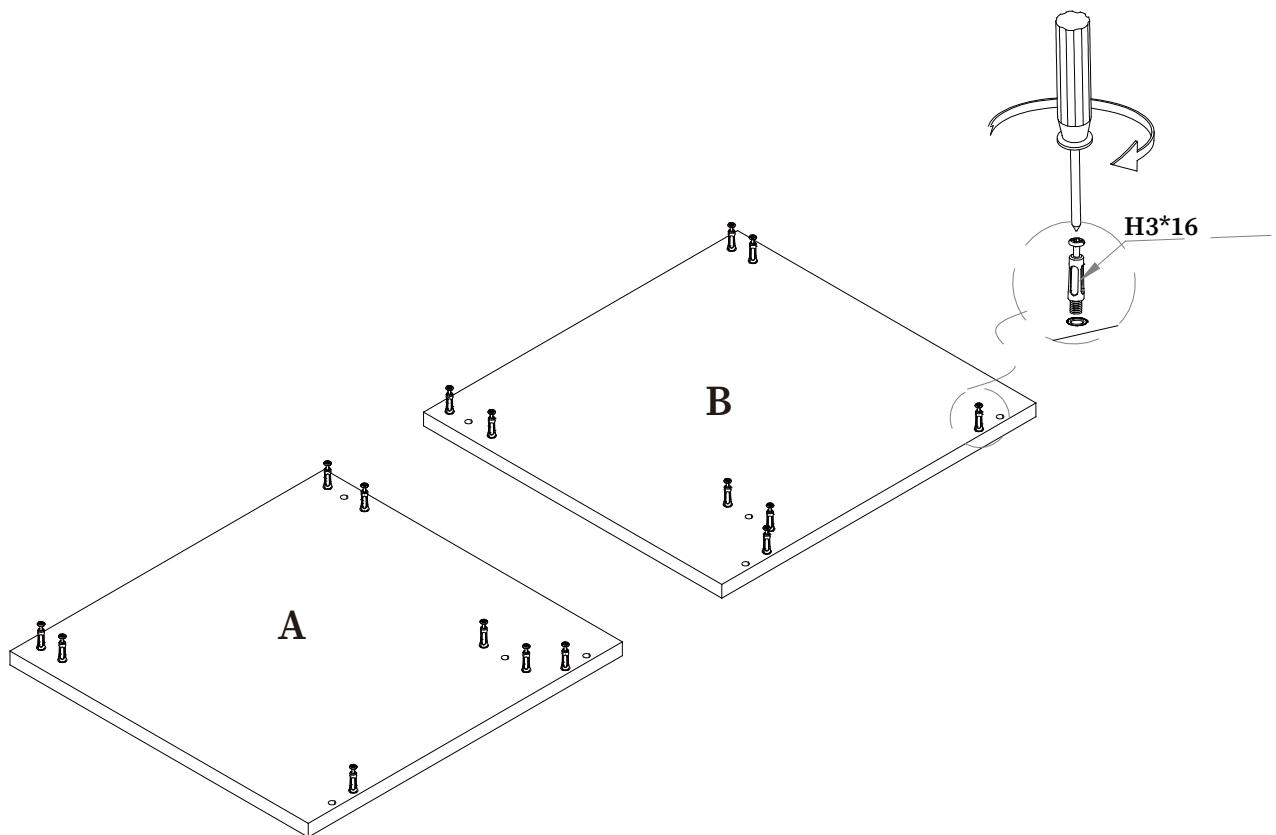


Right side

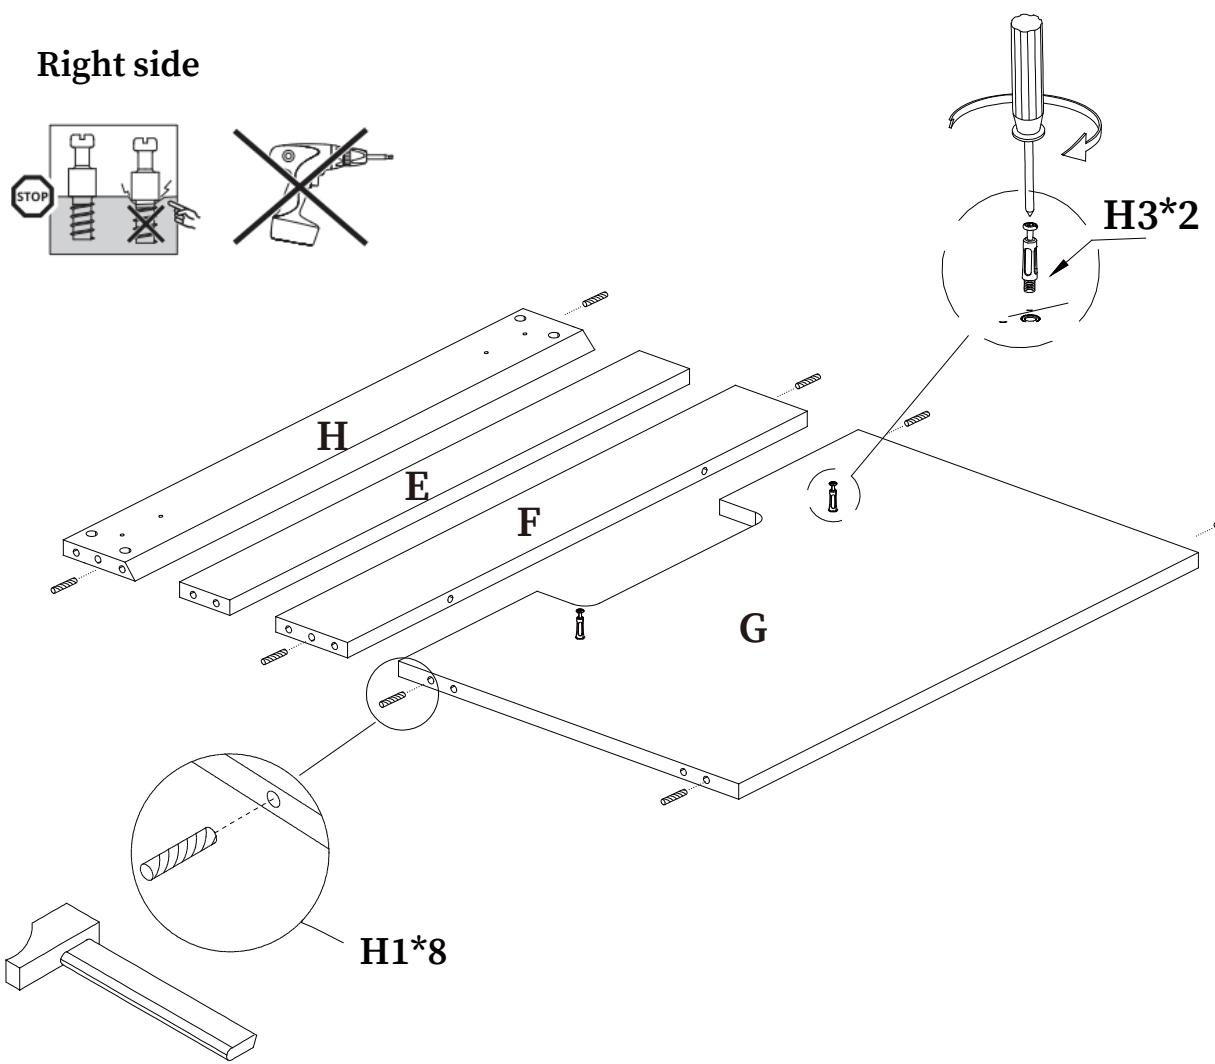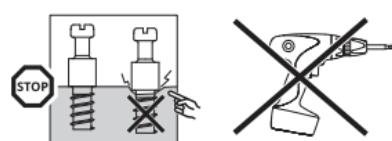


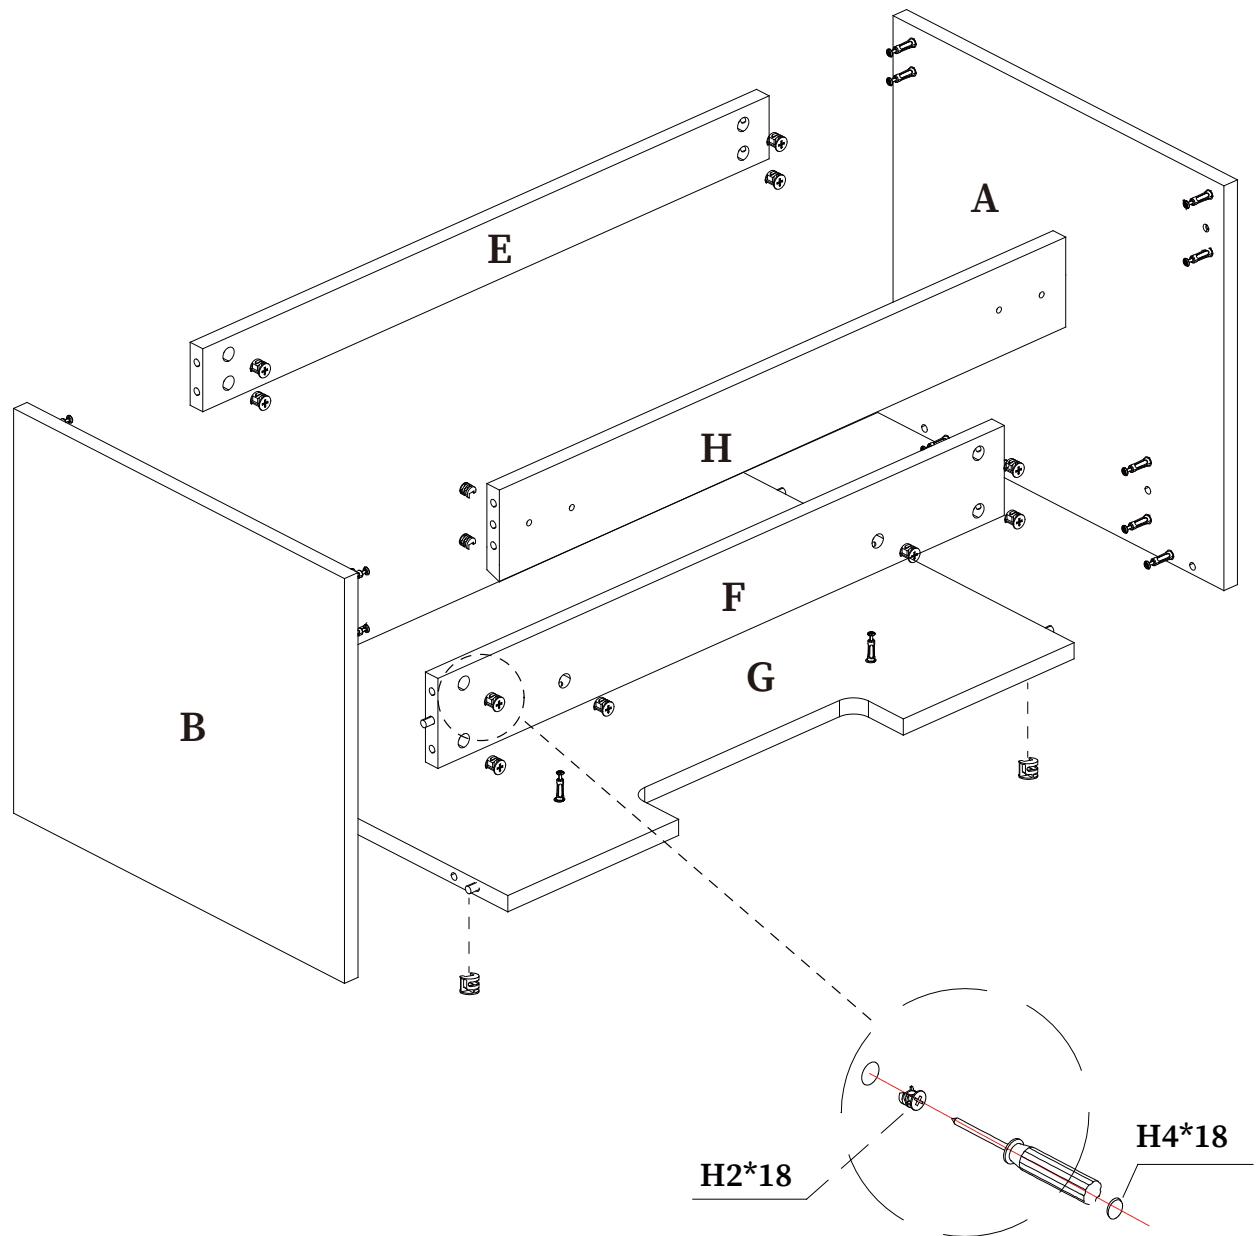



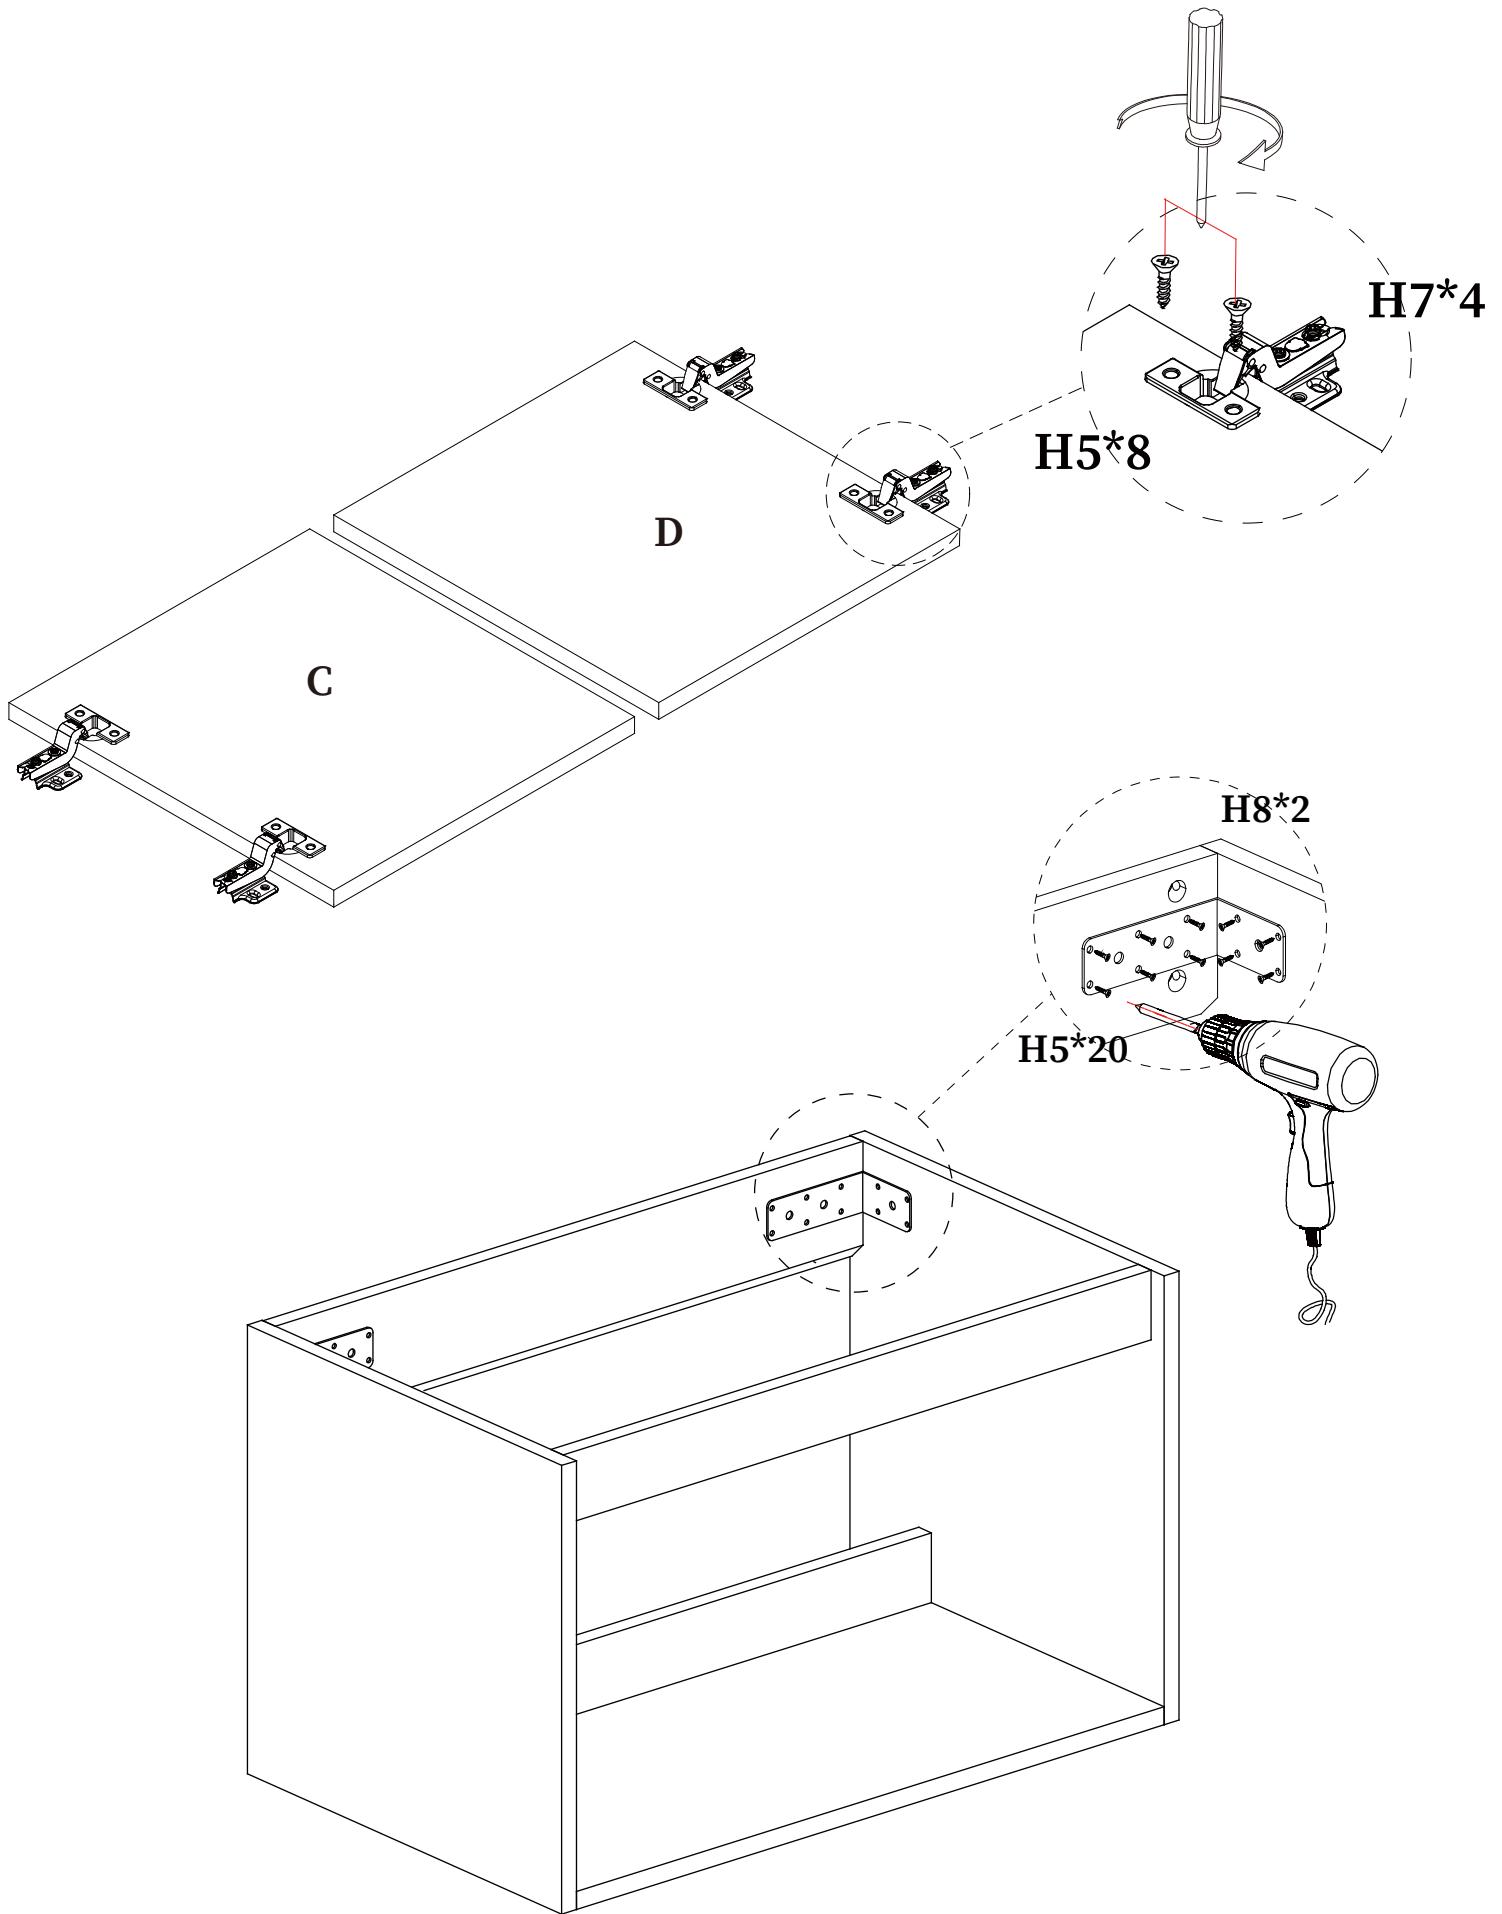


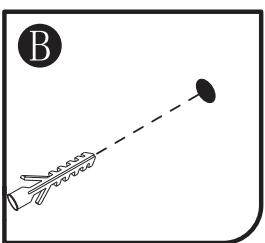
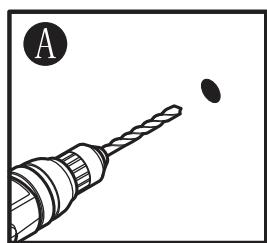



H10*4

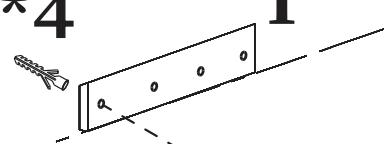

H11*4

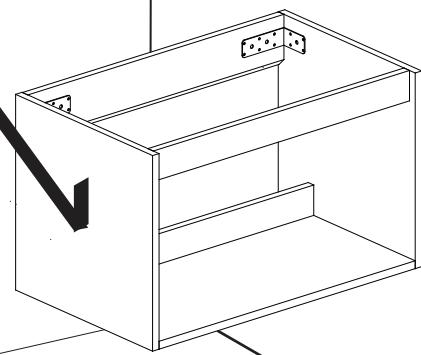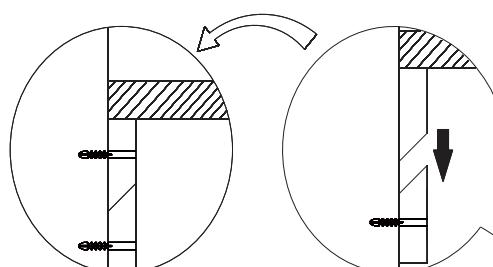

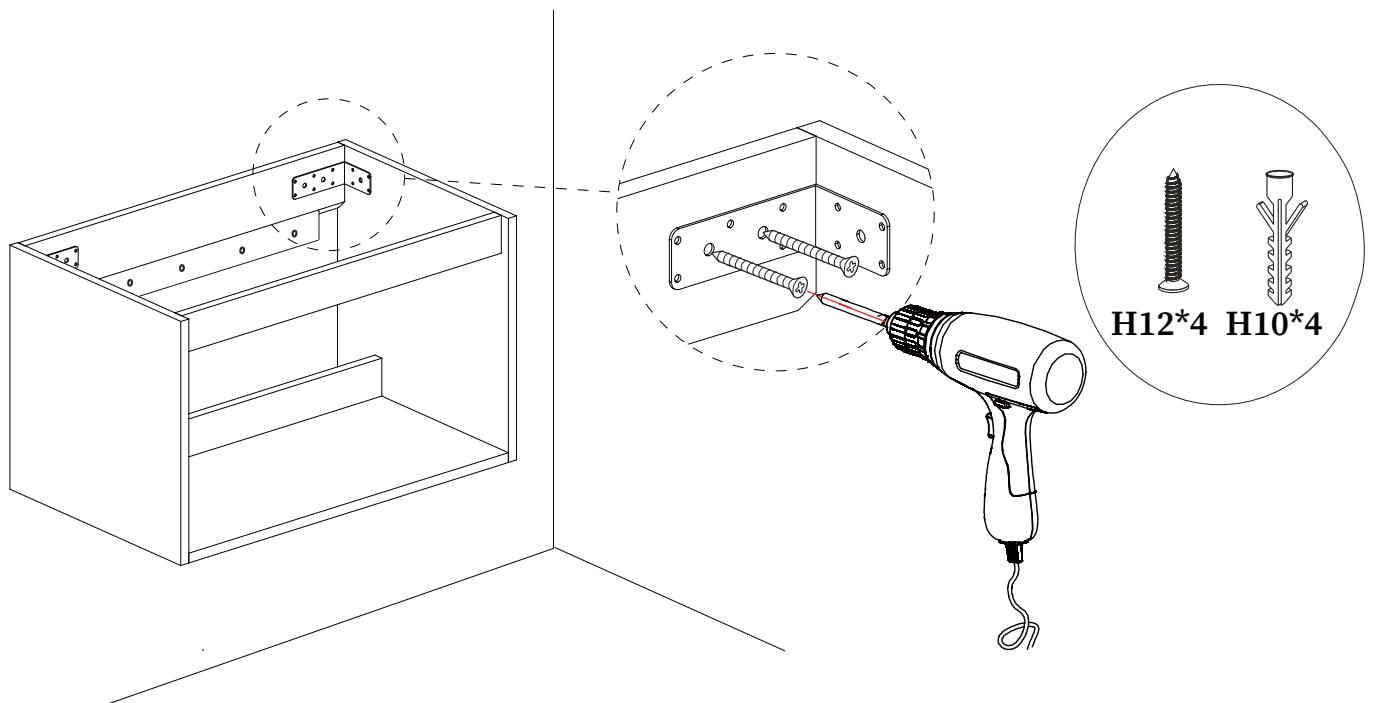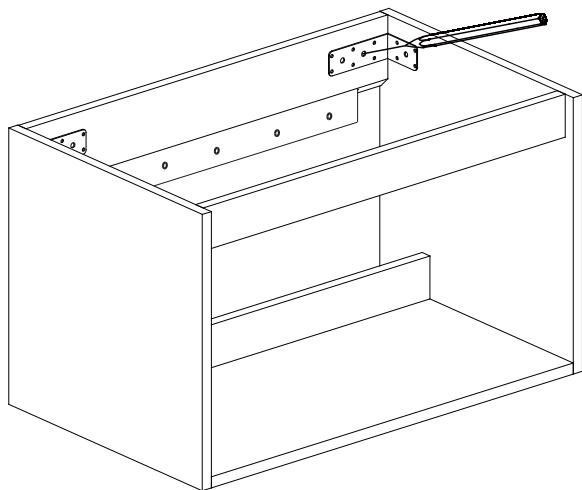

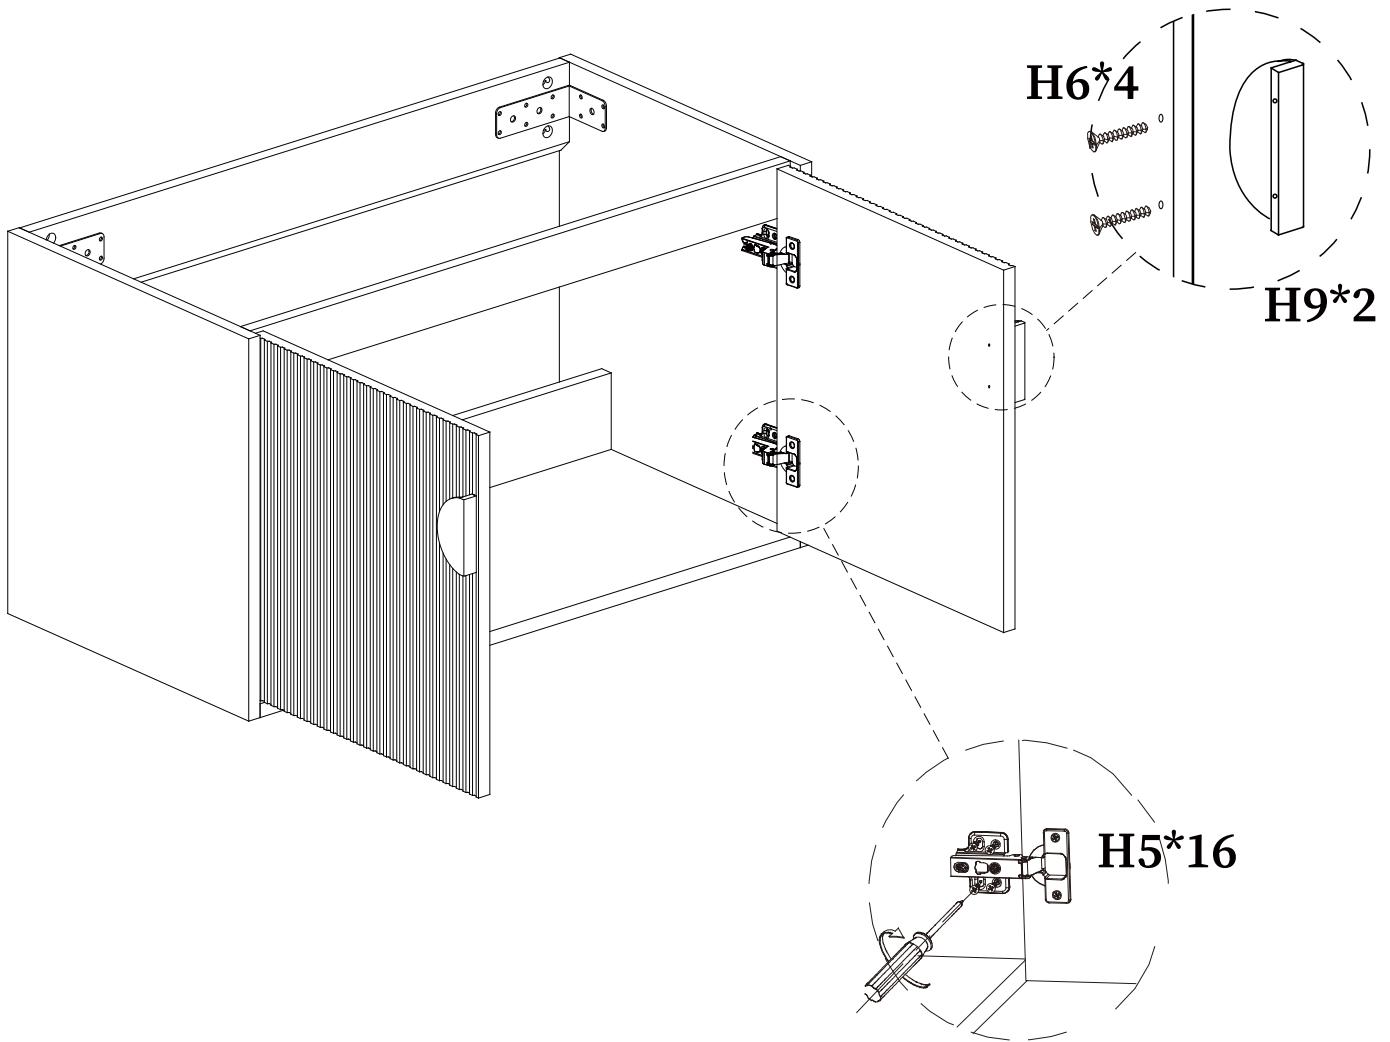

HINGE ADJUST DETAIL

