


ASSEMBLY INSTRUCTIONS



CLN30


SERA
BATHROOM
DESIGNS

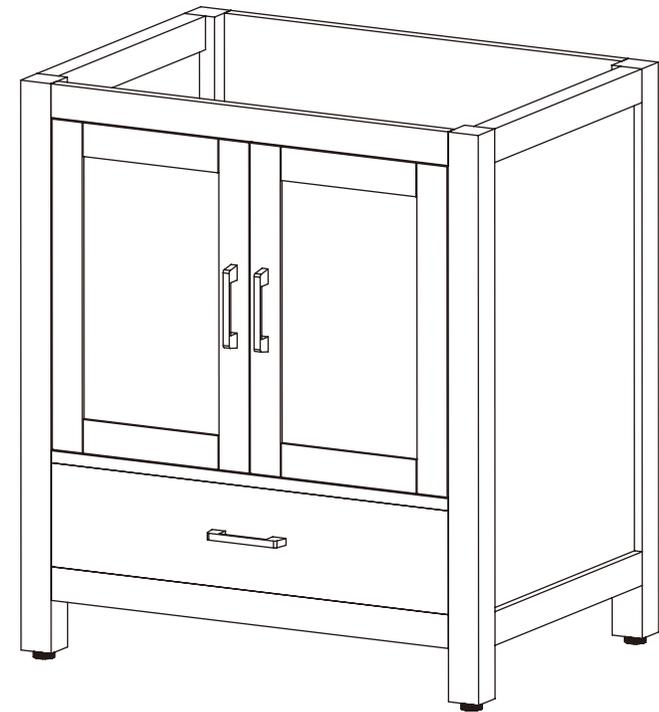






Please prepare the following tools




Ax18 	Bx18 	Cx8 	Dx4  M3.5*13	Ex24  M4*16
Fx1 	Gx1 	Hx1 	Ix4 	Jx3 
Kx4  M4*25	Lx2  M4*45	Mx4 	Nx4 	Ox10  M3.5*16

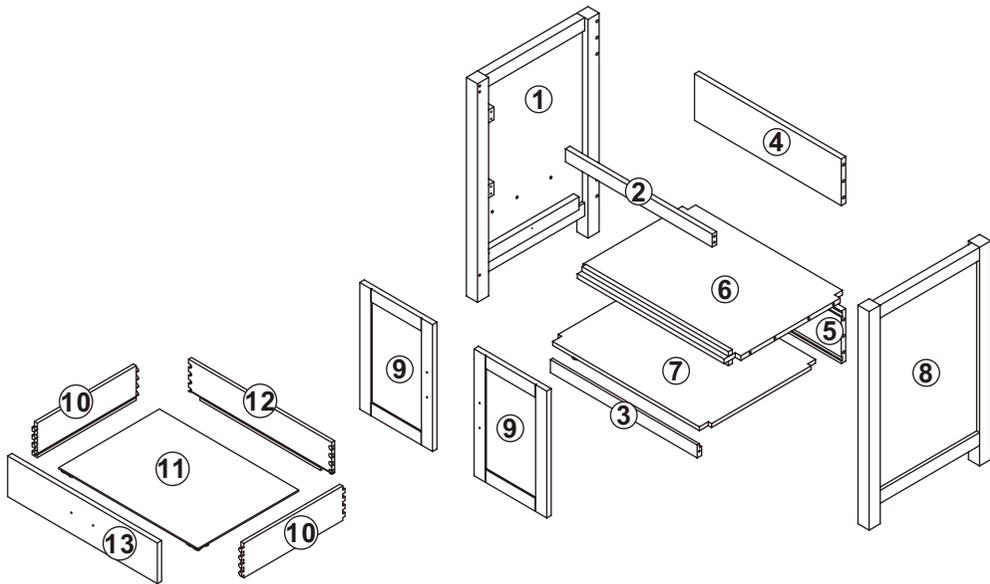


1

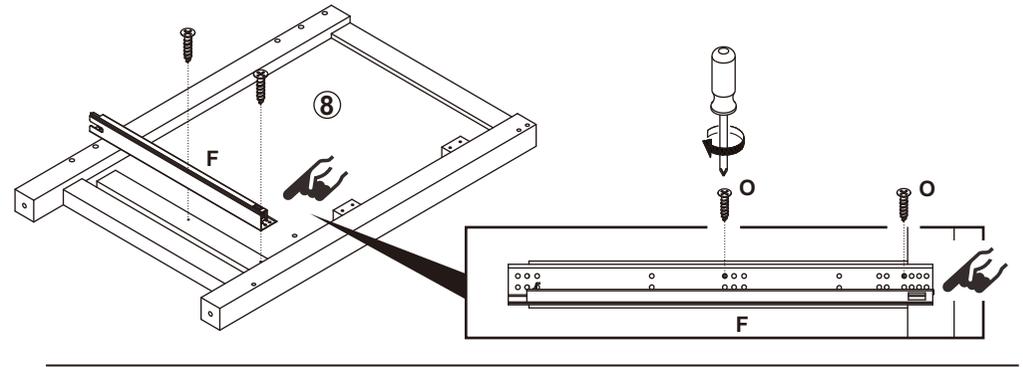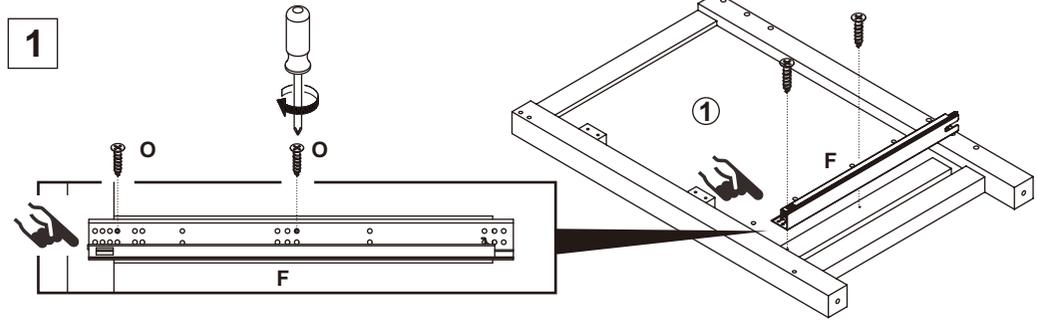


2

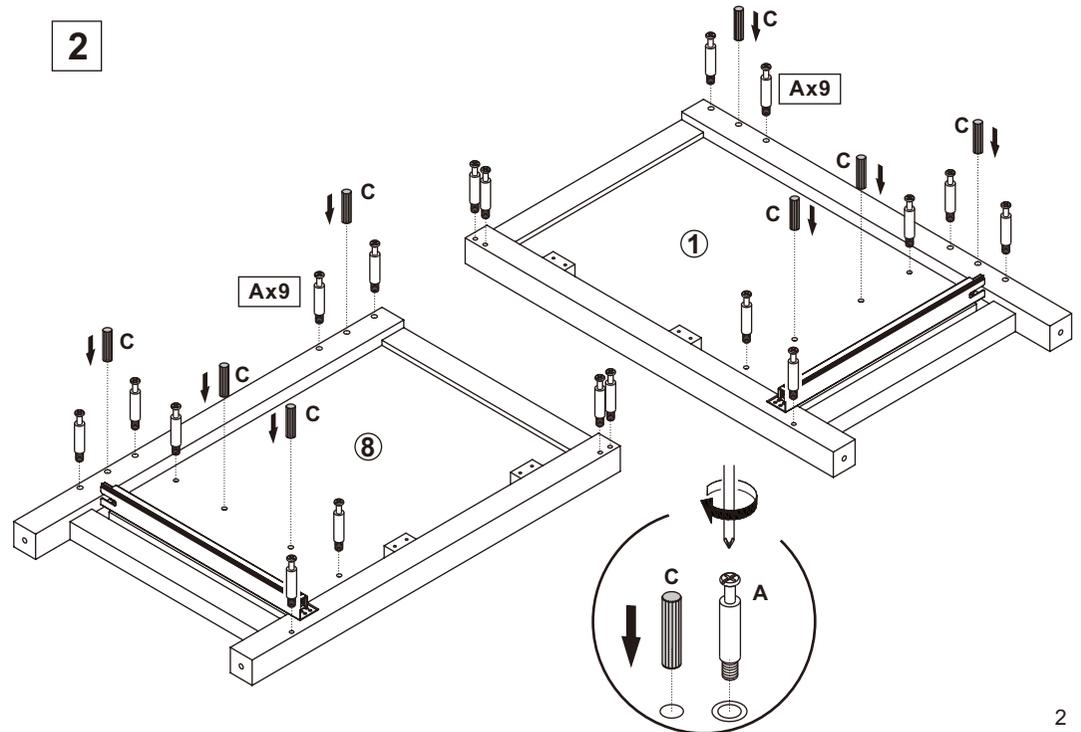


3

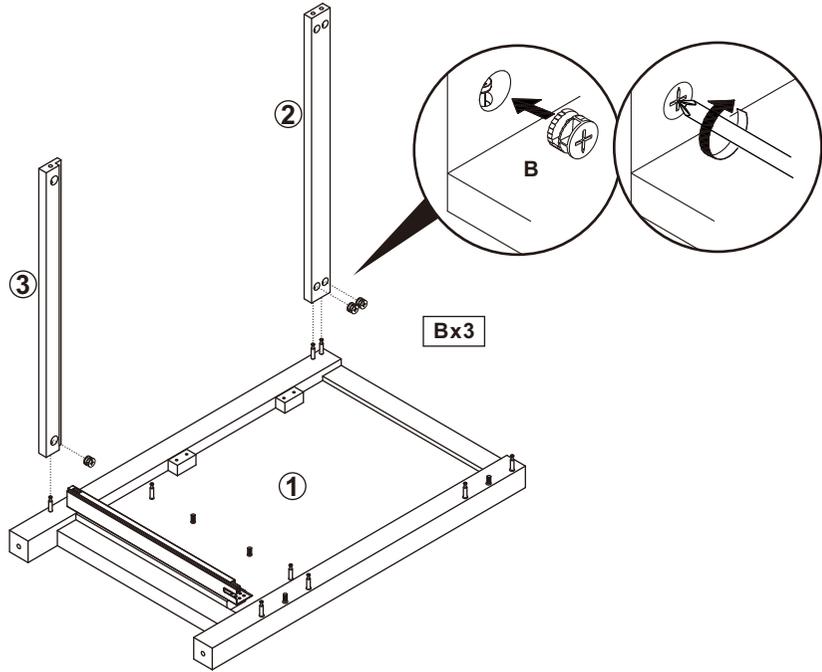


5

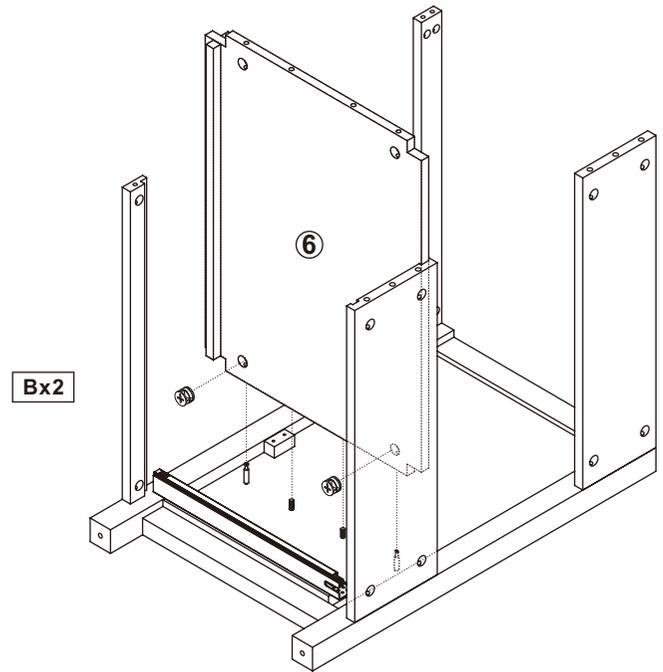


4

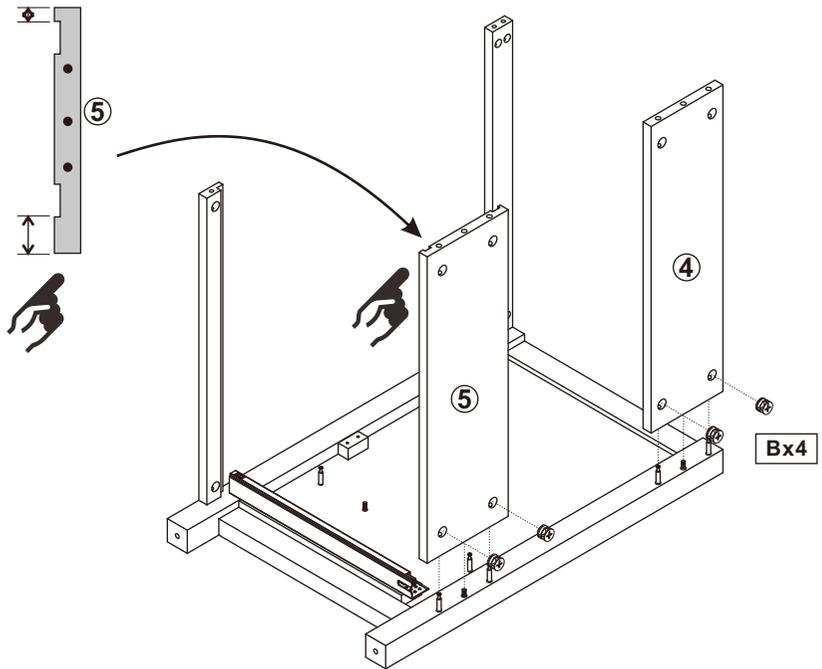


6

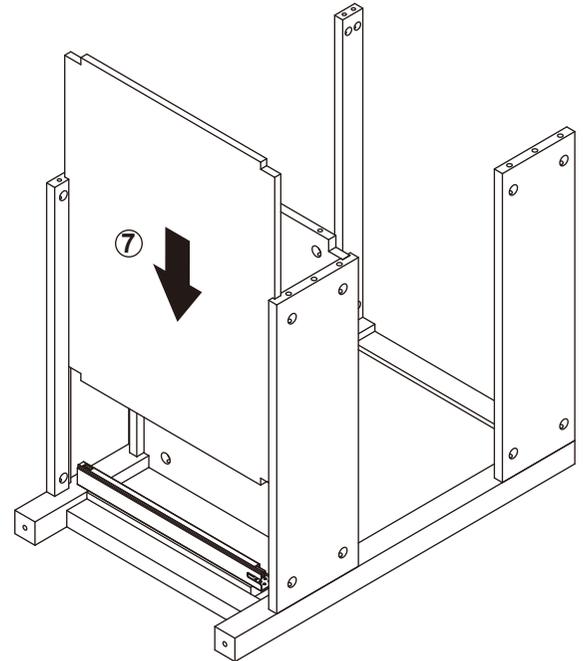


7

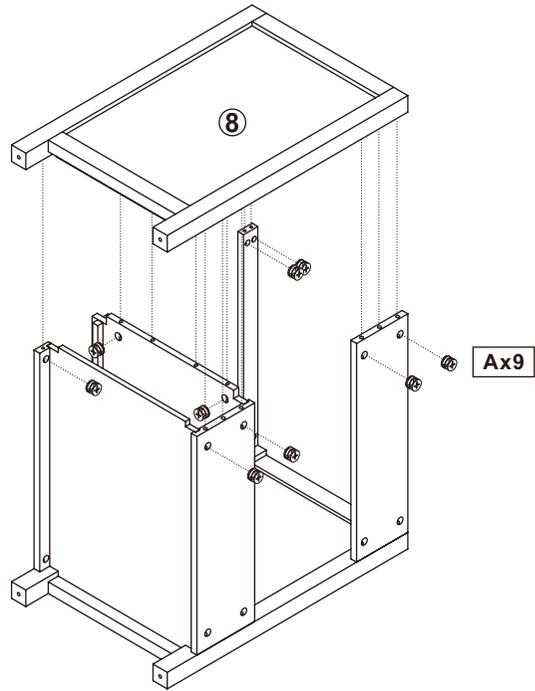


9

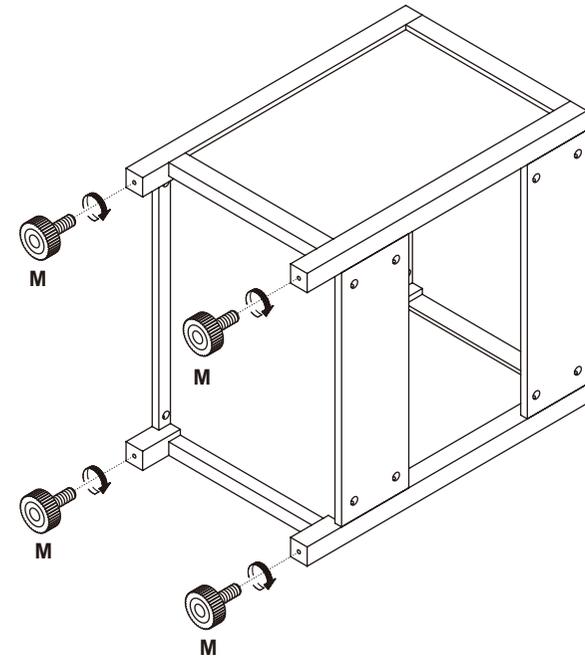


8

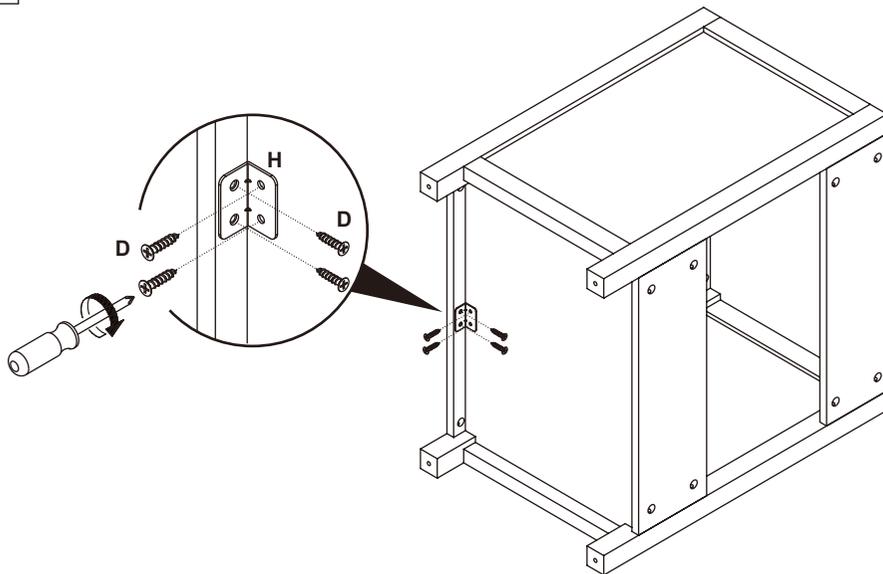


10

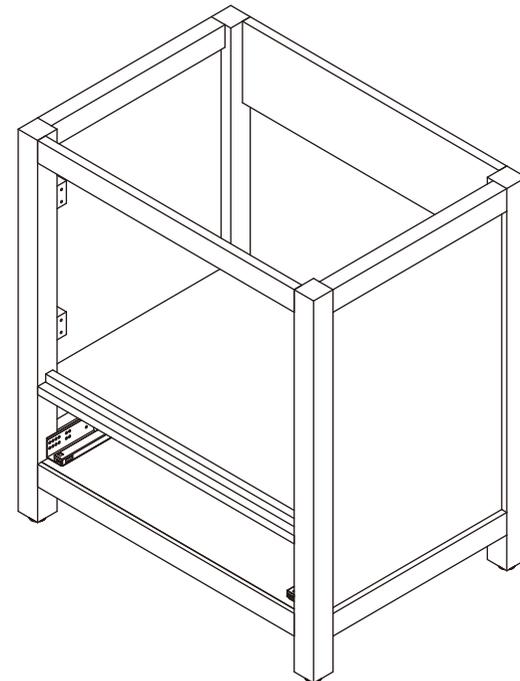


11

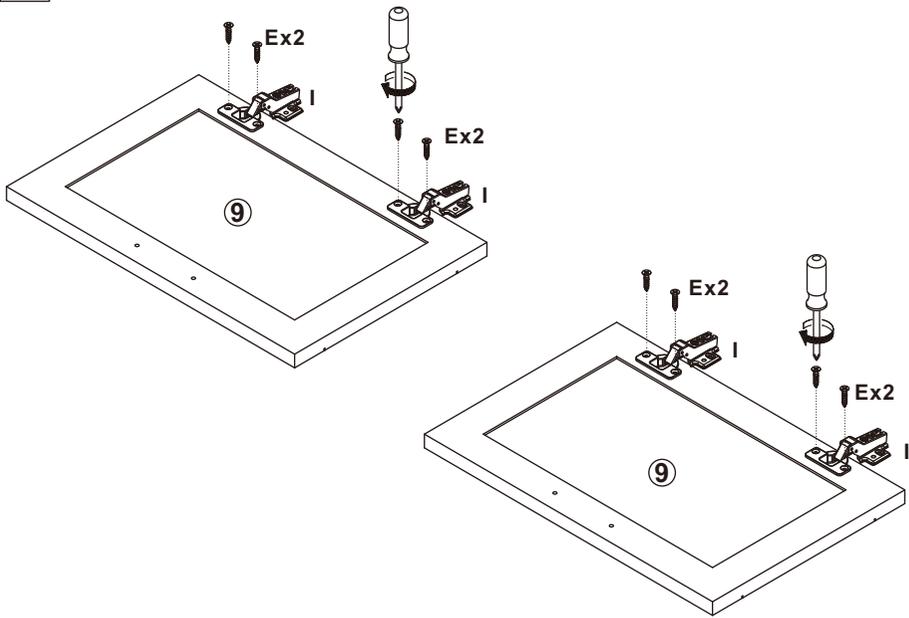


13

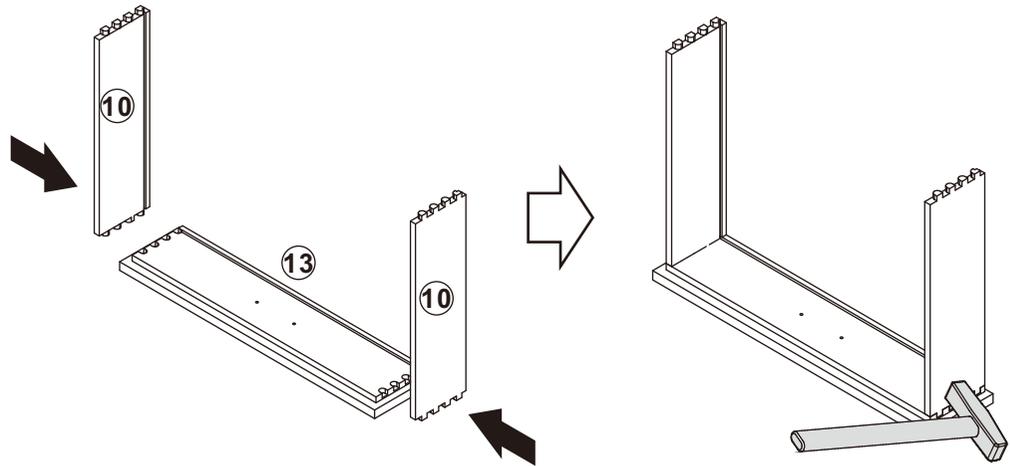


12

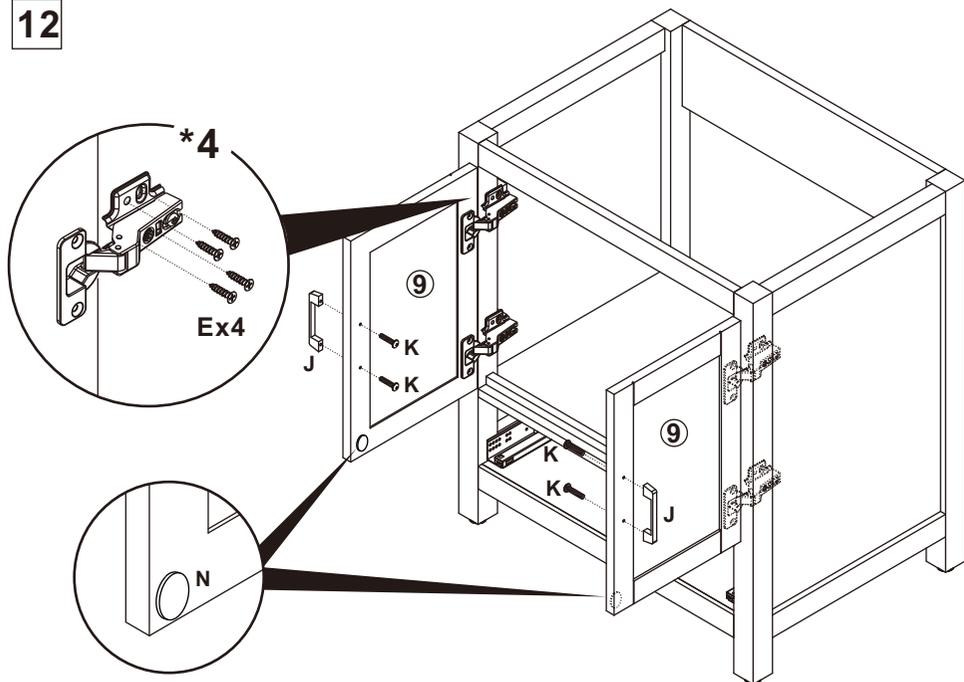



14

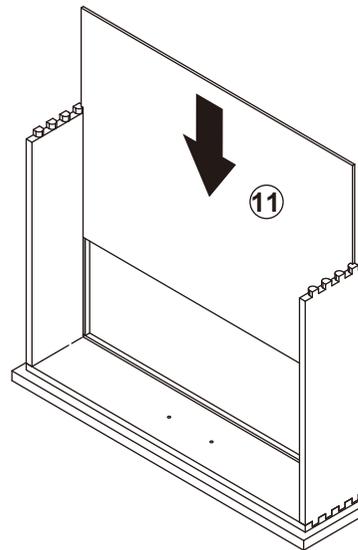


15

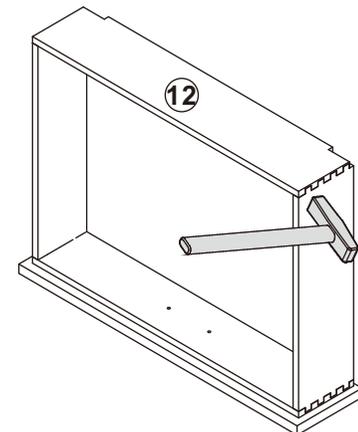


16

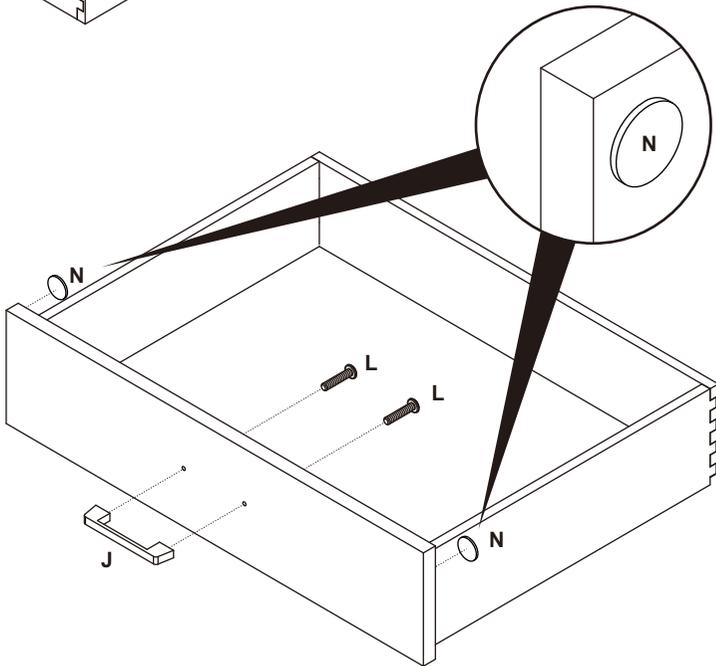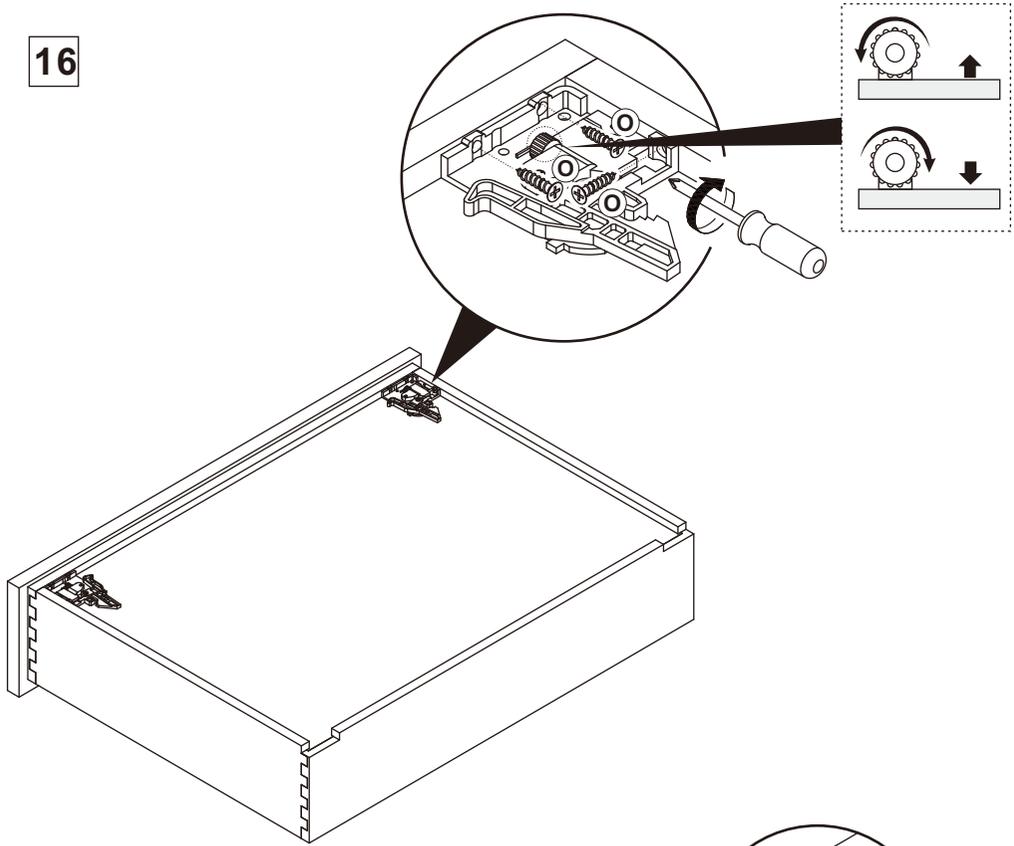


17

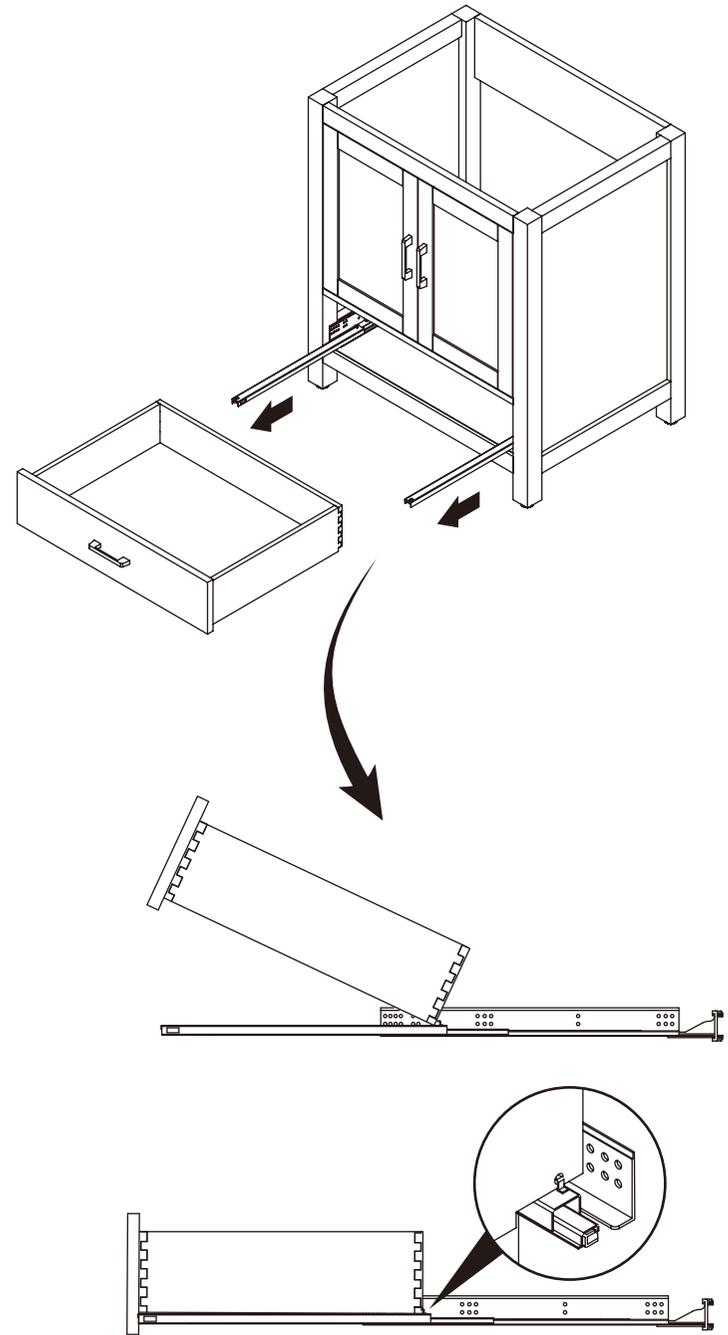


18

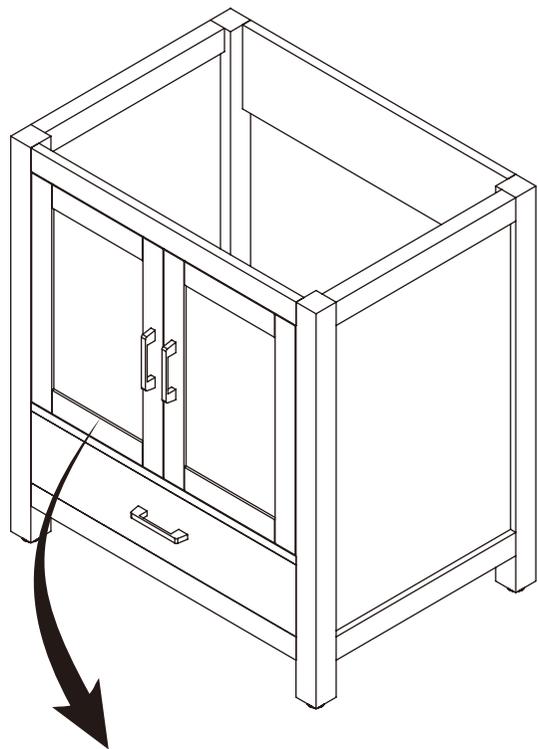

DOOR ADJUSTMENT

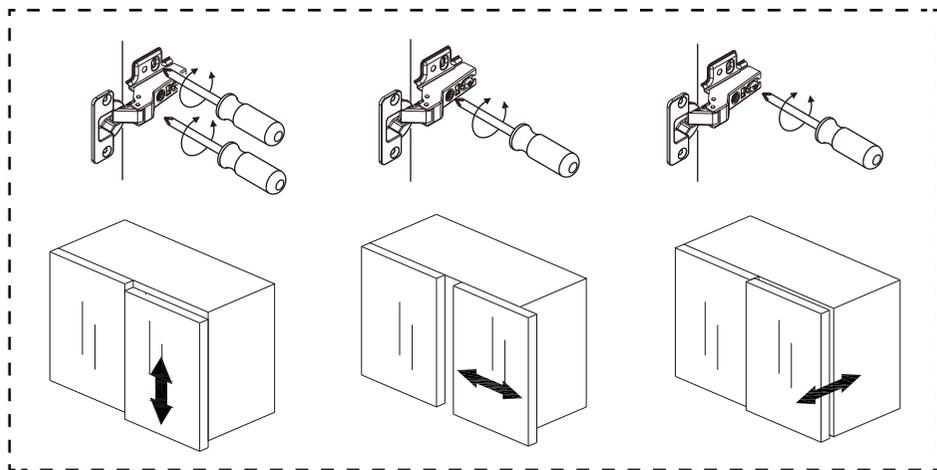

19

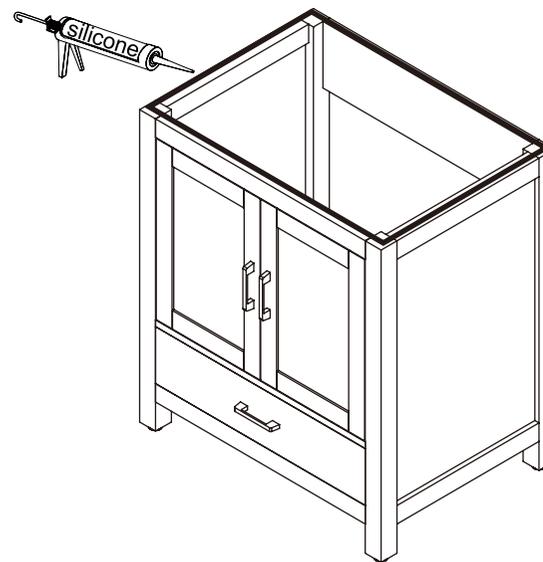

20

