



1-888-642-8844

Thank you for your business.

In the event you experience any issues with this product, please do not return it to the retailer or point of purchase. Instead, contact our customer support team directly for prompt assistance. Our support specialists are trained to resolve all product-related concerns and can provide you with the fastest, most effective solution.

.....


Nous vous remercions pour votre achat.

En cas de problème avec ce produit, veuillez ne pas le retourner au détaillant ou au point de vente. Contactez plutôt directement notre équipe de support client pour obtenir une assistance rapide. Nos spécialistes du support sont formés pour résoudre tous les problèmes liés aux produits et peuvent vous fournir la solution la plus rapide et la plus efficace.


.....

1-888-642-8844


Douche à l'italienne

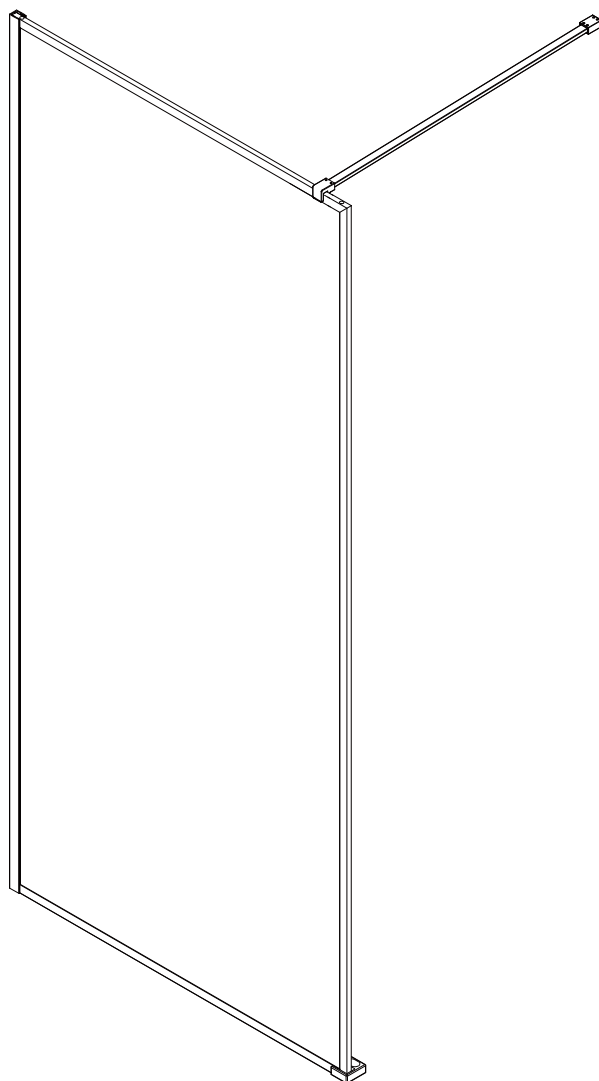


Outils nécessaires :




Ø6mm



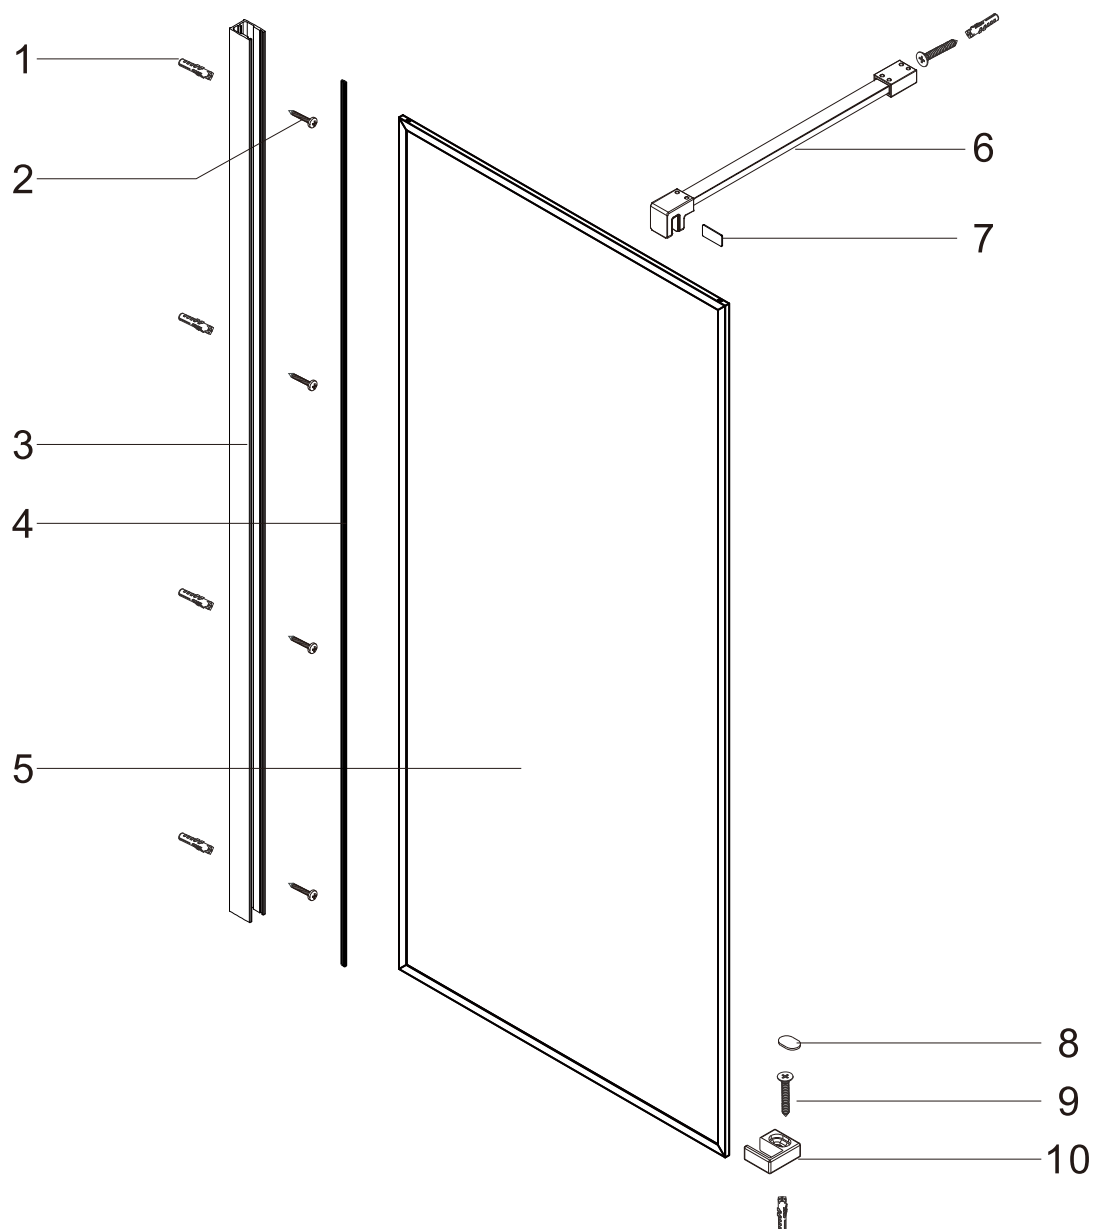

Pièces fournies


1 x6 	2 x4 	3 x1 	4 x1 	5 x1
6 x1 	7 x1 	8 x1 	9 x2 	10 x1
11 x1 2.5mm	12 x1 			

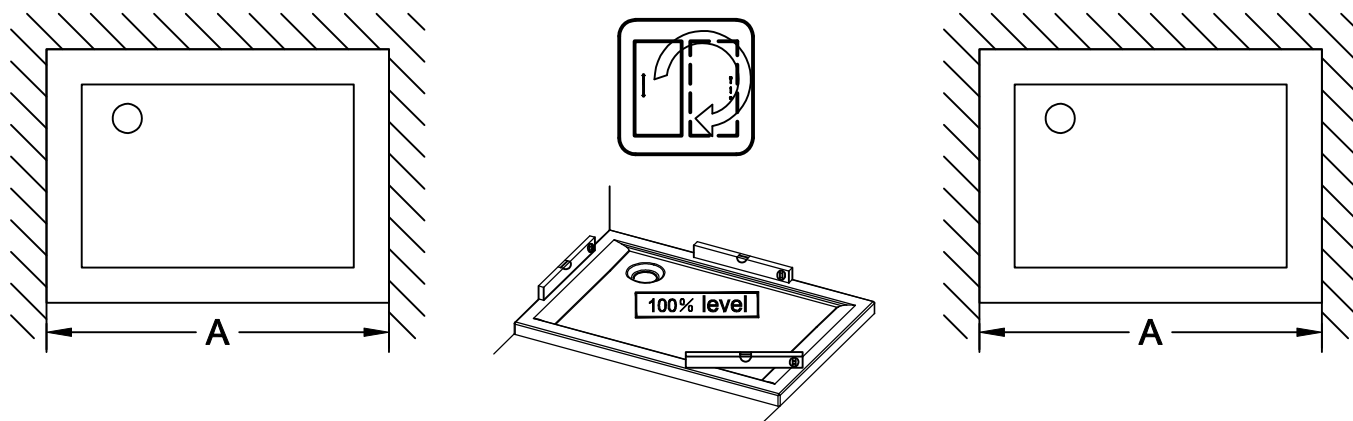


IMPORTANT - Site d'installation

1. Assurez-vous que la surface supérieure du receveur de douche sur laquelle sera installée la cabine est de niveau dans toutes les directions.
2. Le carrelage ou tout autre revêtement mural doit être correctement étanchéifié au niveau des bords du receveur.
3. Le carrelage doit au minimum recouvrir les coins du receveur et atteindre une hauteur d'au moins 2,1 mètres depuis le haut du receveur.


1

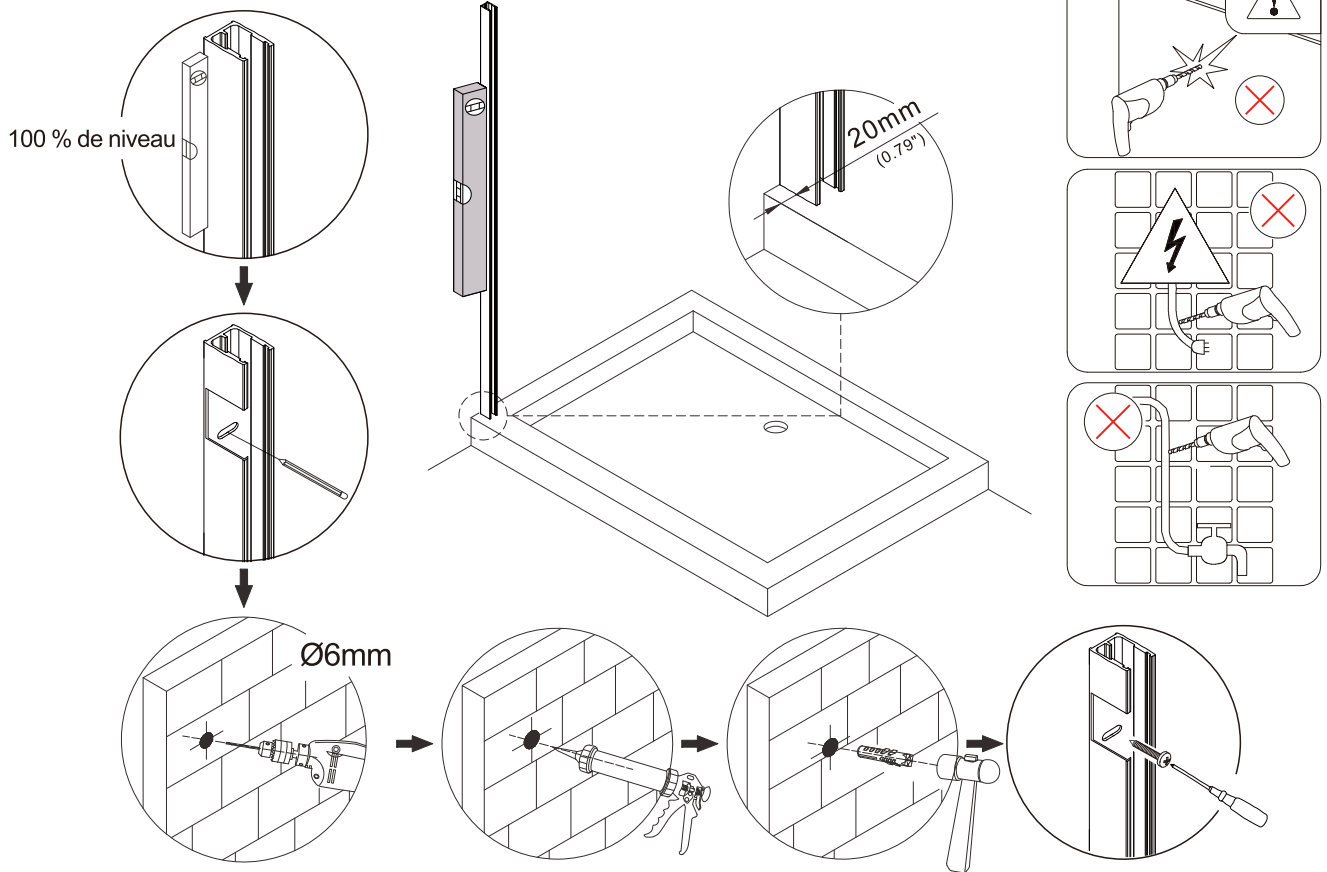

2

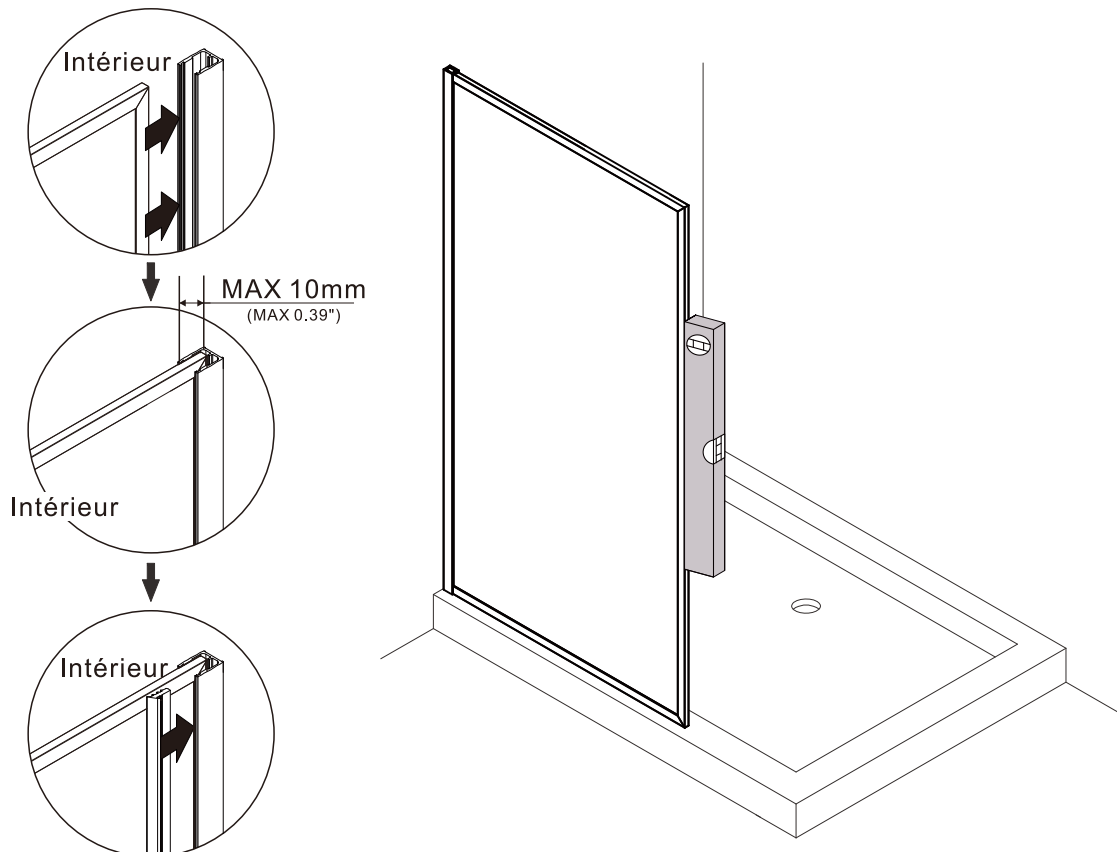


3

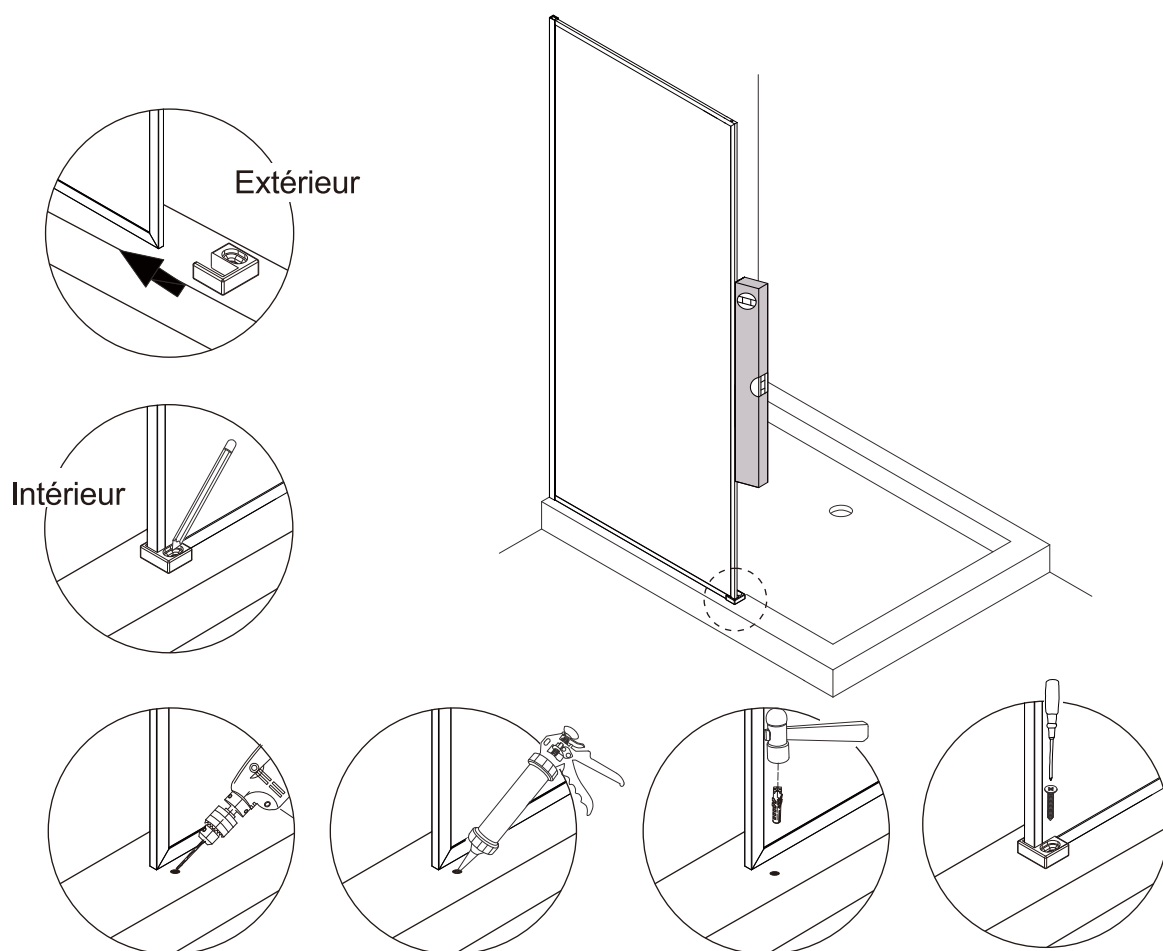


4

Étape Optionnelle - Recommandée

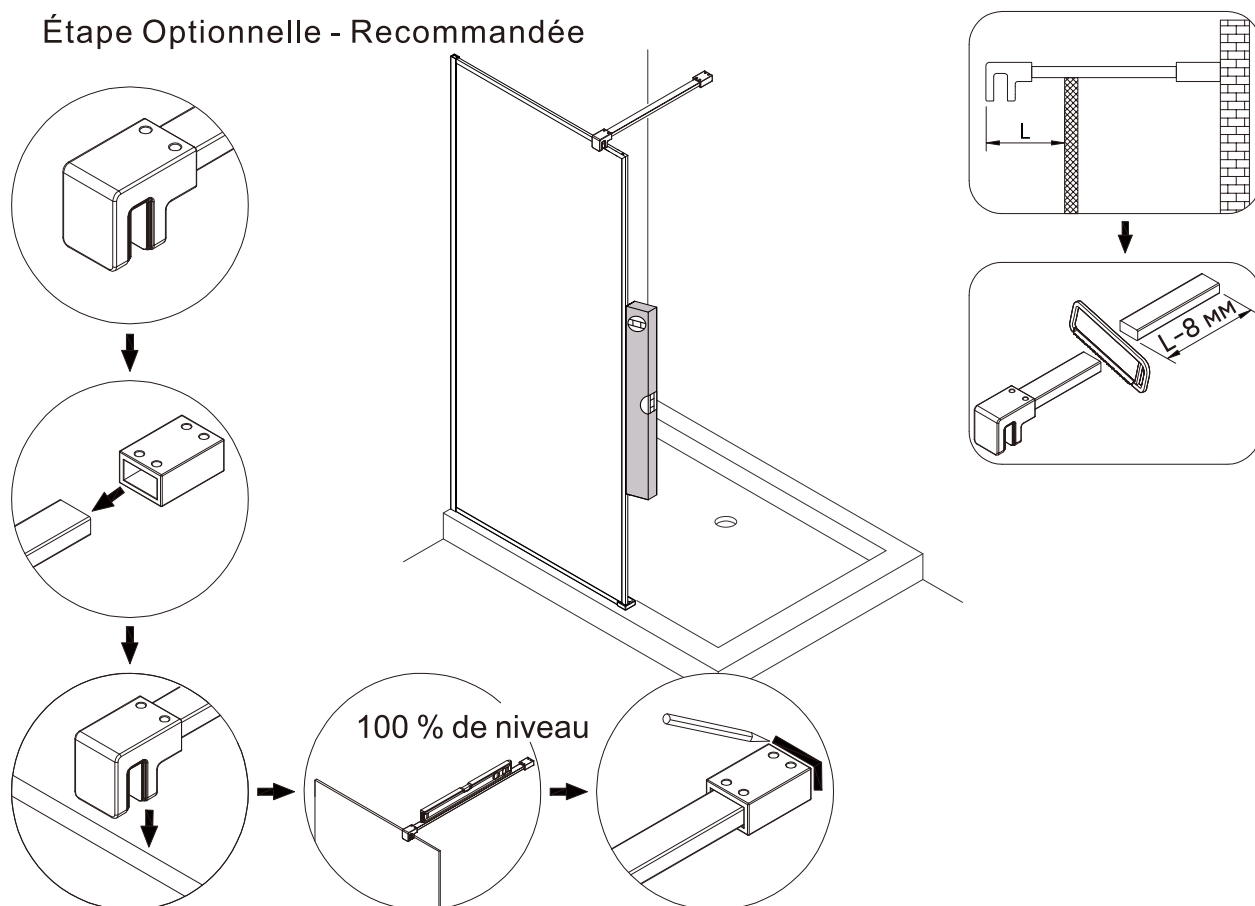


5


Étape Optionnelle - Recommandée

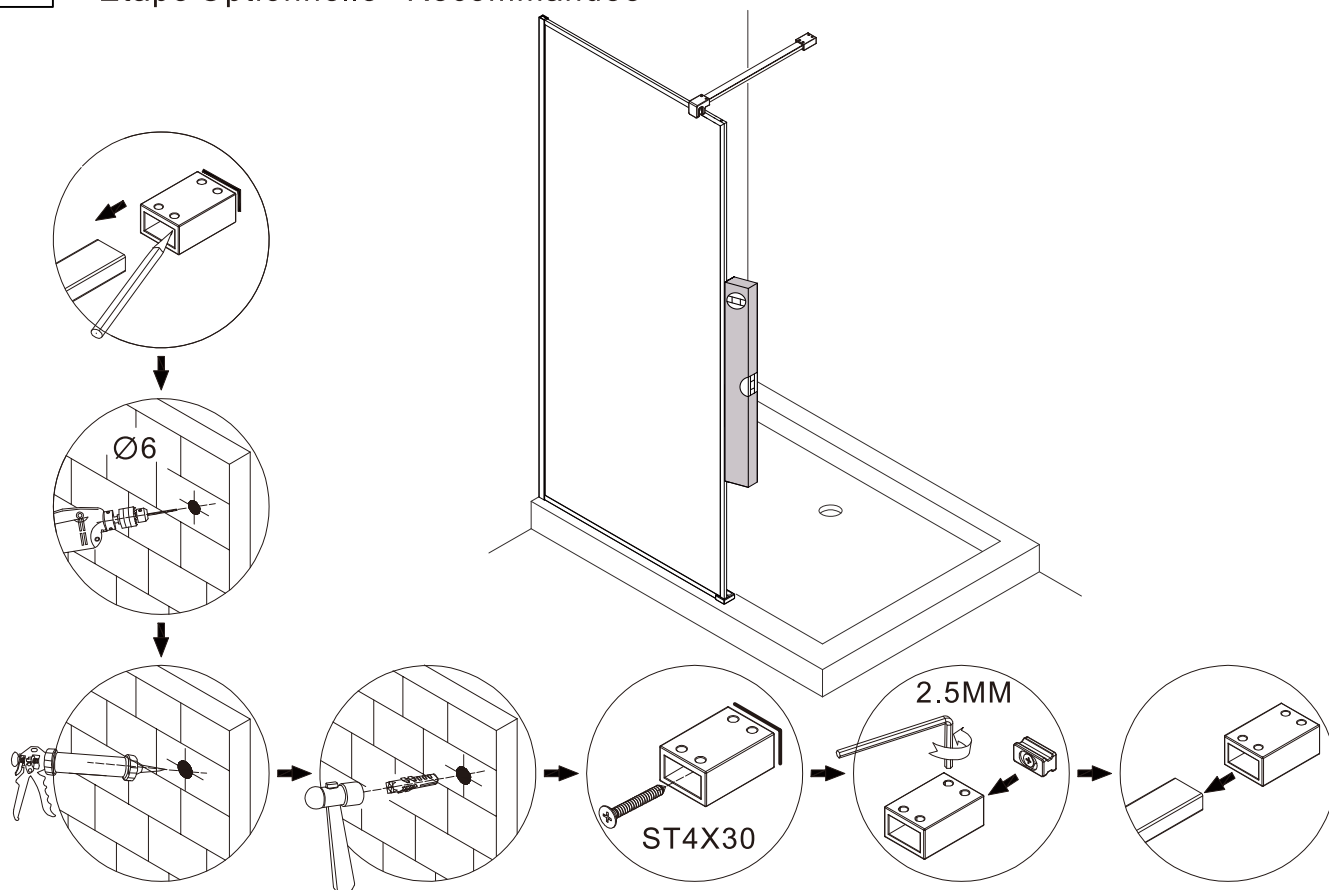


6

Étape Optionnelle - Recommandée

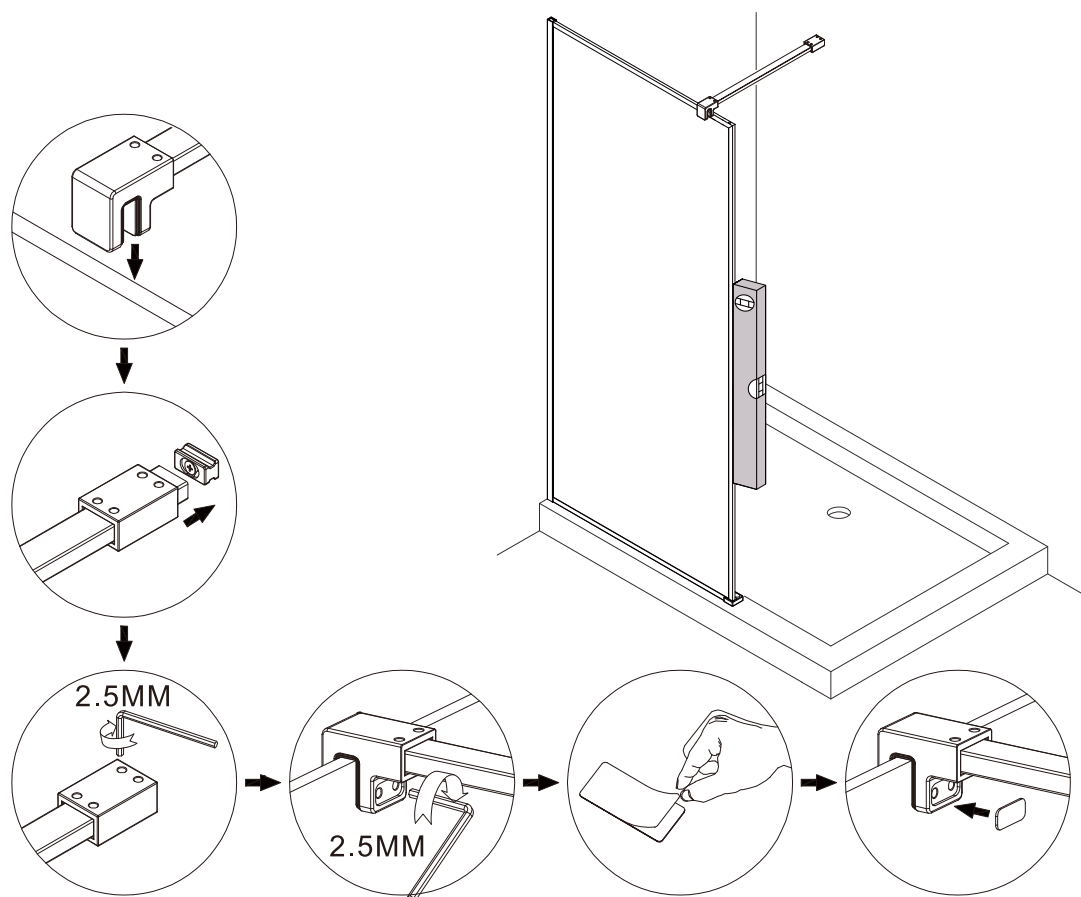


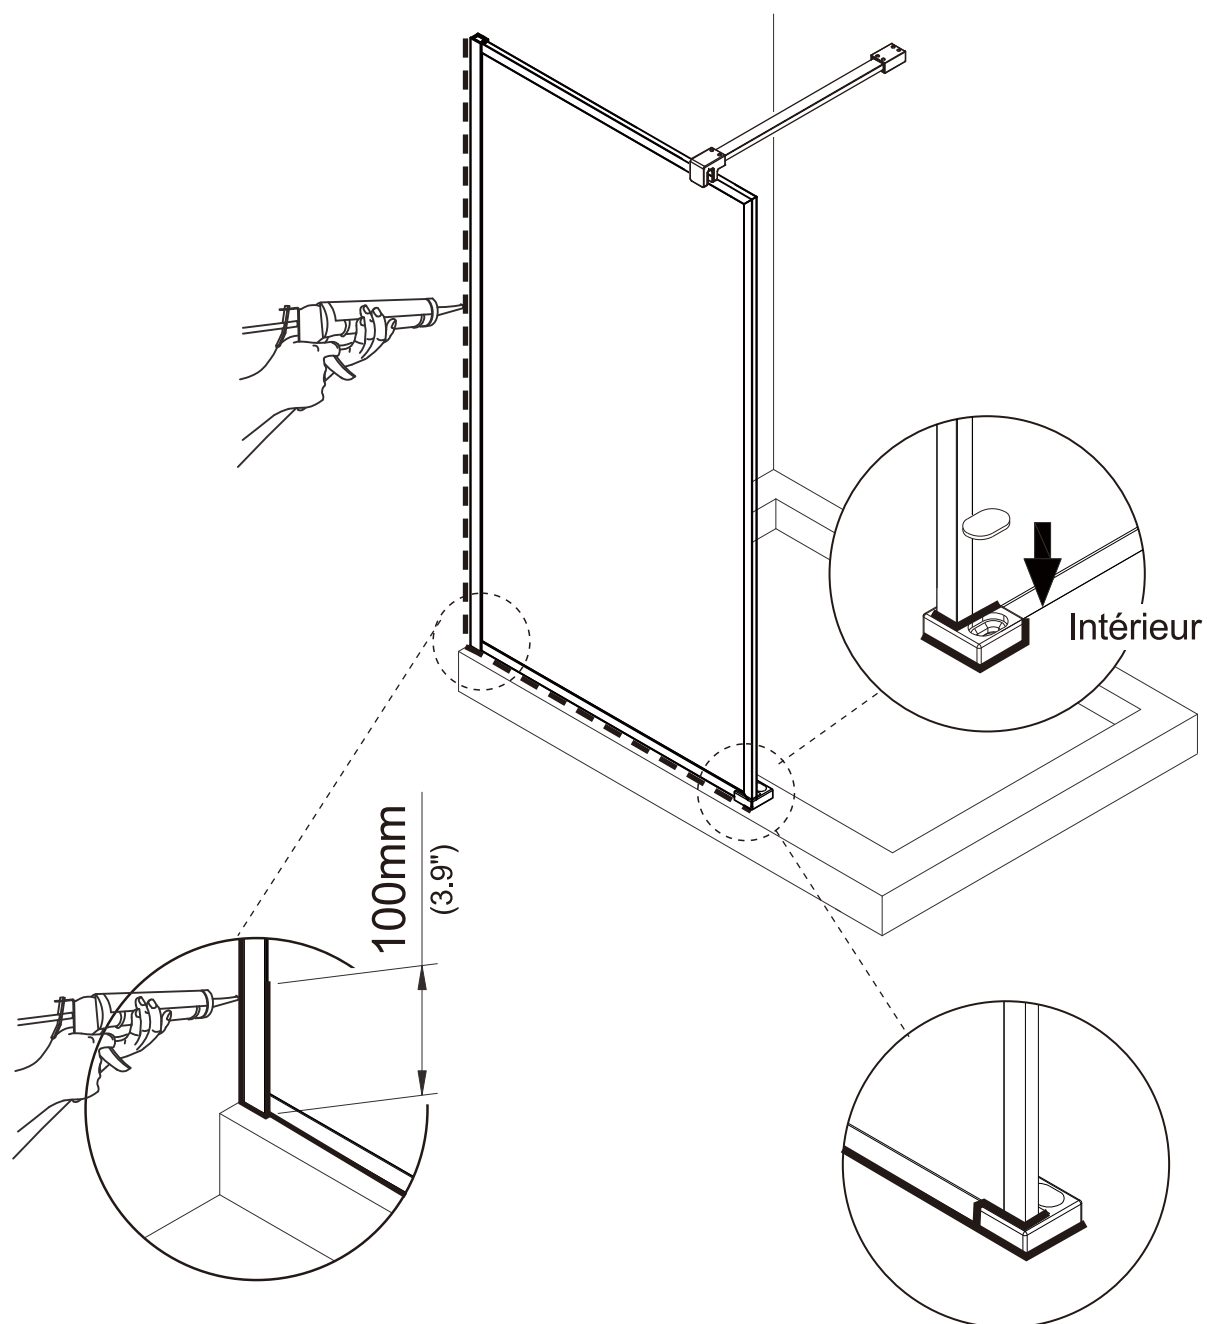


Walk In

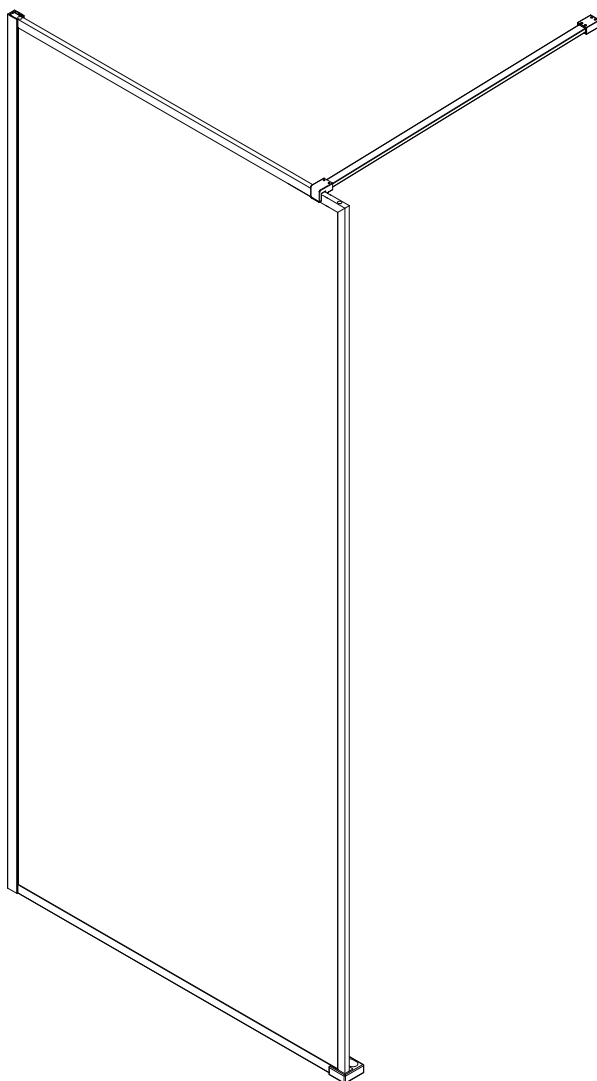


Tools Required:









Ø6mm



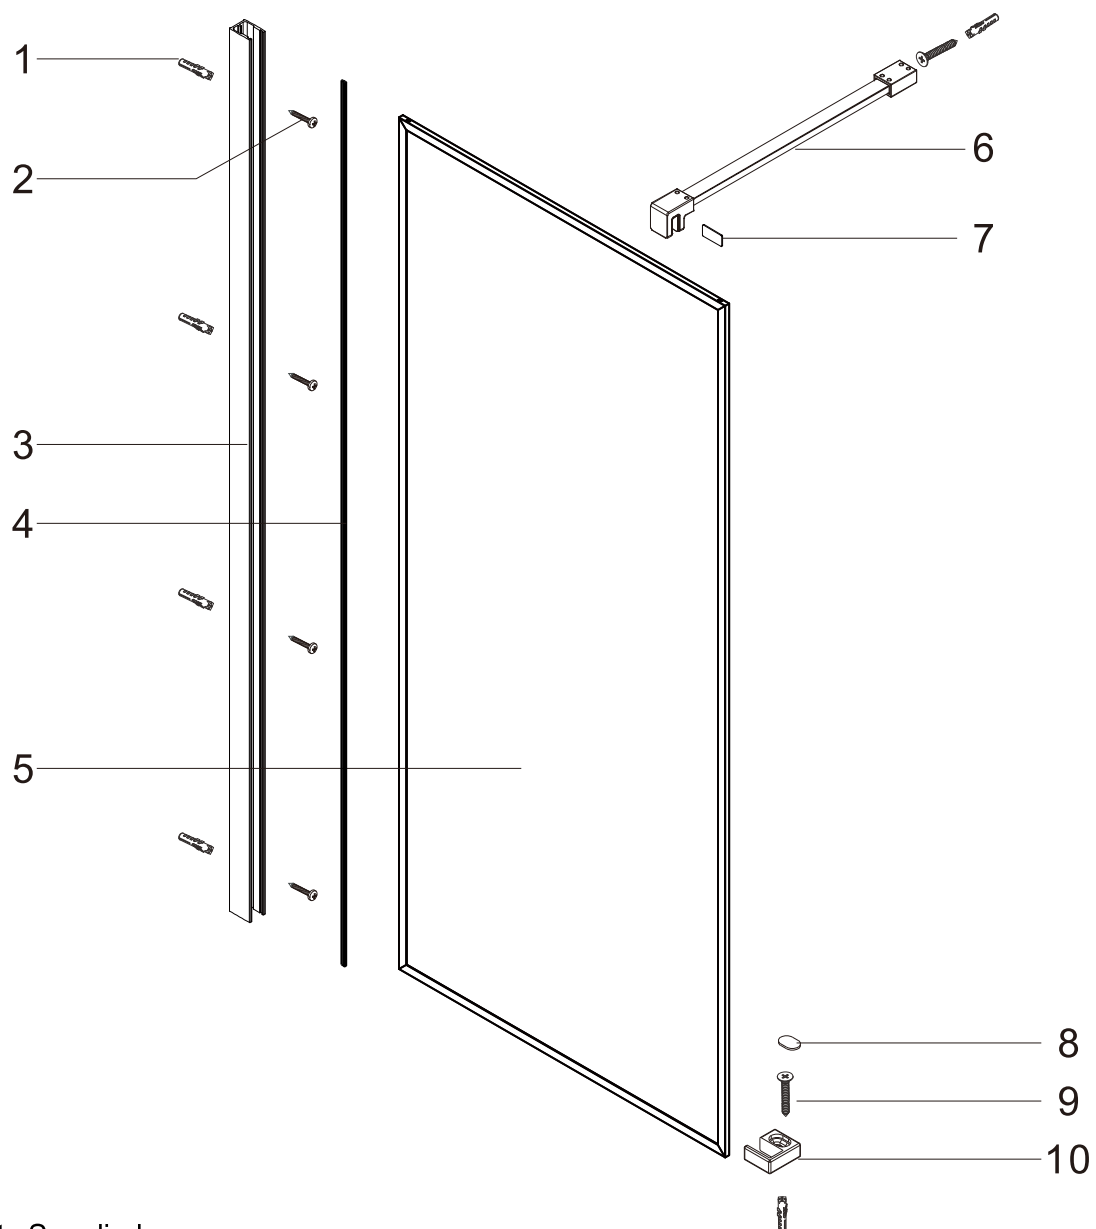

Parts Supplied


1 x6 	2 x4 	3 x1 	4 x1 	5 x1 
6 x1 	7 x1 	8 x1 	9 x2 	10 x1 
11 x1  2.5mm	12 x1 			

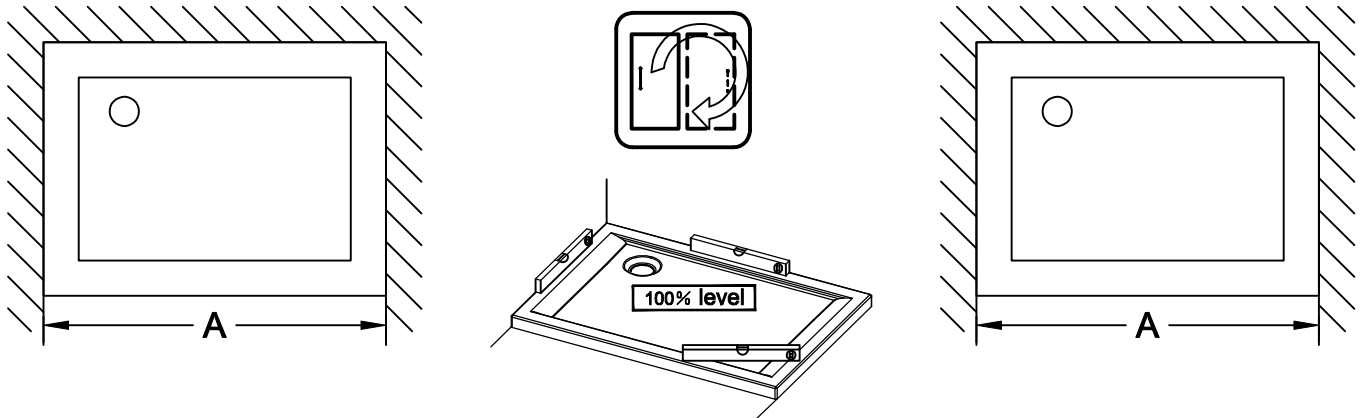


IMPORTANT - Installation site

1. Ensure the top surface of the shower tray on which the enclosure will be installed is level in every direction.
2. The tiles or other wall finishing should be effectively sealed at the tray edges.
3. Tiles should extend at least to the corners of the tray and a minimum of 2.1 metres from the top of the tray.


1

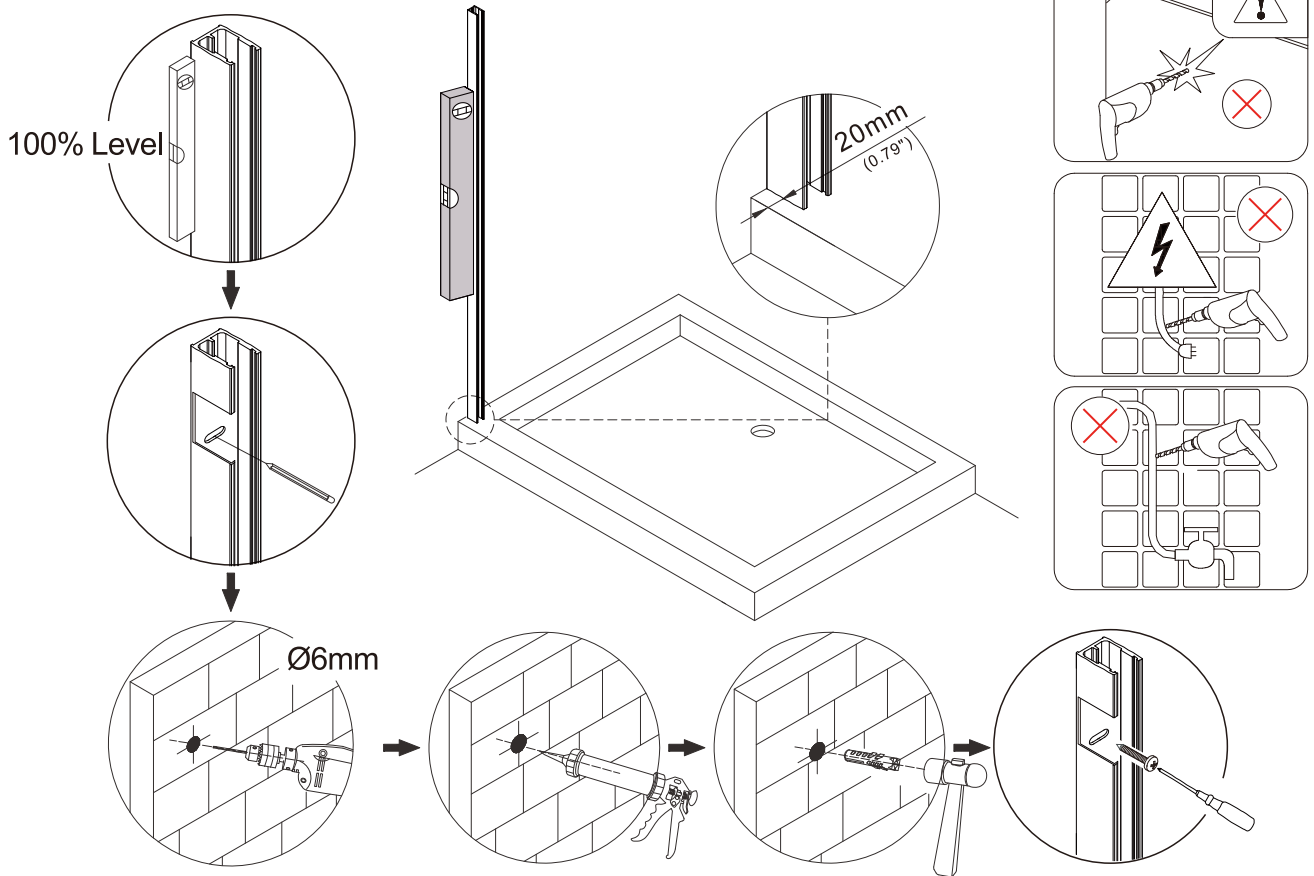

2

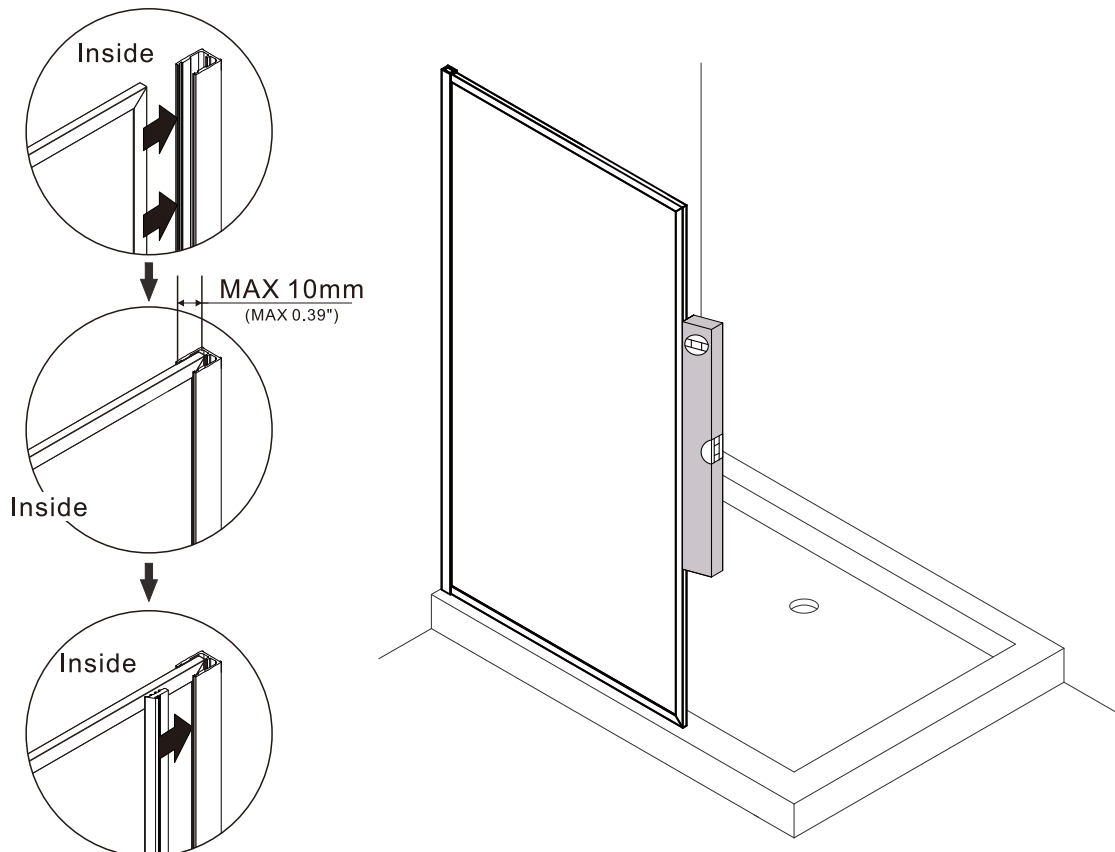


3

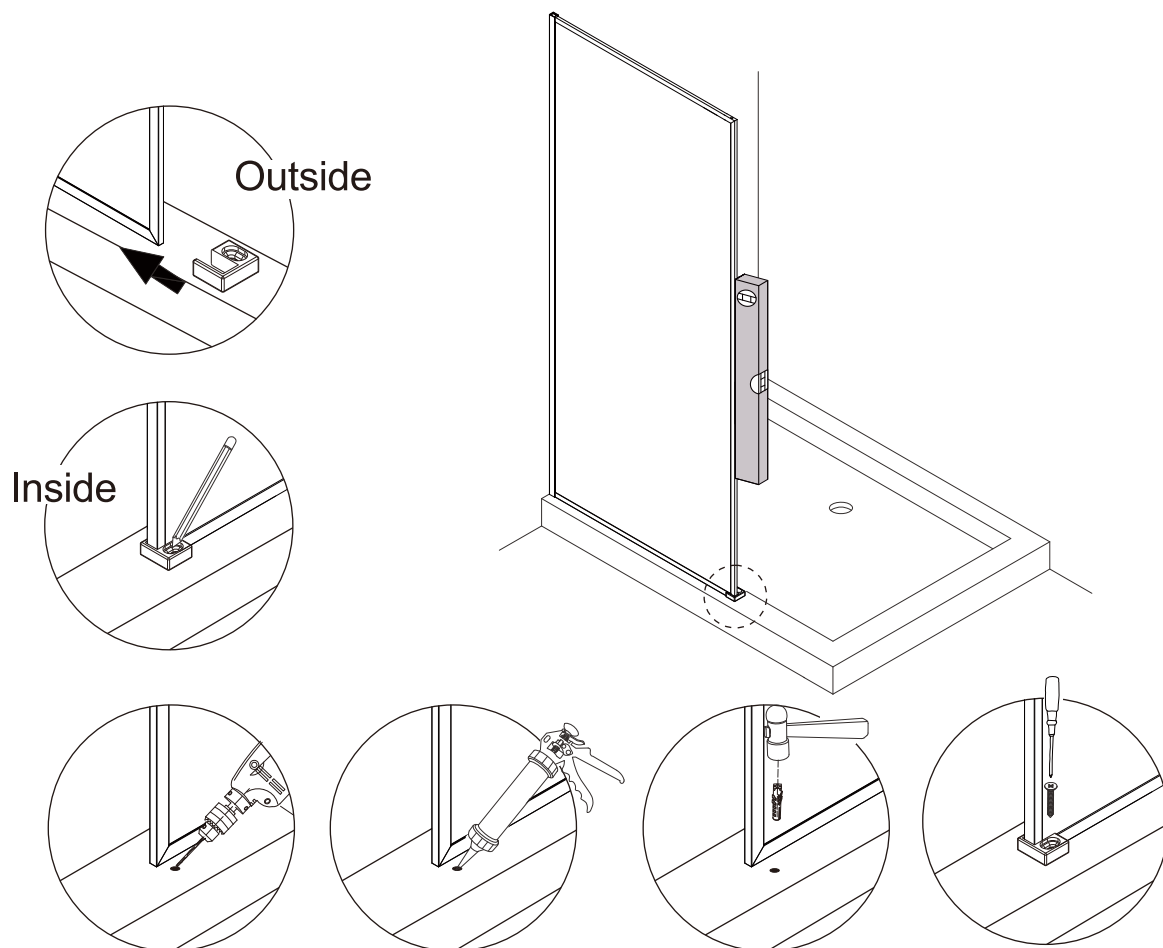


4

Optional Step - Recommended

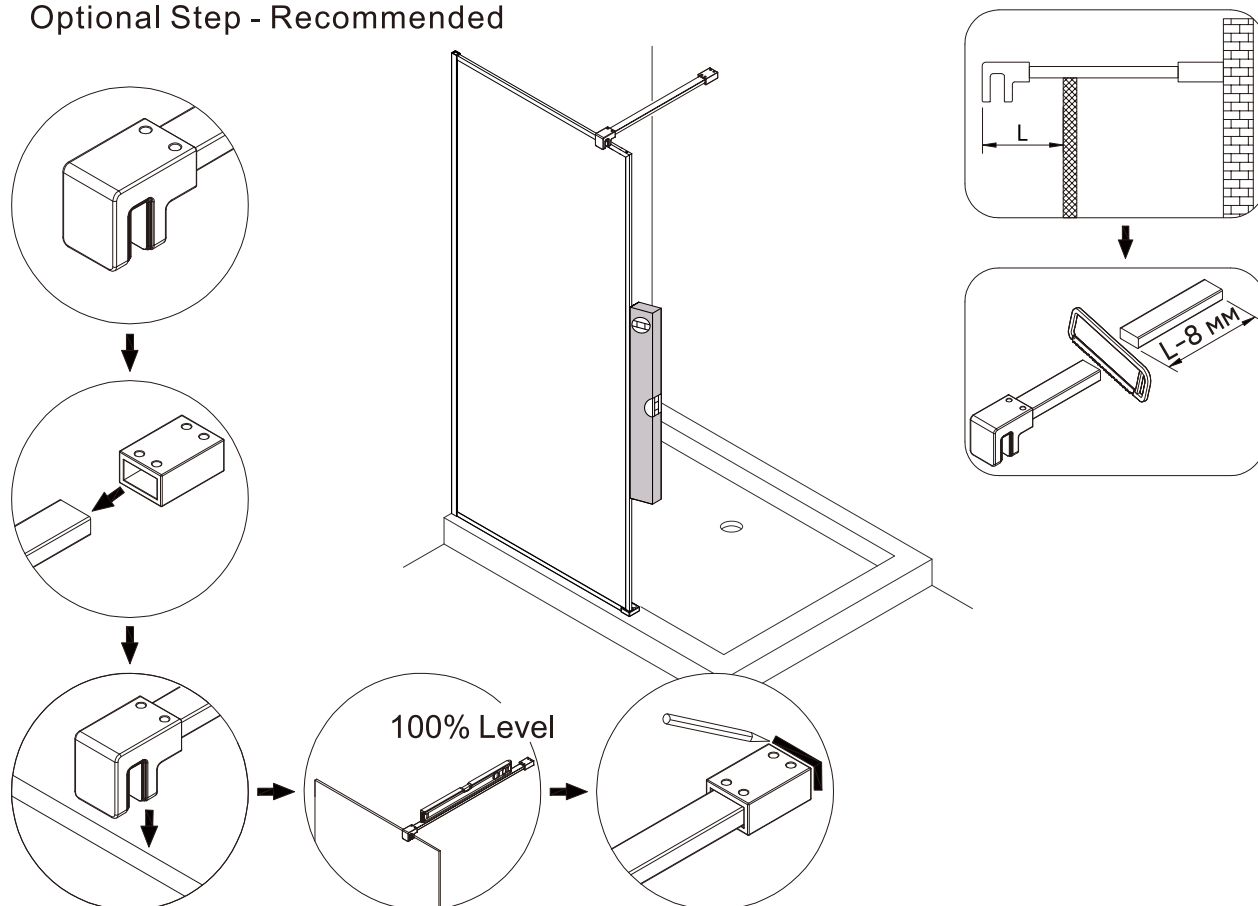

5 Optional Step - Recommended

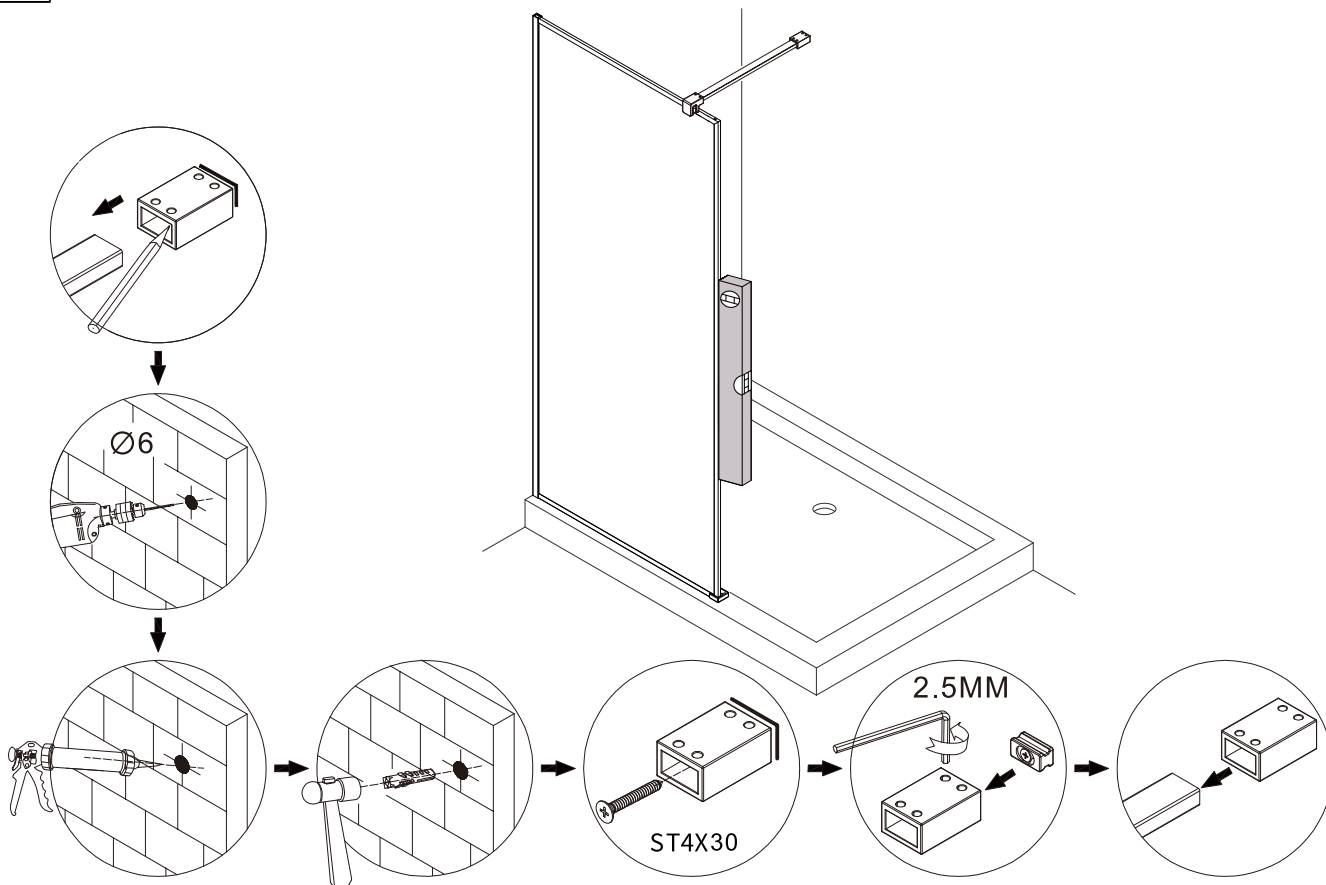

6 Optional Step - Recommended

