


ALCOVE BATHTUB WITH APRON

Installation Manual

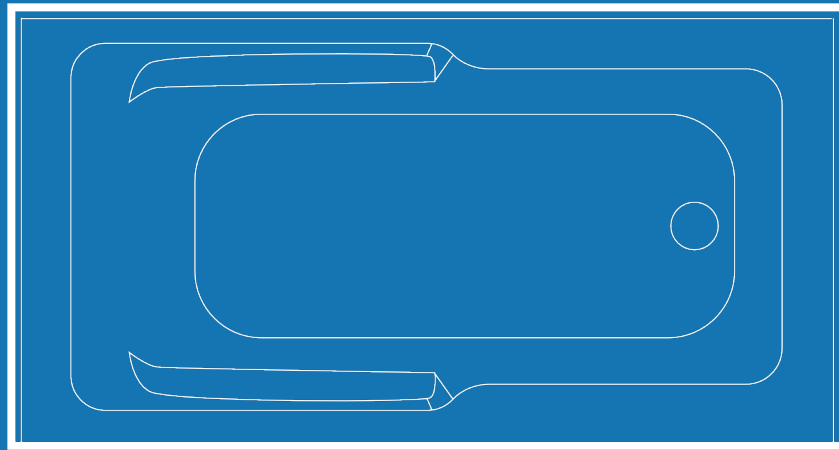

Document Type
Installation Manual

Product Category
Alcove Bathtub

Language
English

MODEL
Haven Collection

Important

- Read all instructions carefully before beginning installation. The step-by-step guidelines in the installation instructions are a general reference. Should there be any discrepancies, Sera Bathroom Designs cannot be held liable.
- It is strongly recommended that all Sera Bathroom Designs products are installed by a licensed professional.
- Non-compliance with these guidelines, plumbing, and building codes & requirements may void your warranty.

PRE-INSTALLATION & PREPARATION

⚠ Before You Begin

- Inspect product to ensure no damages have occurred during shipping.
- Observe all plumbing and building codes in accordance with your state/province and local requirements.
- All dimensions are nominal. Be sure to measure your bathtub prior to installation.
- Read installation and maintenance instructions thoroughly before installing. Be sure to use proper tools and always wear proper personal safety equipment for your protection.

🏠 Included Parts



Alcove
Bathtub



Screws



Support
bars

🔧 Suggested Tools & Materials




Safety
Glasses




Tape
Measure



Square

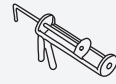

Caulk Gun

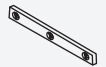

Level



Screwdriver



Utility
Knife



Sealant



Adhesive





Drop Cloth

1 ROUGH IN

⚠ IMPORTANT

Rough plumbing must be pre-installed by a certified plumber before proceeding.

- Verify alignment of floor drain and bathtub drain at final installation location.
- Ensure wall studs are properly positioned.
- Check that studs are flush and square with installation area.
- Confirm rough-in dimensions match bathtub specifications.

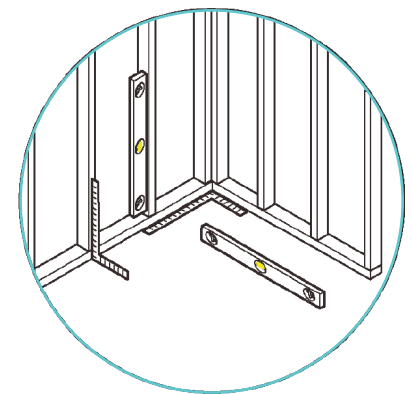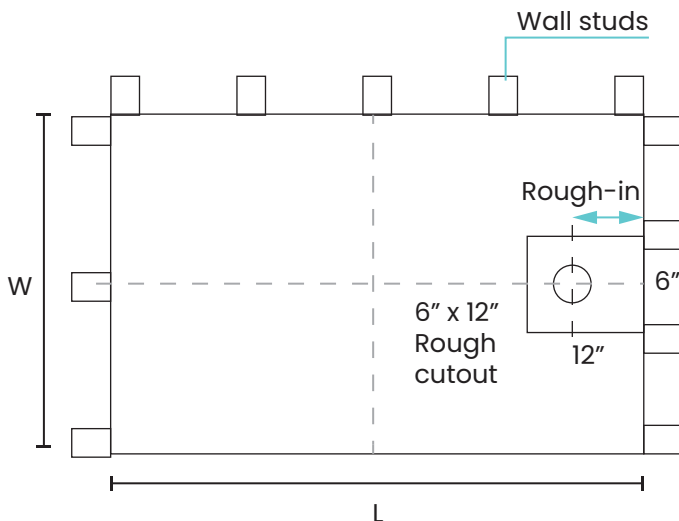

Studs must be
flush and square

i Key Requirements


- Wall studs must be flush and square.
- Drain alignment is critical.
- Verify all dimensions before proceeding.

2 ATTACH SUPPORT BARS (IF PROVIDED)


CAUTION

Protect bathtub surface during this step to prevent scratches or damage.

- Place drop cloth on flat, stable surface.
- Carefully flip tub upside-down onto drop cloth.
- Ensure tub is stable before proceeding.
- Locate pre-drilled holes in apron.
- Line up support bars with holes.
- Cut and remove zip ties (if present).
- Insert screws through support bars into pre-drilled holes.
- Tighten screws securely.

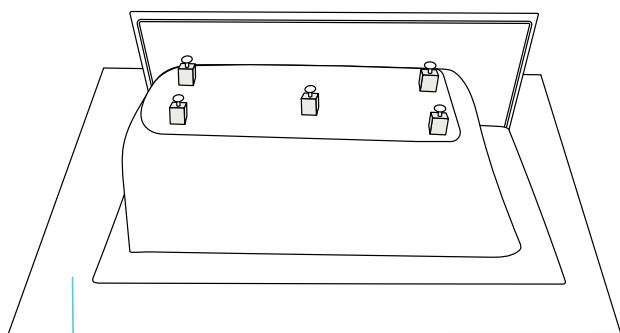


Drop Cloth

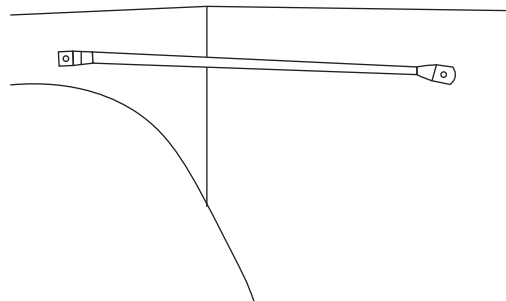

2A TROUBLESHOOTING ALIGNMENT


1

- If holes do not line up properly:

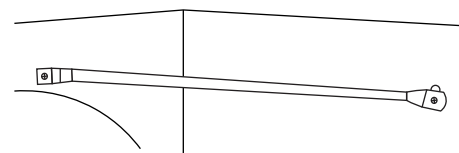


2

- Loosen (DO NOT REMOVE) hinge screws.
- Reposition the support bar for proper alignment.

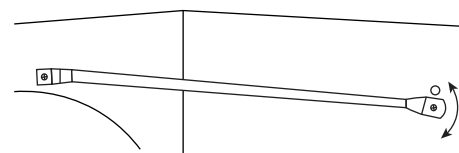

3

- Re-tighten hinge screws.
- Secure bar to apron with provided screws.

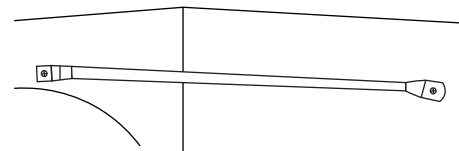


WARNING


Do not force screws if holes are misaligned. Follow troubleshooting steps above.

3 ENSURE TUB IS LEVEL

- Place level across apron bottom.
- Check level at adjustable feet locations.
- Adjust feet height as needed to achieve level.

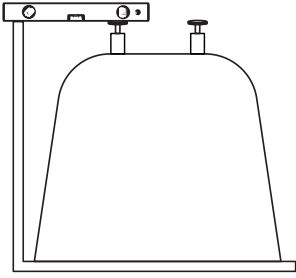

- Carefully flip tub upright.
- Reverify tub is level in final position.

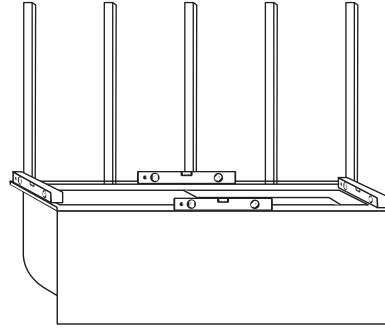


✓ VERIFICATION

Tub must be level in all directions before proceeding to mounting.

4 MARK AND PRE-DRILL HOLES

- Position tub in final installation location.
- Mark wall stud locations on top flange.
- Pre-drill Ø5mm holes through flange at stud locations.
- If stud is not flush with flange, use shims to fill gap.

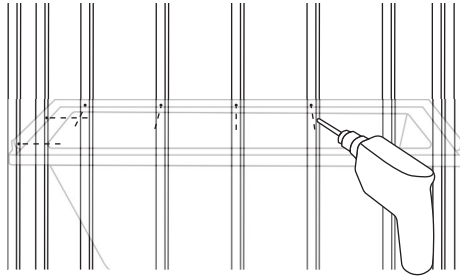


! IMPORTANT

Proper stud alignment is critical for secure installation. Use shims where necessary.

5 SCREW INTO PLACE

- Prepare and lay mortar bed.
- Carefully lower tub into final position.
- Secure tub by screwing through pre-drilled flange holes into wall studs.
- Stand inside tub on drop cloth while tightening screws to press tub into mortar bed.
- Ensure all screws are tight and secure.

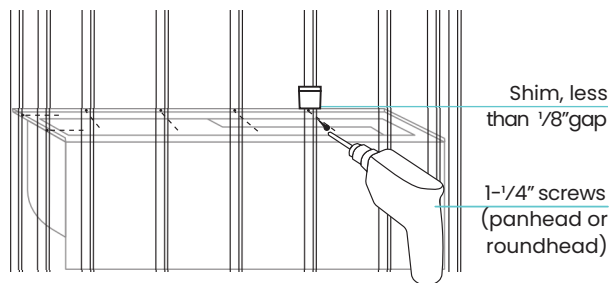

! CAUTION

Use drop cloth when standing in tub to prevent damage to the surface.

-



-

INSTALLER NOTES

Installation Notes

Installer Name

Date _____

Signature