




# INSTRUCTION

**BOAK-SC-NFIO-KD**

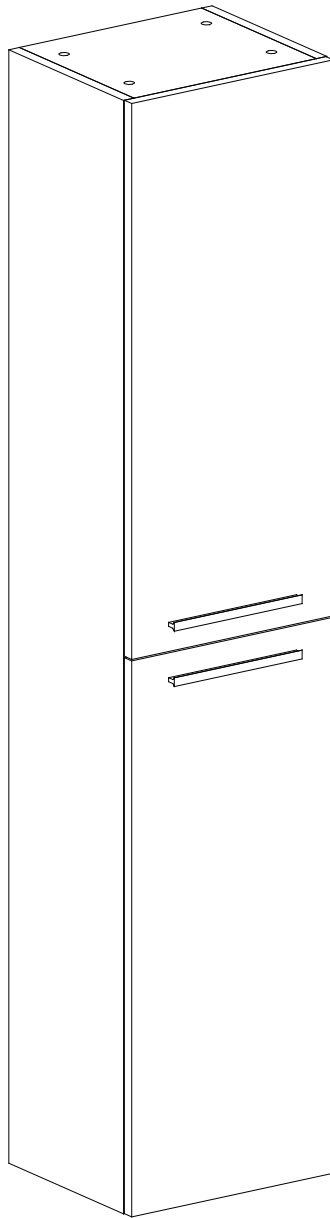


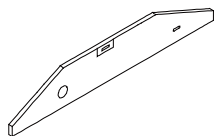


Spirit level




Tape measure  
(3m~5m)

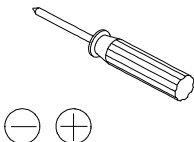

Screwdriver

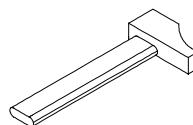

Hammer

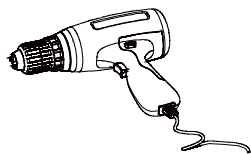


Electric drill





Drill bit  
(Ø8)




Pencil

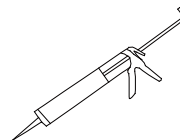


Silicone

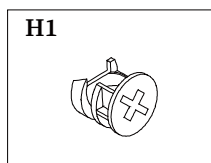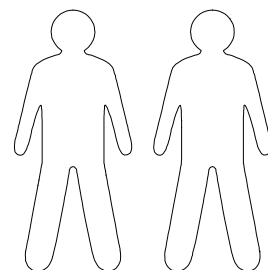


16\*

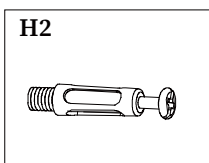


16\*

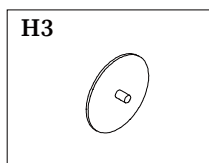


16\*

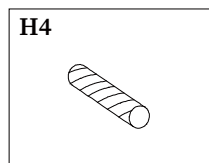


28\*φ8\*30

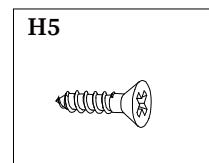


16\*φ4\*16

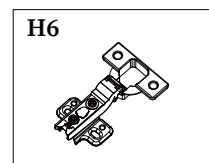


4\*

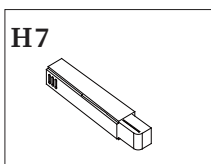


2\*

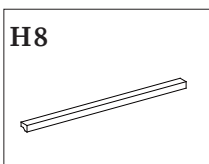


2\*

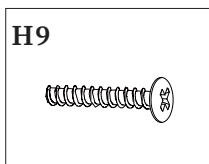


4\*φ4\*24

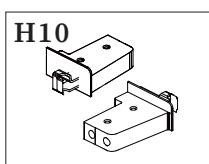


2\*

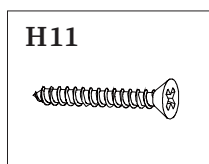


8\*Ø4x28

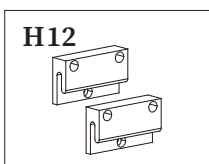



1\*

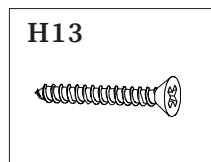



6\*Ø4x50

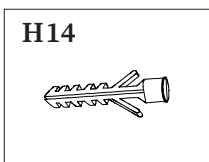


6\*Ø8x40

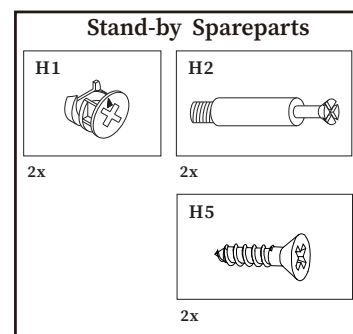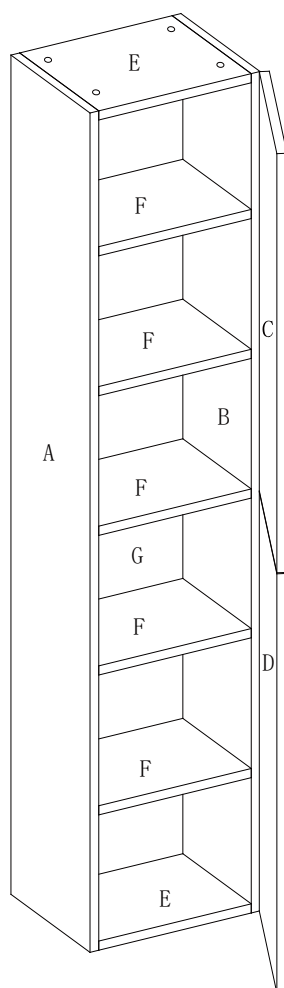

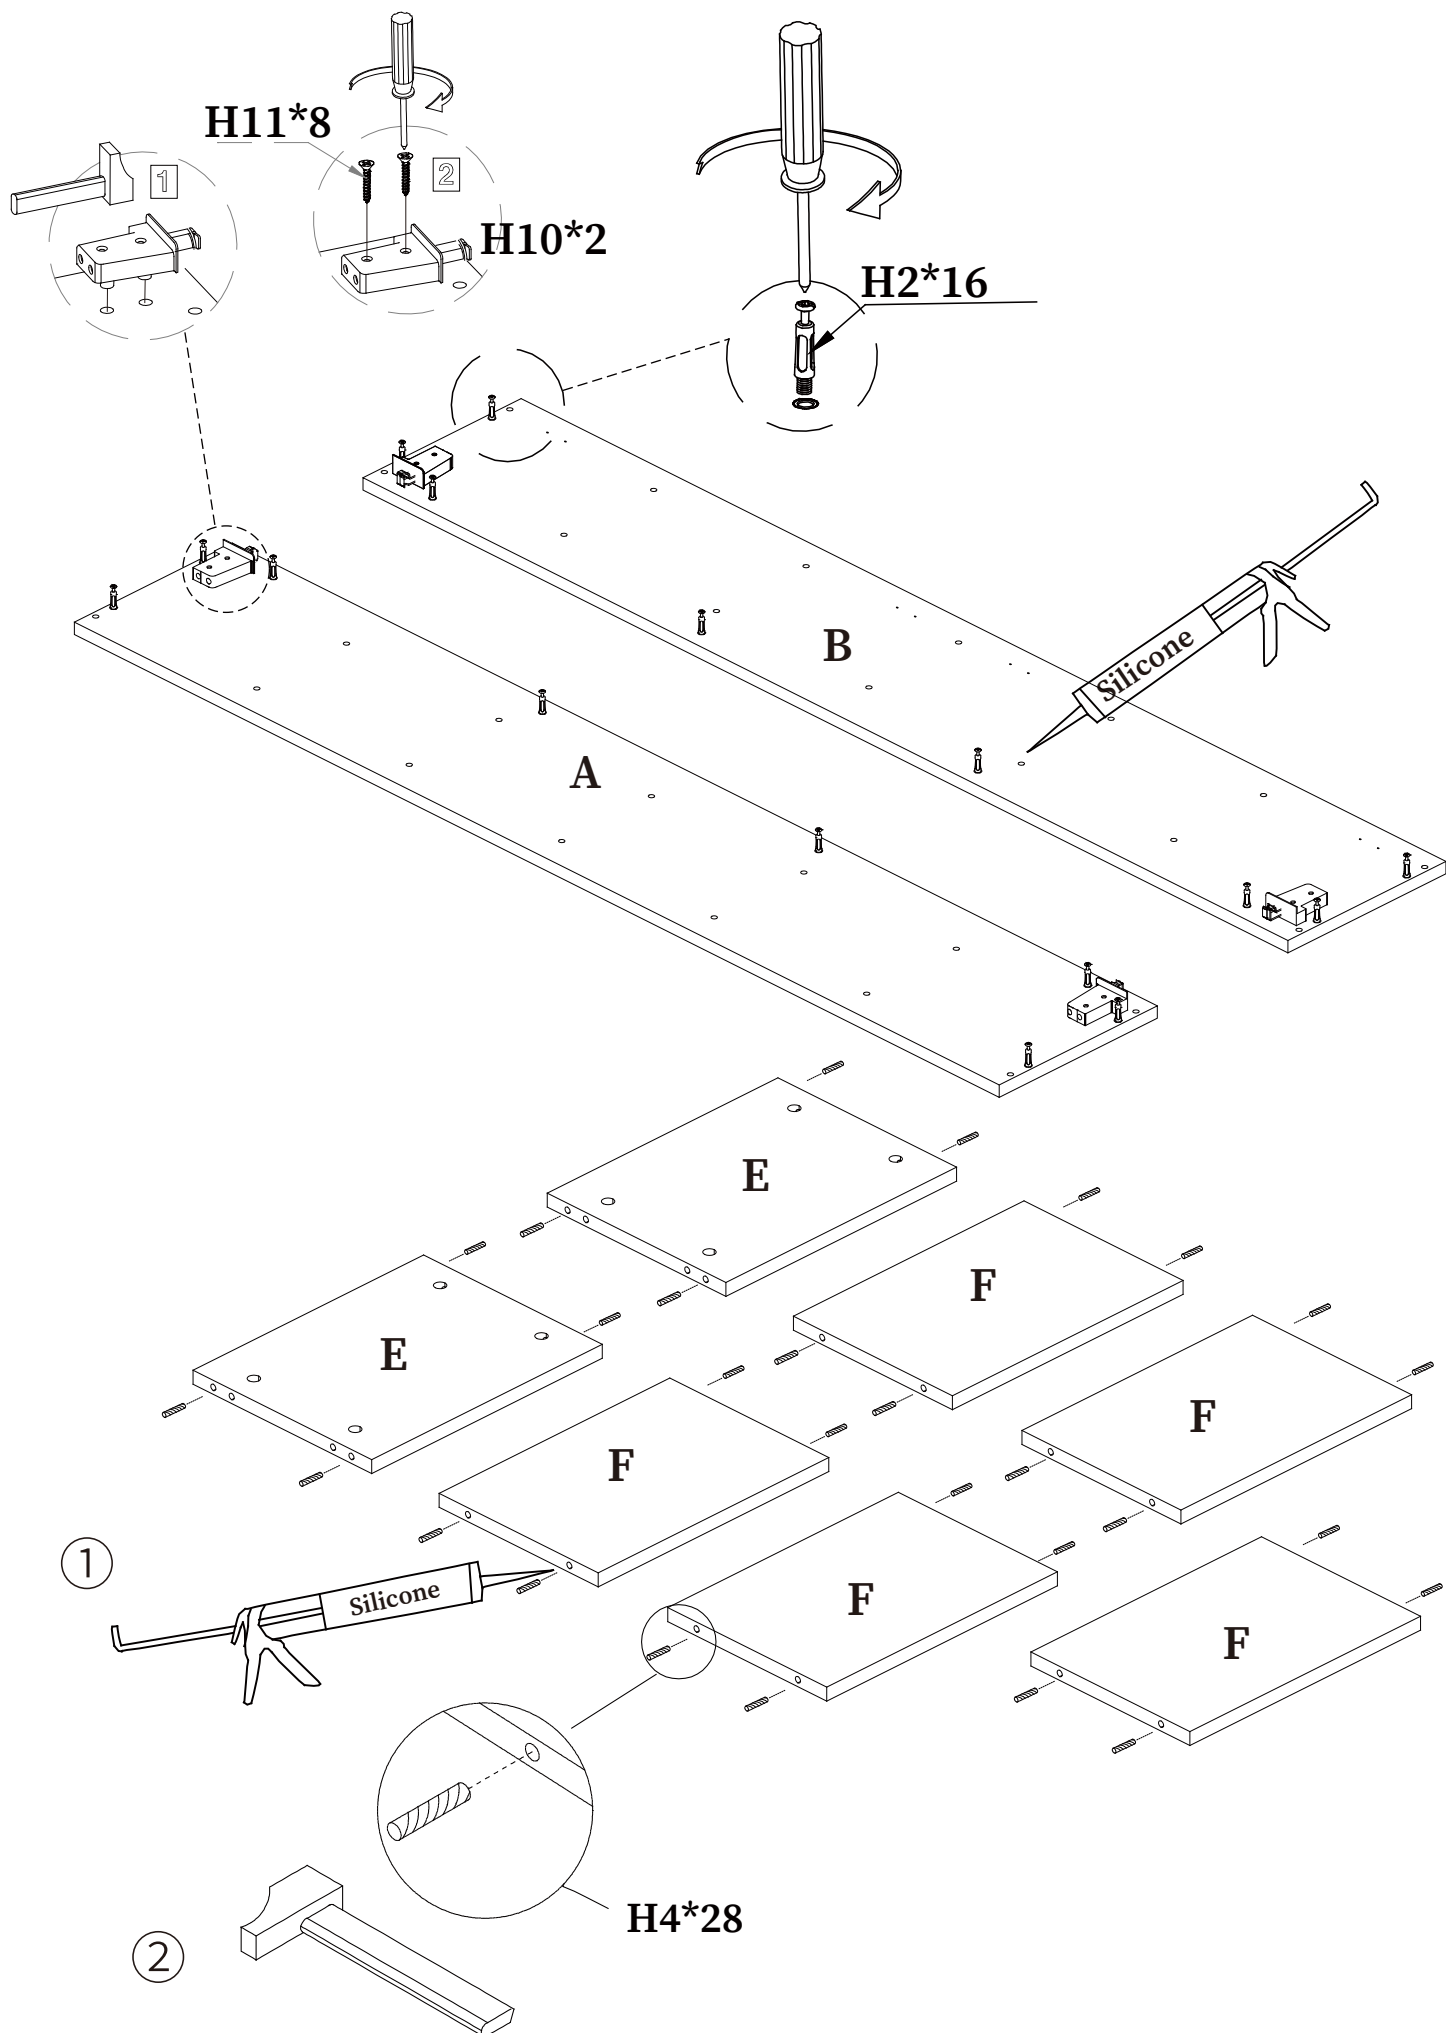

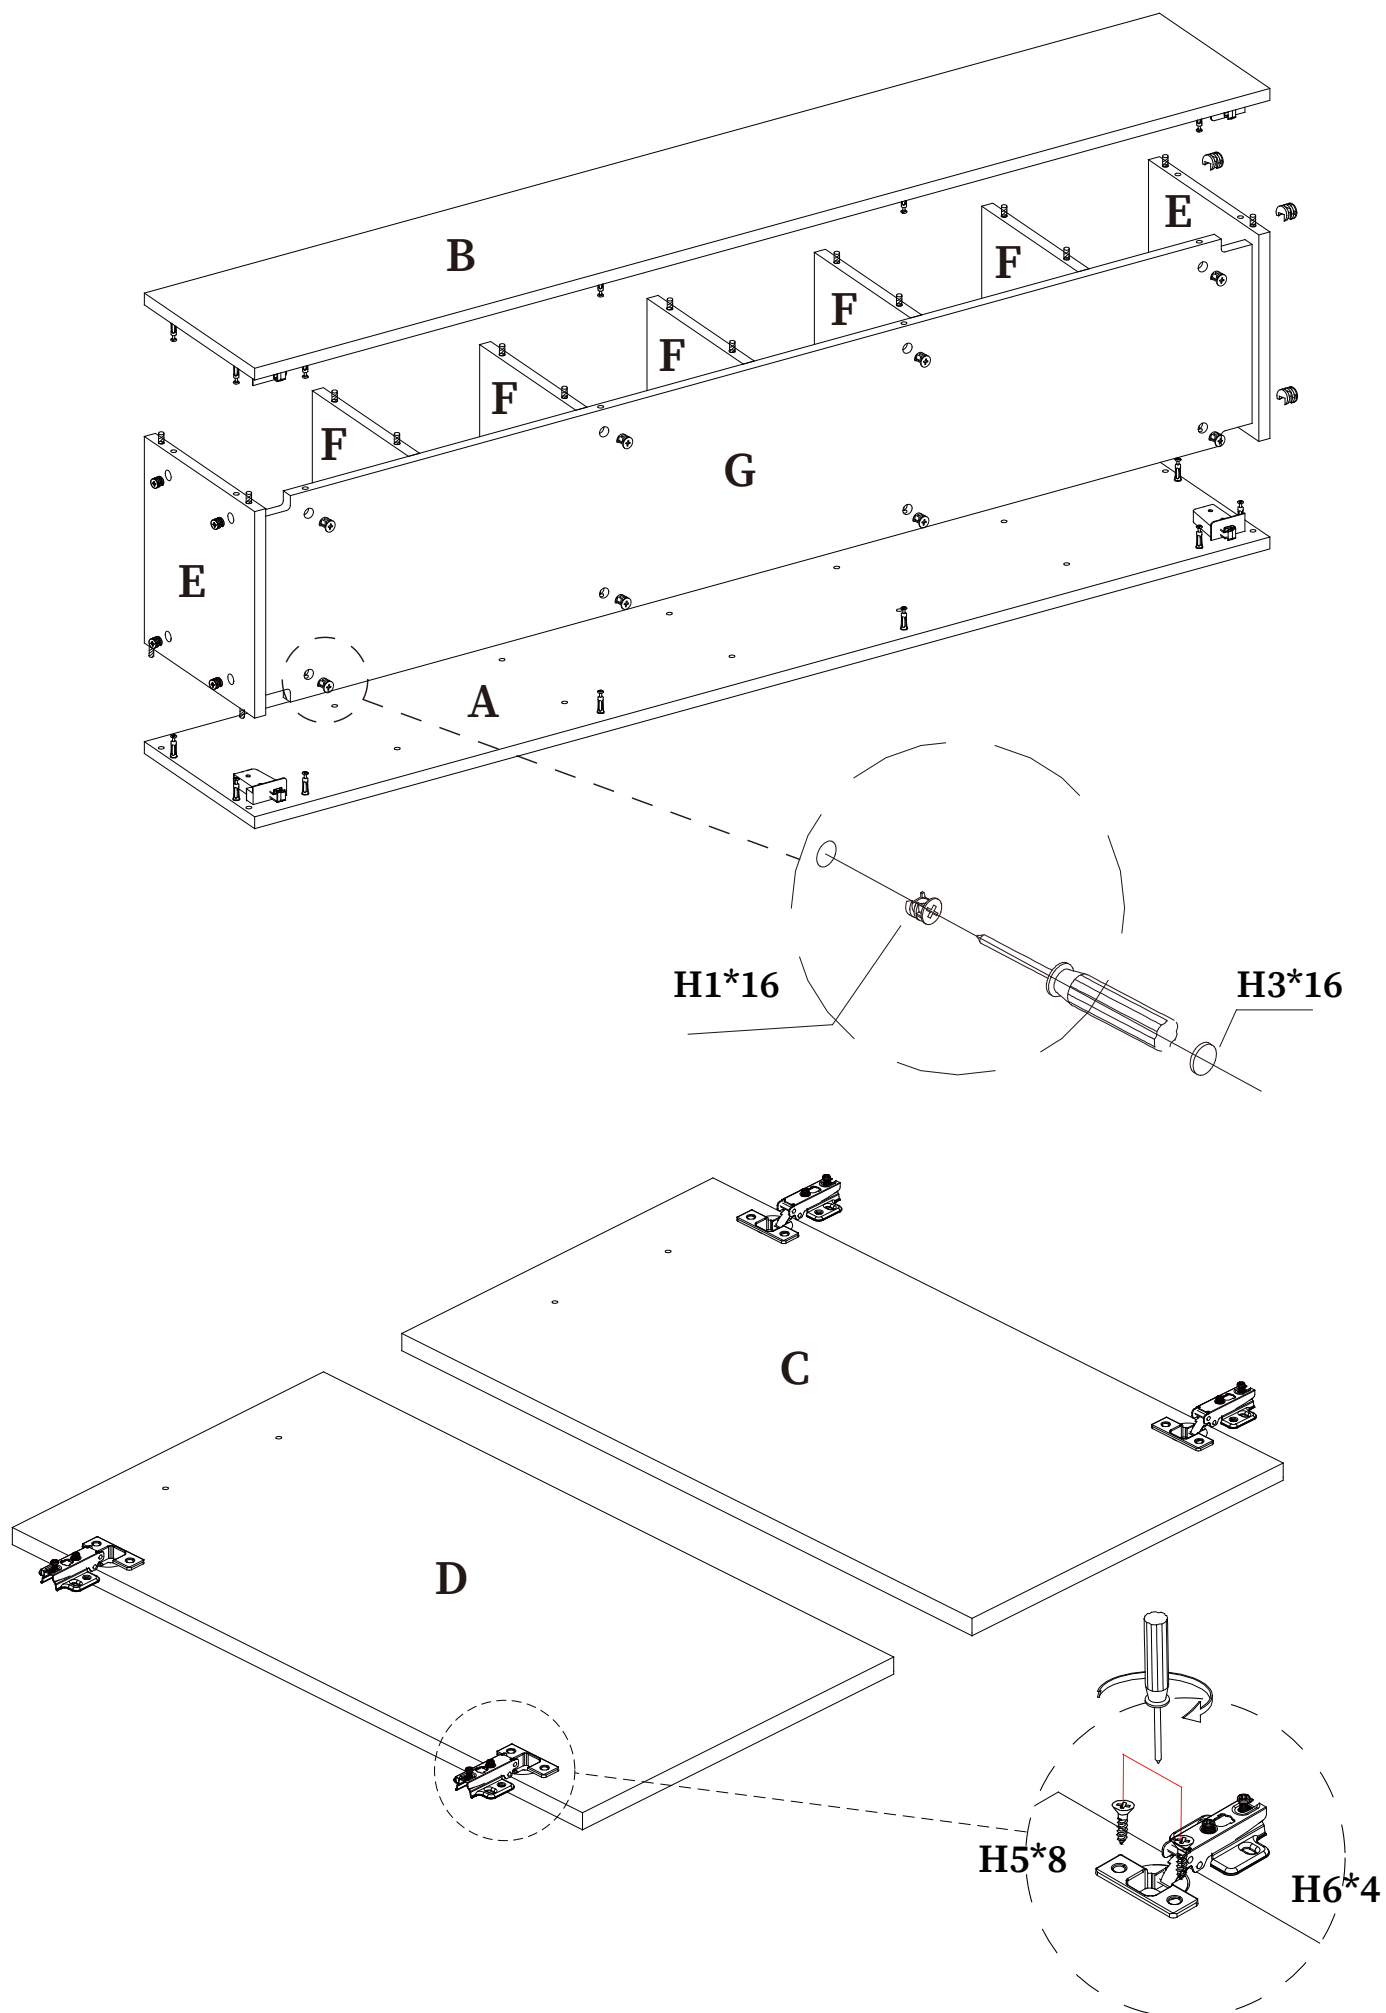

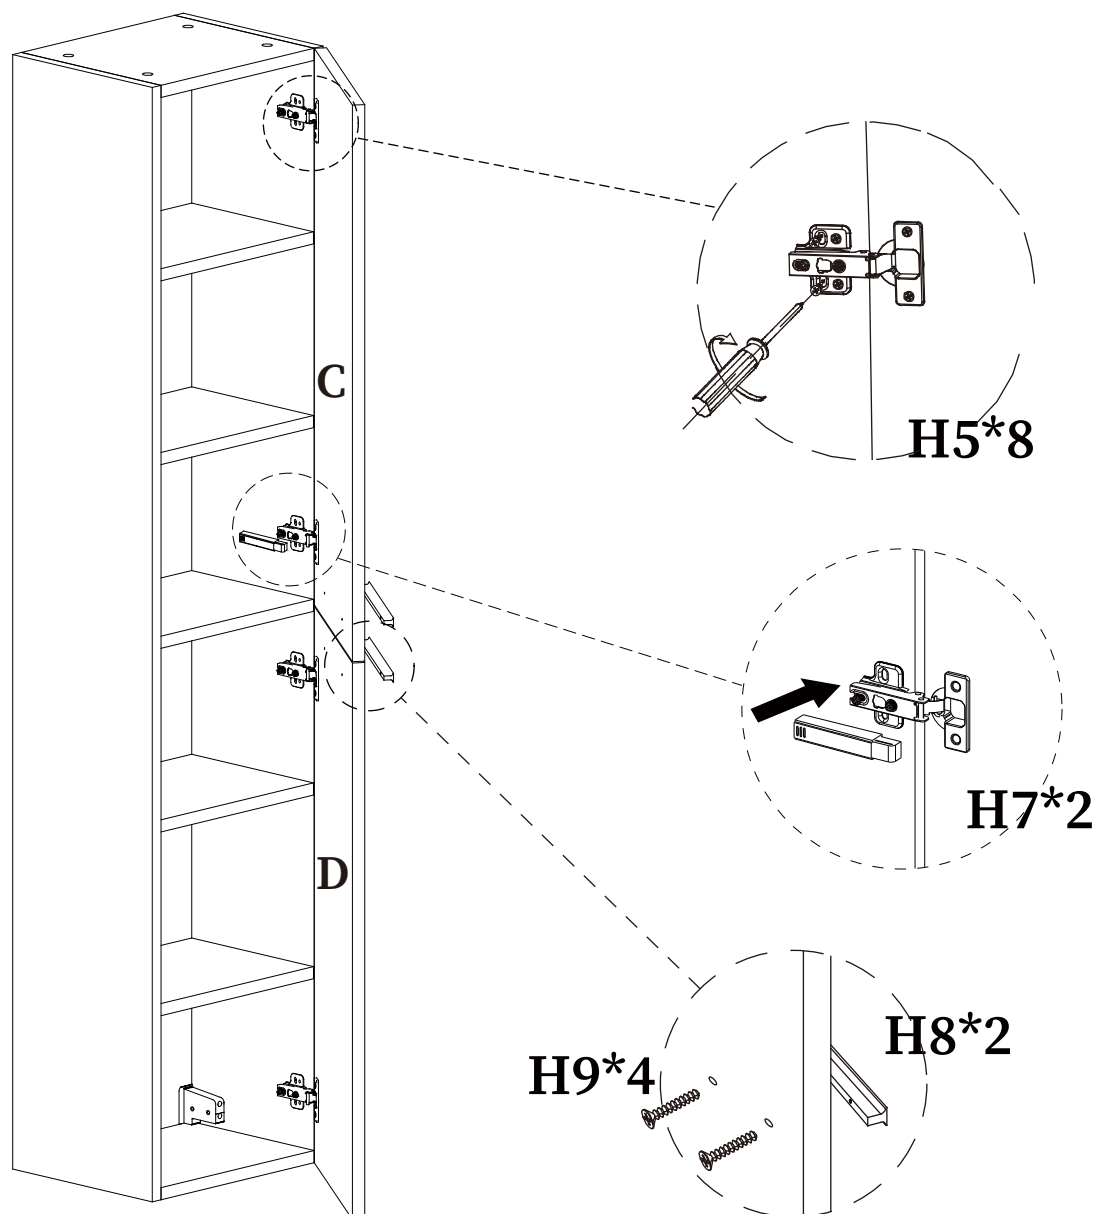

## REGLAGES DES PORTES

