




INSTRUCTION

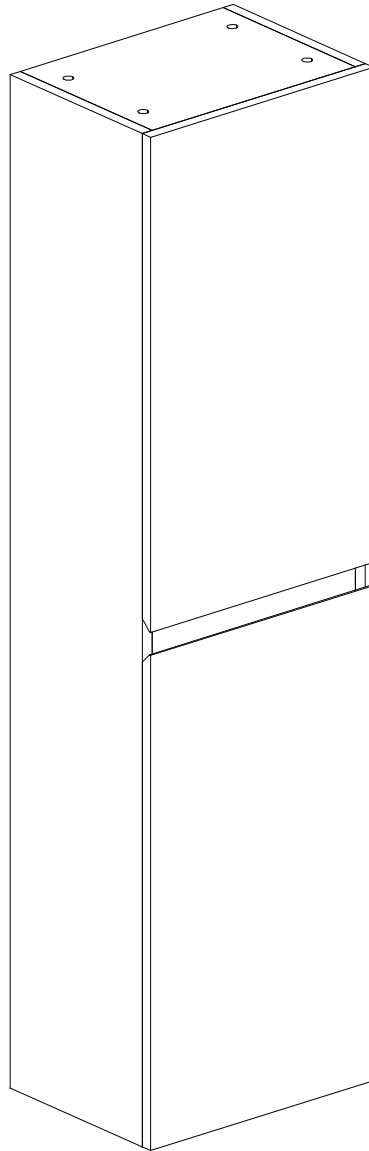


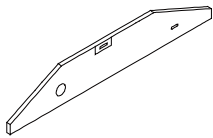


Spirit level





Tape measure
(3m~5m)

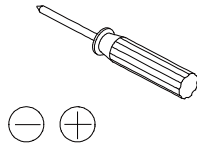

Screwdriver

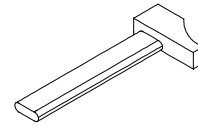

Hammer

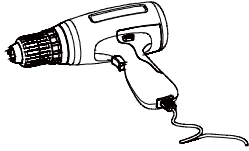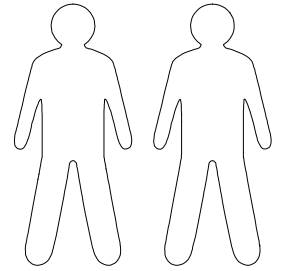


Electric drill




Drill bit
(Ø8)




Pencil

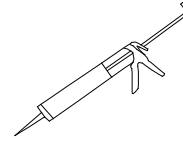


Silicone

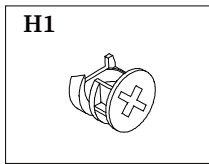


16*

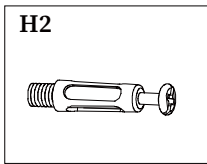


16*

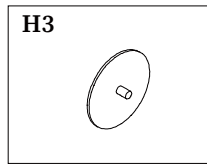


16*

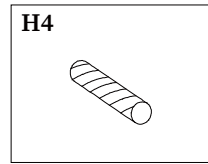


28*φ8*30

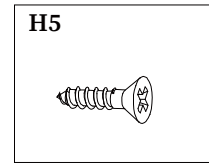


24*φ4*16

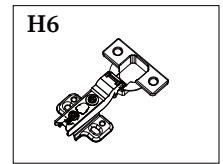


4*

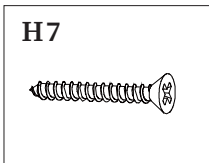



5*Ø4x28

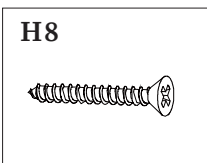



6*Ø4x50


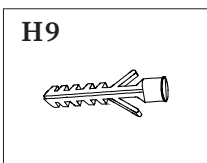


6*Ø8x40

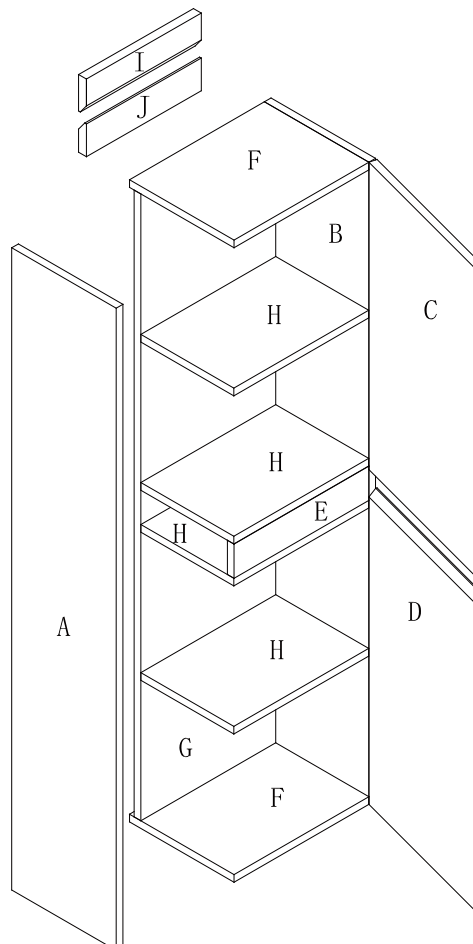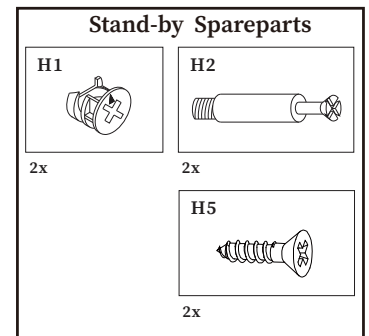

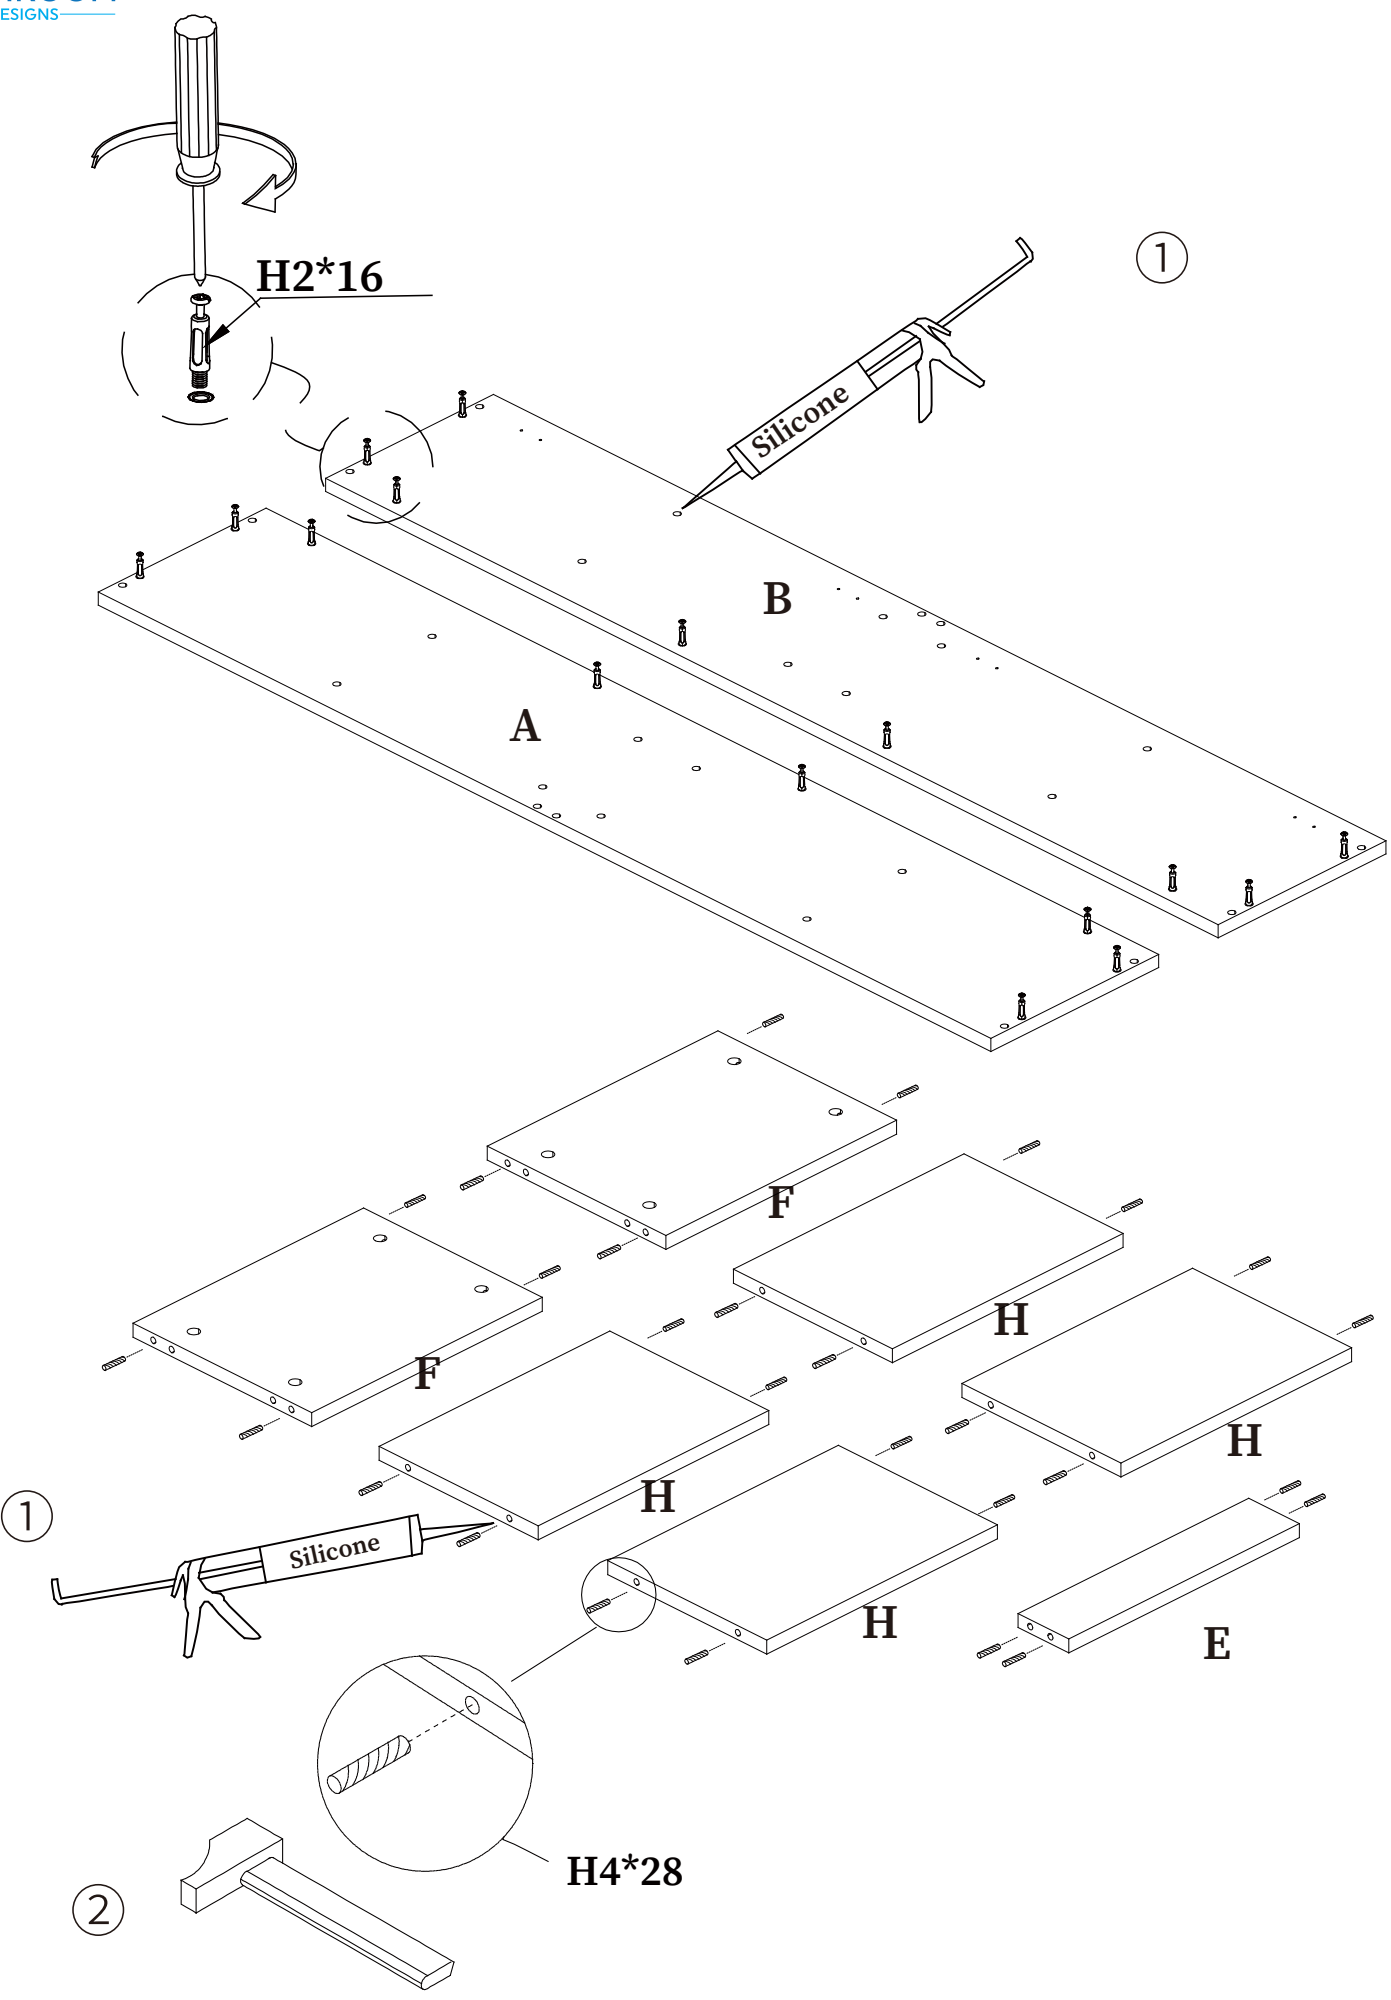

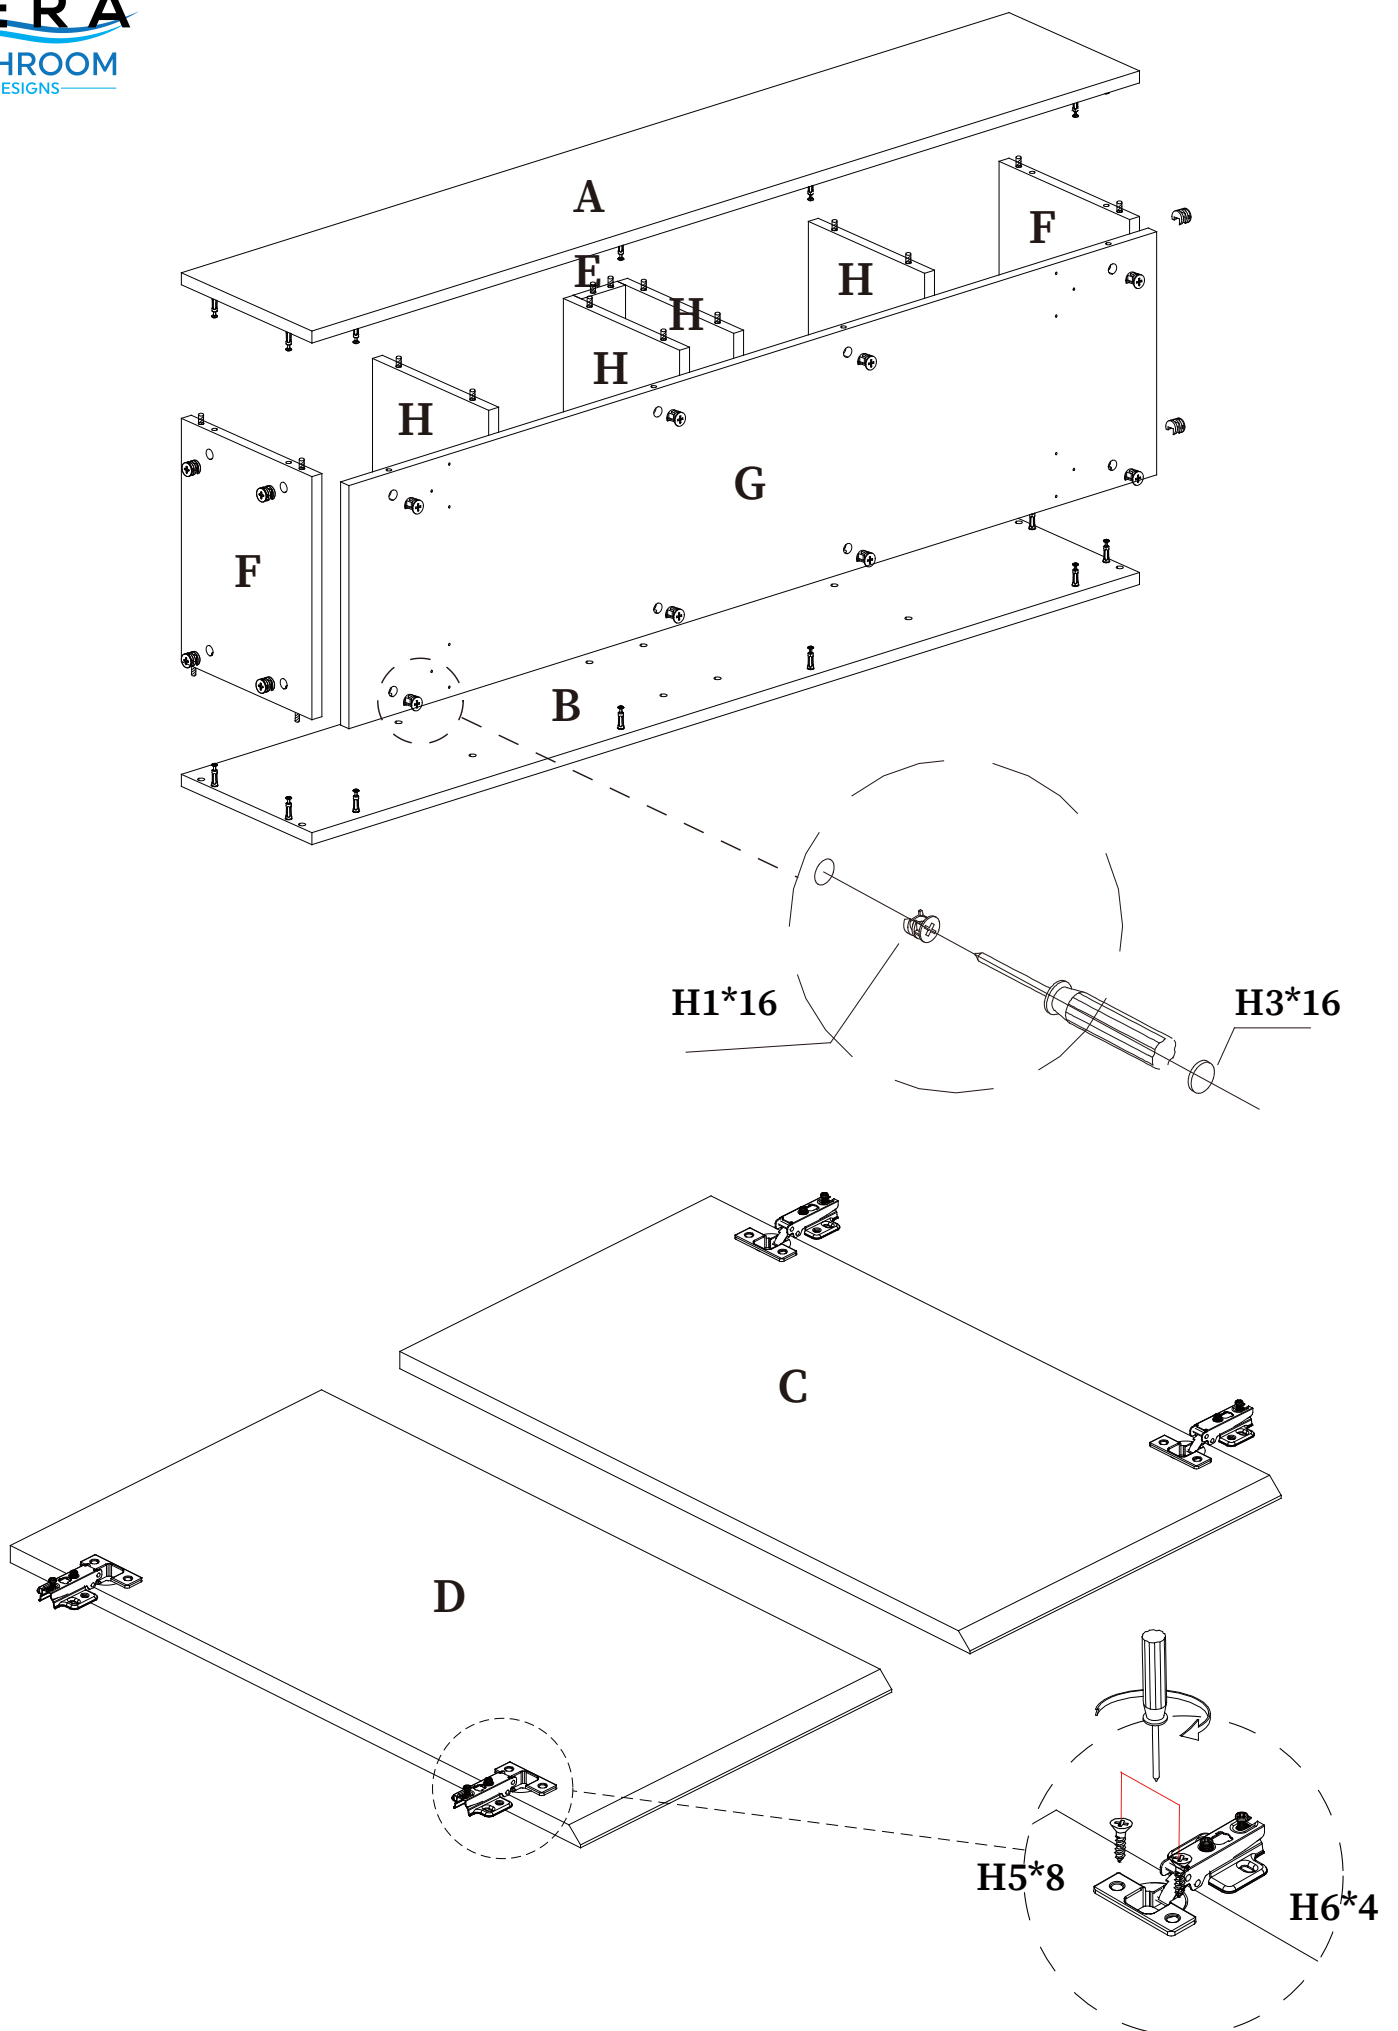

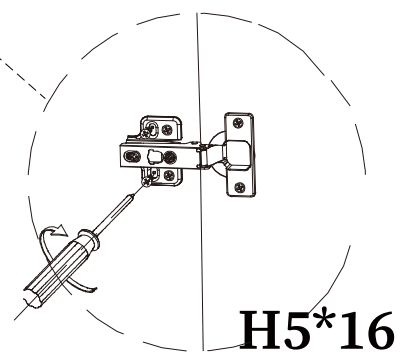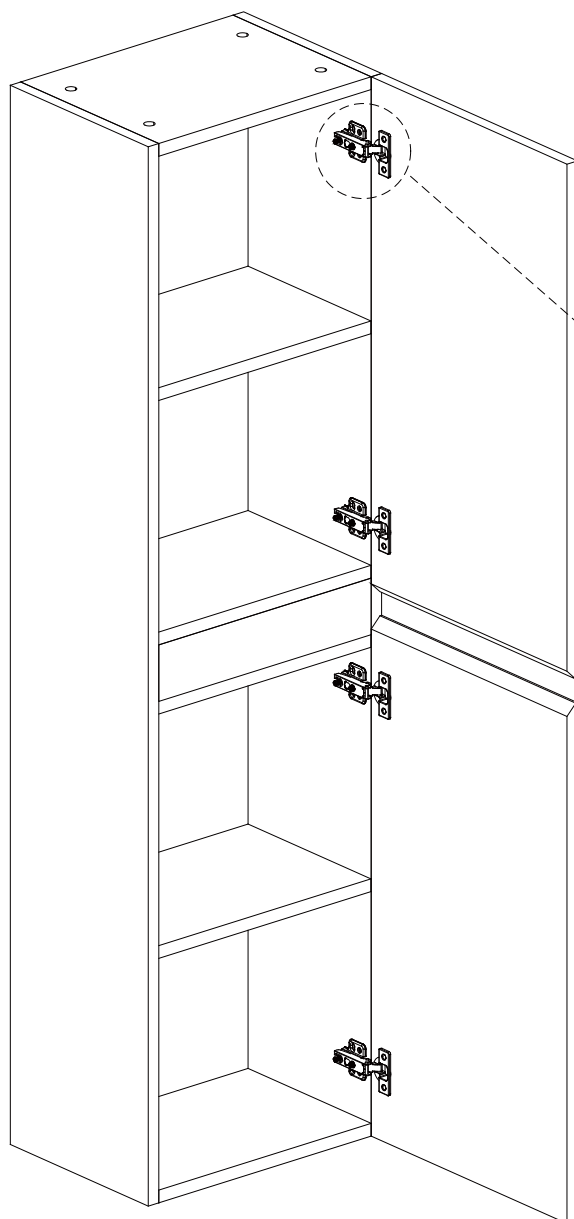

REGLAGES DES PORTES

