



# INSTRUCTION

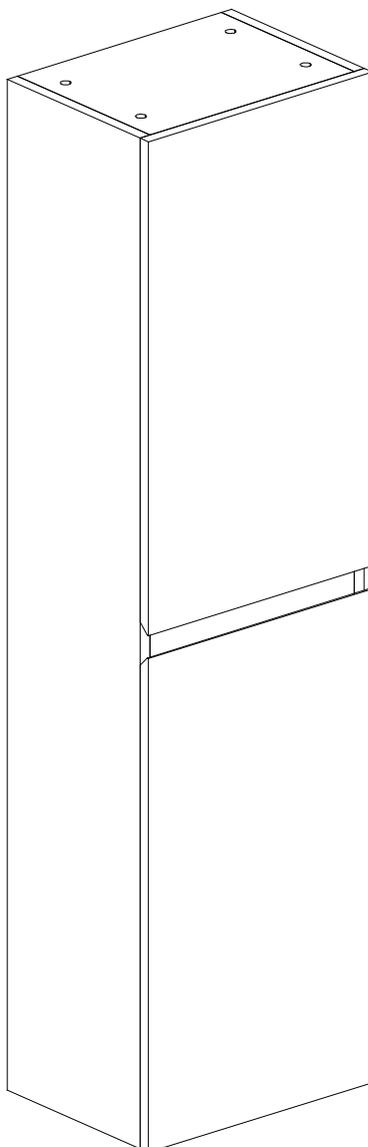


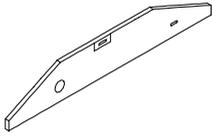


Spirit level





Tape measure  
(3m~5m)

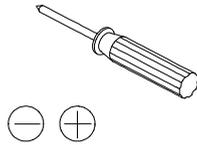

Screwdriver

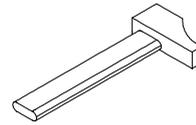

Hammer

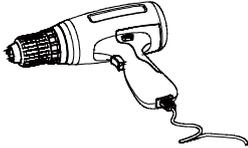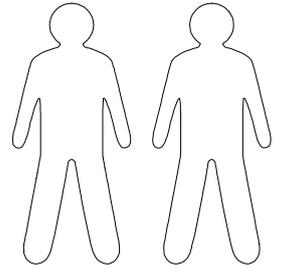


Electric drill




Drill bit  
(Ø8)



Pencil

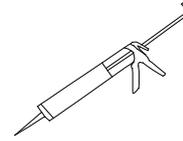


Silicone

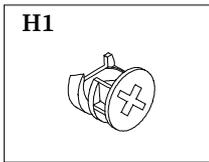


H1

16\*

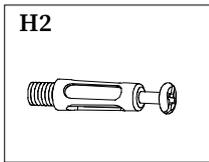


H2

16\*

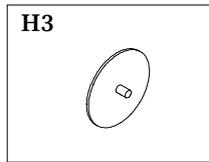


H3

16\*

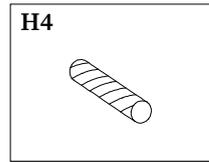


H4

28\*φ8\*30

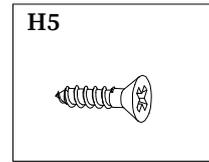


H5

24\*φ4\*16

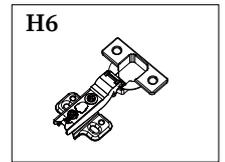


H6

4\*

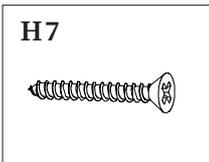


H7

5\*Ø4x28

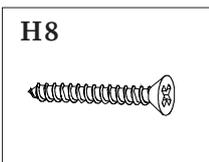

H8

6\*Ø4x50

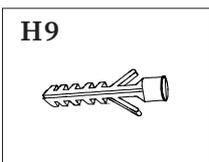


H9


6\*Ø8x40

**Stand-by Spareparts**


<p>H1</p> <p>2x</p>	<p>H2</p> <p>2x</p>
<p>H5</p> <p>2x</p>	


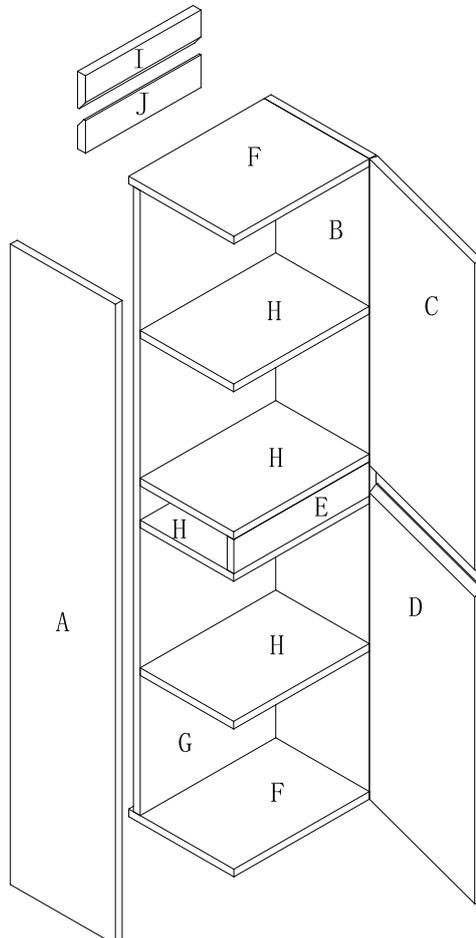


**1**

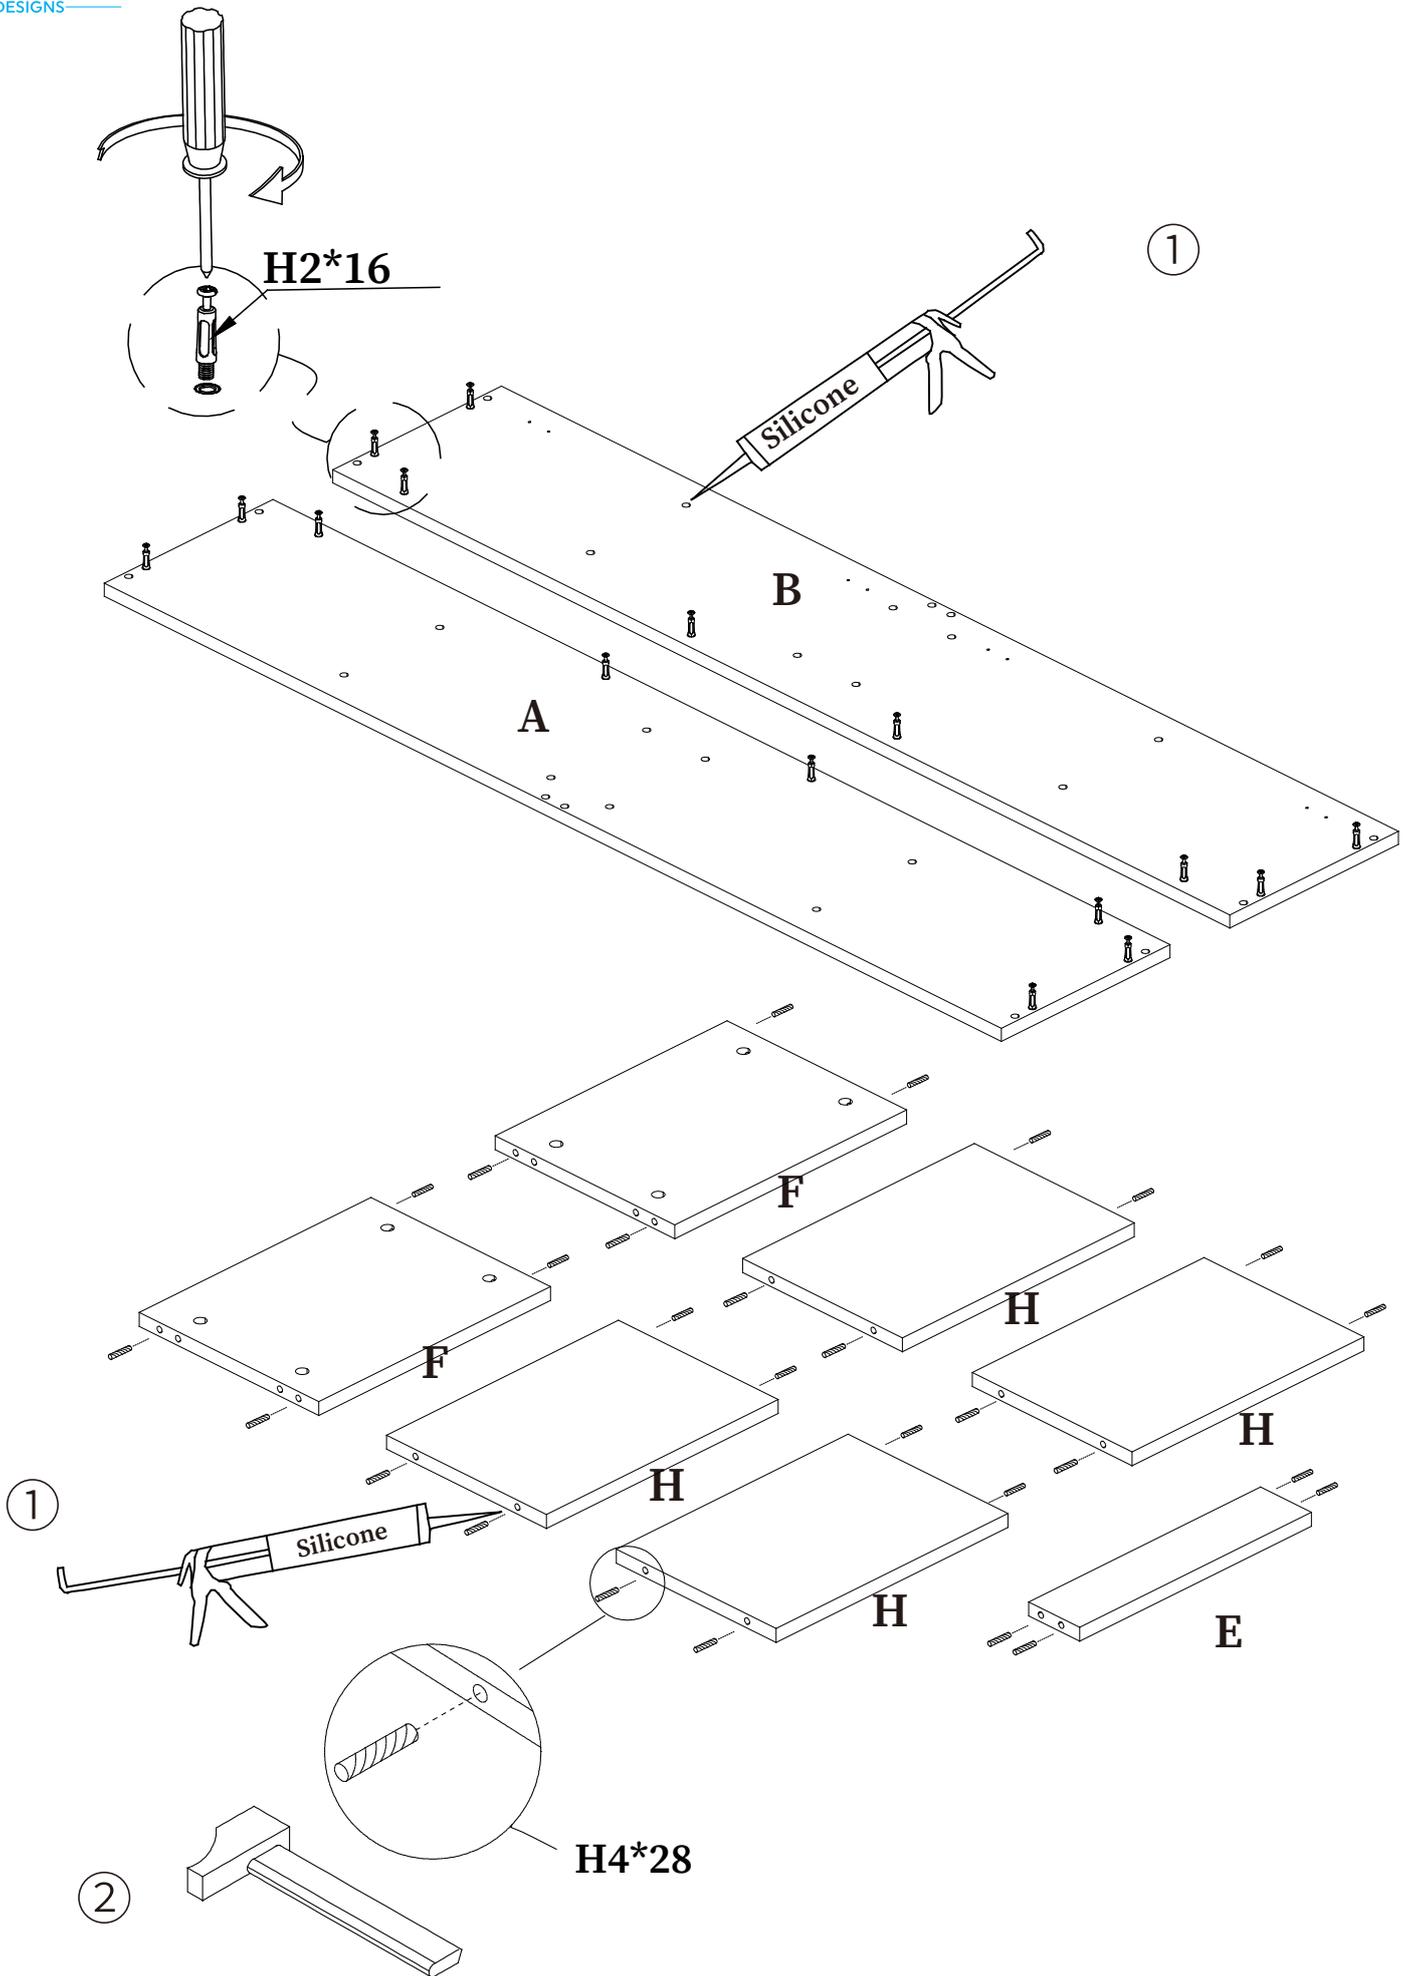

**2**

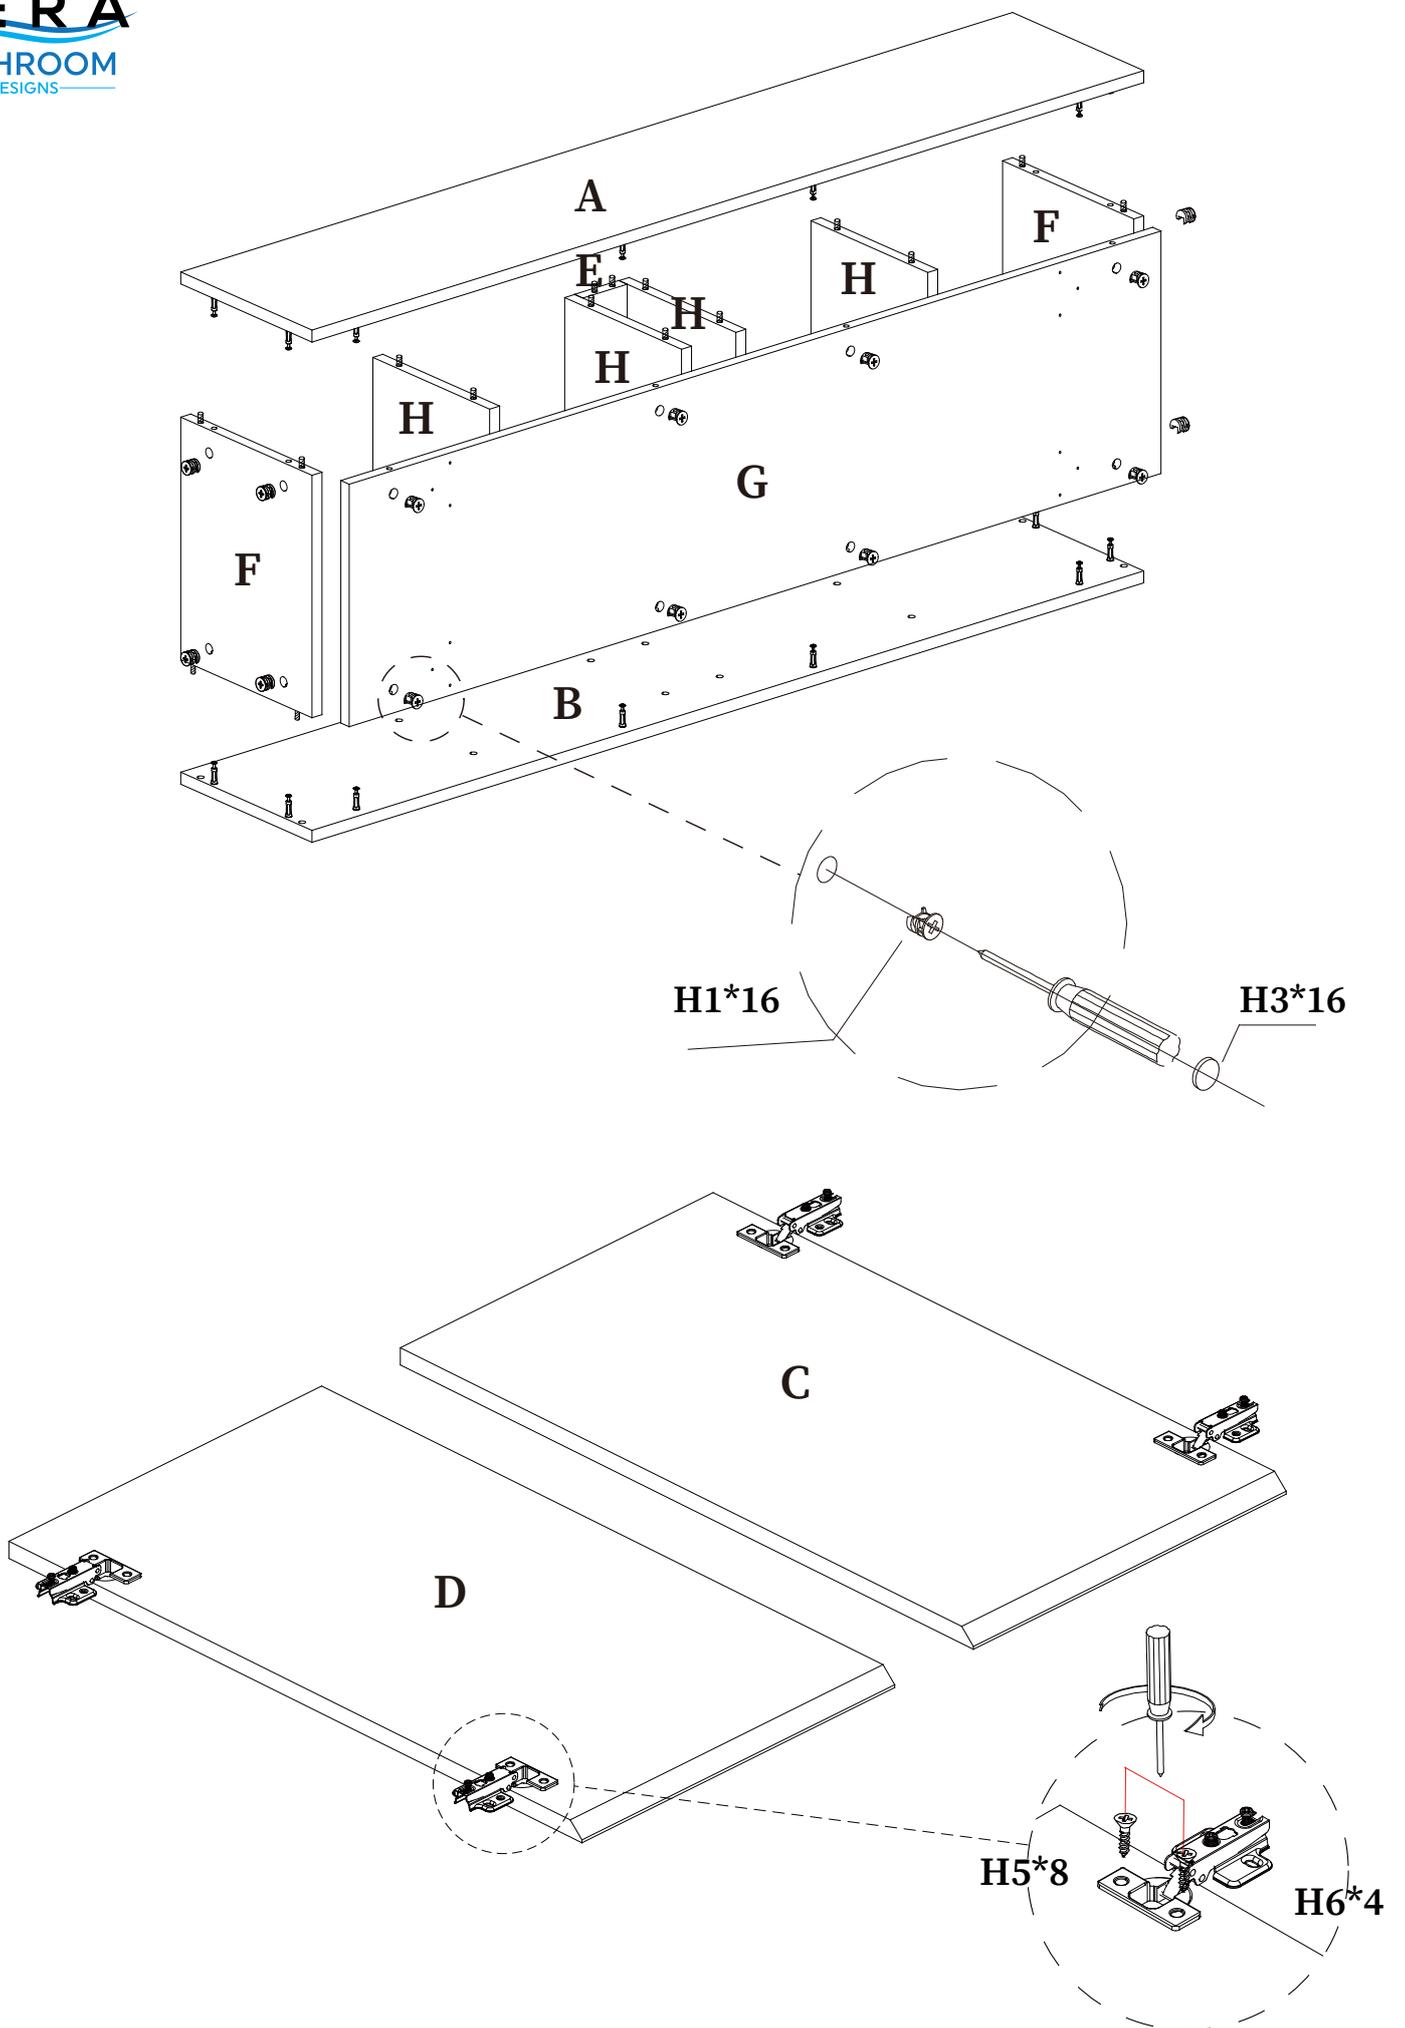

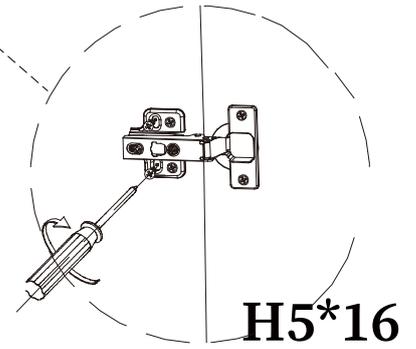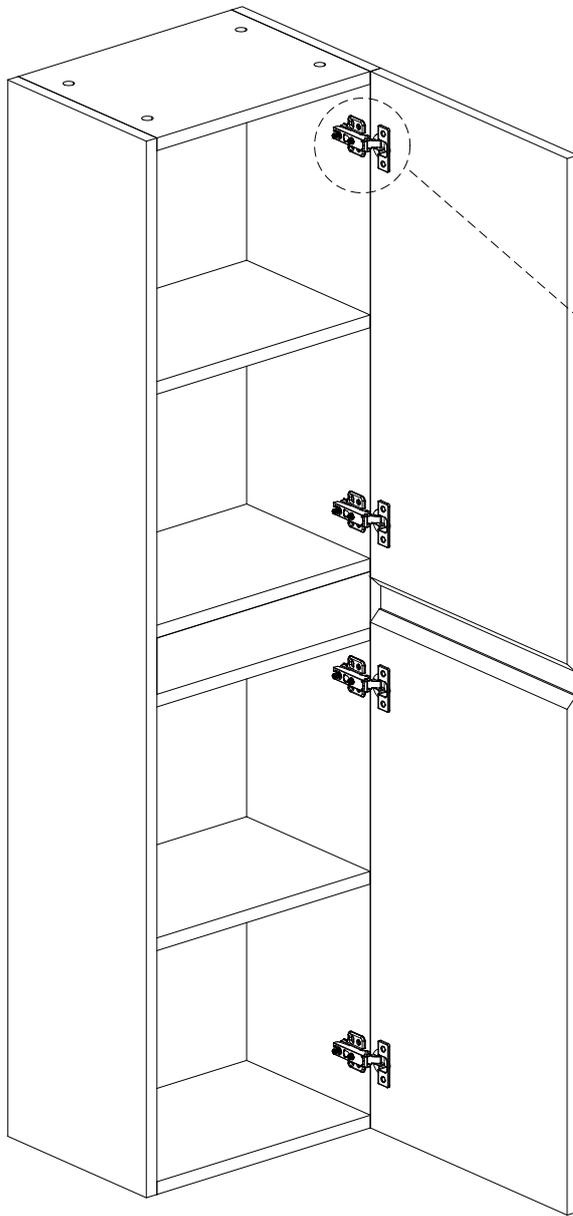

**REGLAGES DES PORTES**

