

international customization

INSTALLATION INSTRUCTIONS



international customization

BATHROOM CABINETRY INSTALLATION GUIDE

Illustrations may not reflect every exact model

BATHROOM CABINETRY
INSTALLATION GUIDE

bathroom cabinetry

INSTALLATION INSTRUCTIONS

Congratulations on choosing the experience center of international bathroom living. These quality, service and design ensure the elegant life of bathroom space.

To install your bathroom products please ensure you read the following instructions below.

IMPORTANT

All vanities must be installed by a licenced plumber.
Vanities and tops must be installed onto finished surfaces.


It is imperative that all bathroom installations are ventilated to meet standards.

FAILURE TO PROVIDE VENTILATION TO MEET THESE STANDARDS WILL VOID MANUFACTURERS WARRANTY.

Prior to installation

It is important that the product is unpacked and inspected for any damage, defects and that the product supplied is correct. If any of the above is apparent, DO NOT PROCEED WITH THIS INSTALLATION, AND IMMEDIATELY CONTACT THE STORE OF PURCHASE.


TOOLS REQUIRED FOR INSTALLATION

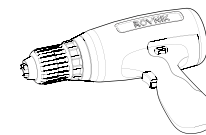


Electric/Battery Drill



Drill Bit



Tape Measure (3m-5m)




Spirit Level



Kitchen & Bathroom
Non-Acidic Silicone




Pencil




Screw Driver

WALL HUNG VANITY WITH WALL BRACKET SYSTEM FOR HOLLOW WALLS


1 Pre-cladding

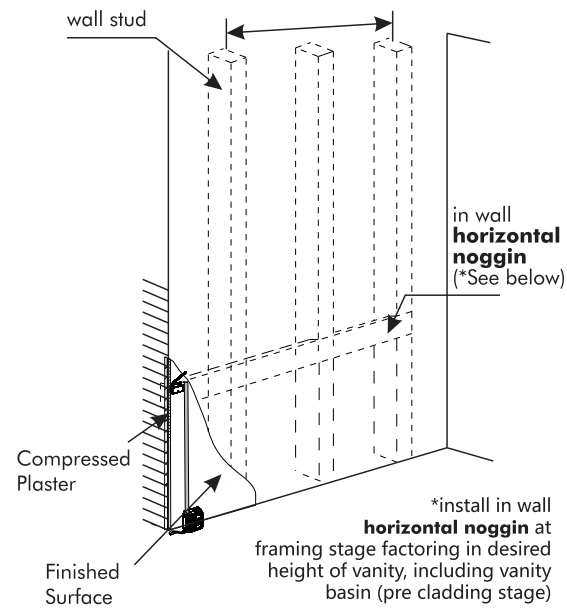

2 Post-cladding

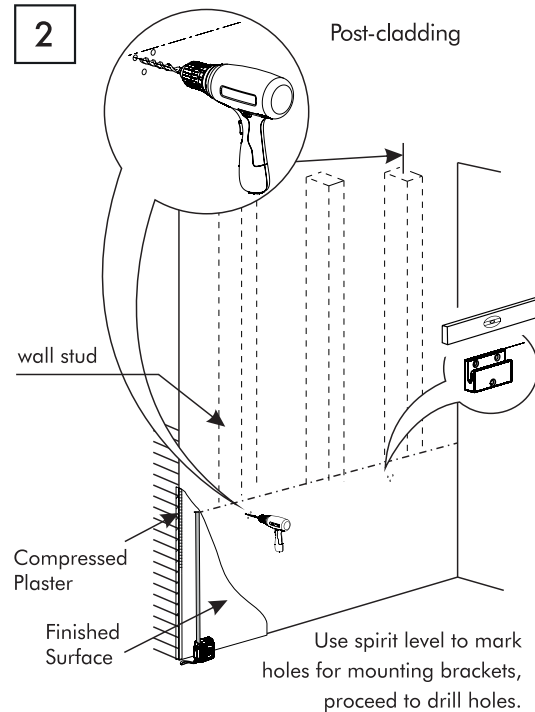


3

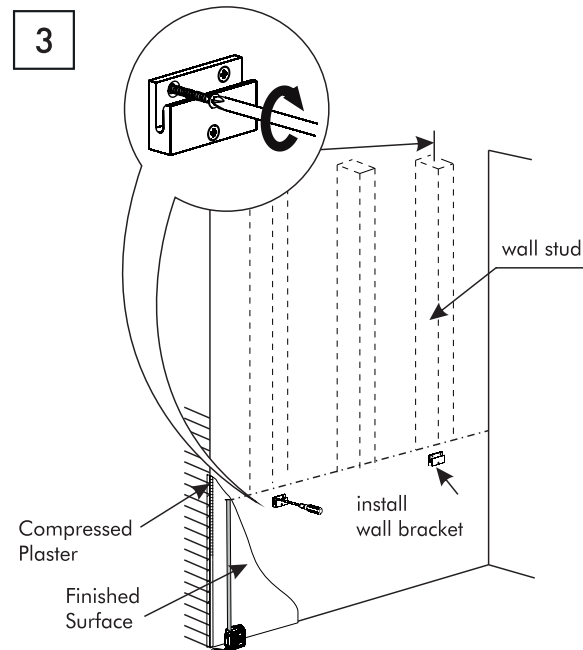


4

To avoid damage remove cabinet drawers. Then cover the drawer runners with plastic sheet to prevent debris from getting into the mechanism. Refer to page 12-14 for removing your drawers/doors for Blum/DTC runners.


5

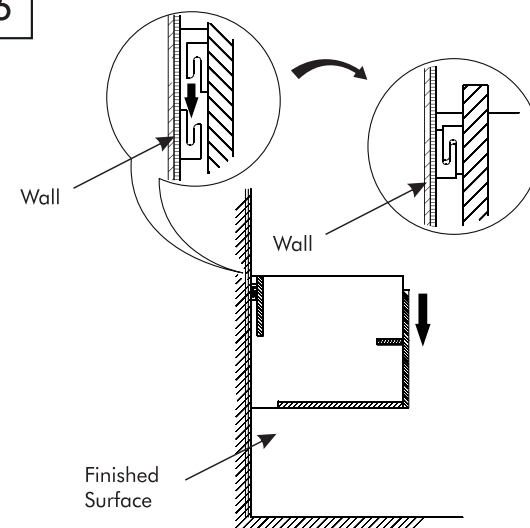

6

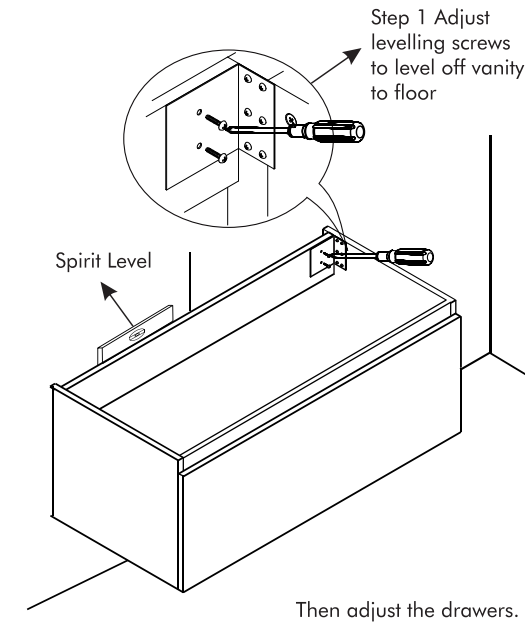

7

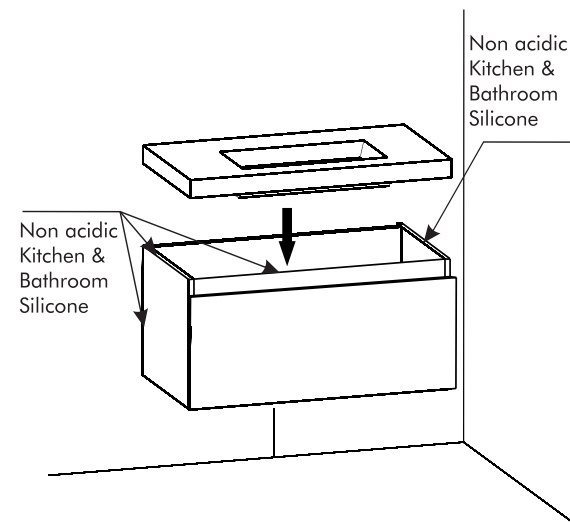

8

The unit must be sealed along the back edge of the top and down the sides against the wall with non acidic bathroom & kitchen silicone. Seal around the cabinet with silicone.













9

Please note when installing an undermount basin or counter basin onto a stone top, they must be siliconed on. When the silicone has dried ensure you caulk around the basin and stone top.











10

The vanity is now ready for the tapware and waste installation.




WALL HUNG VANITY WITH WALL BRACKET SYSTEM FOR CONCRETE WALLS

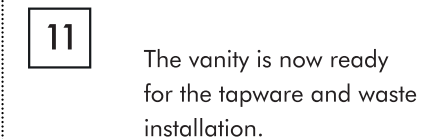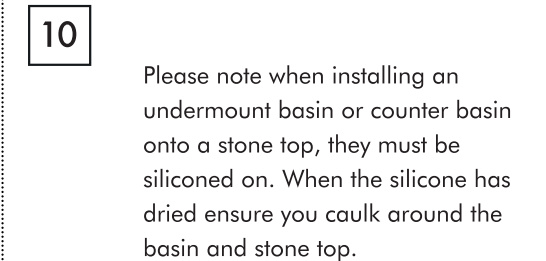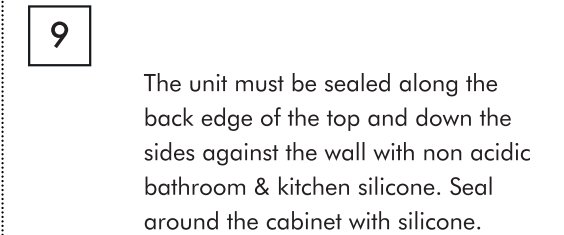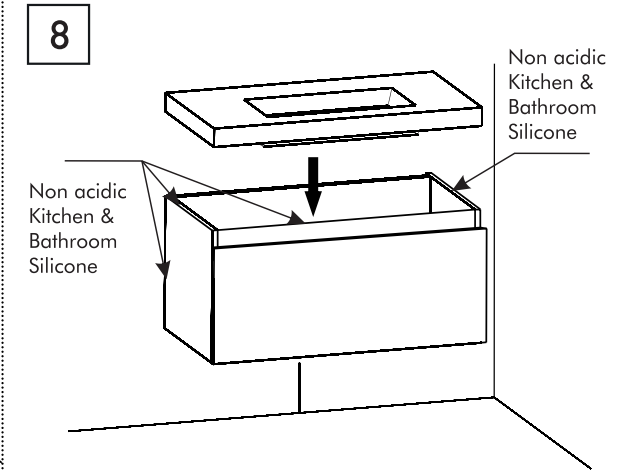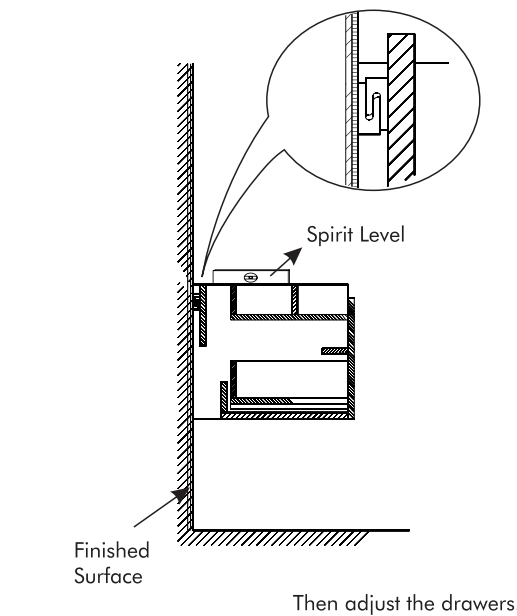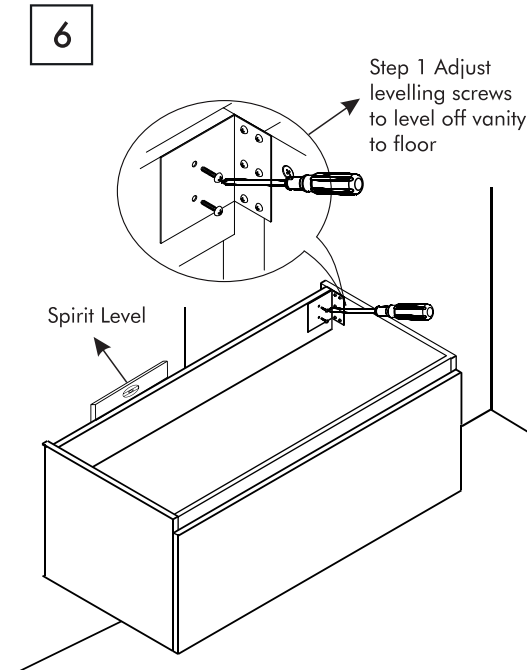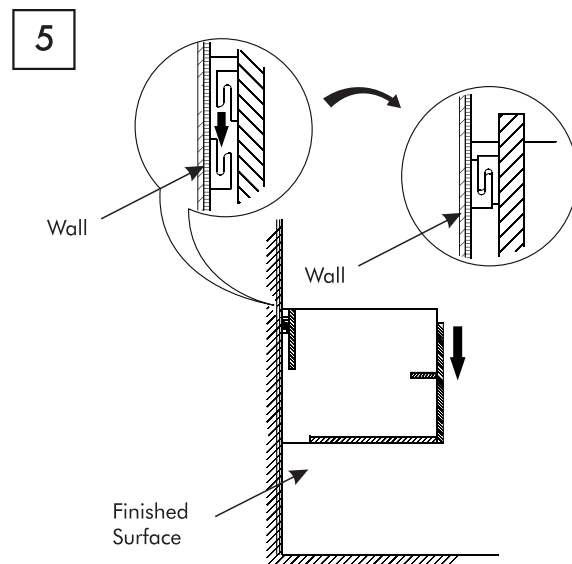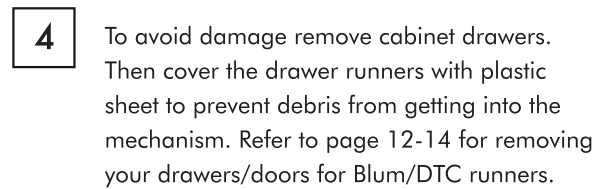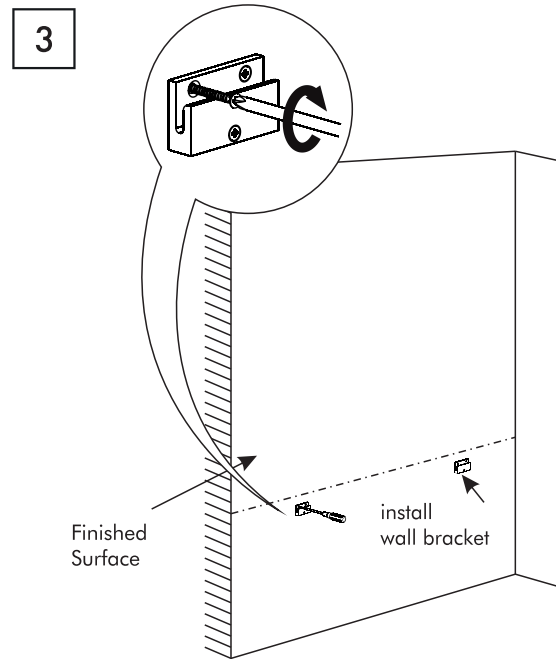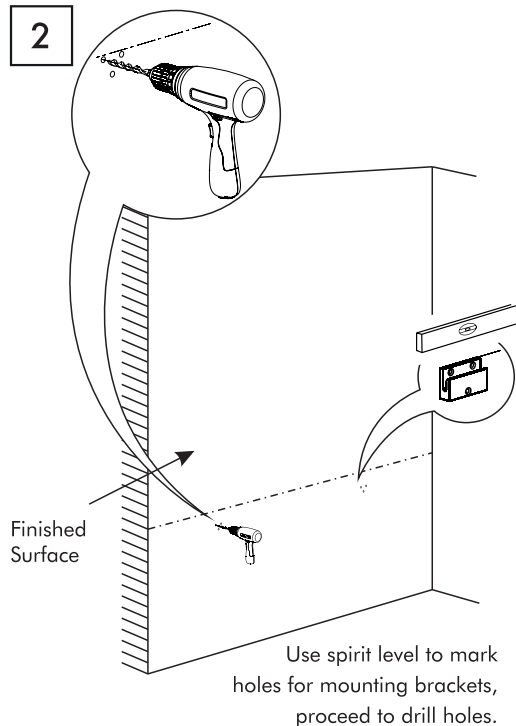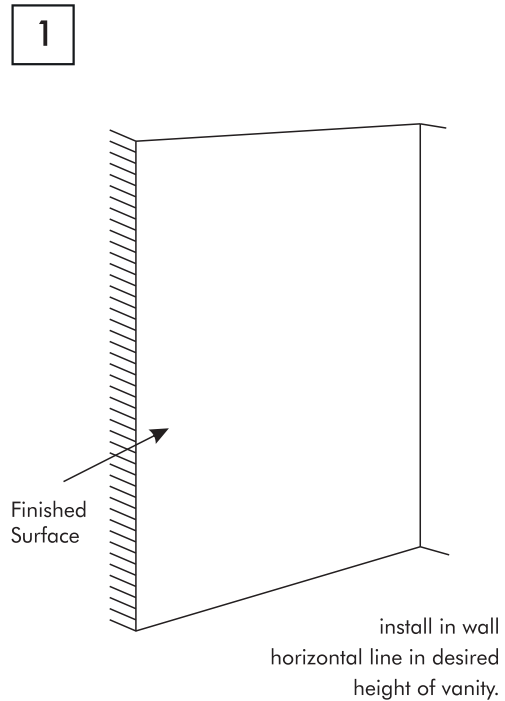



WALL HUNG VANITY WITH WALL BRACKET SYSTEM FOR HOLLOW WALLS

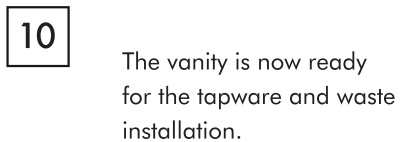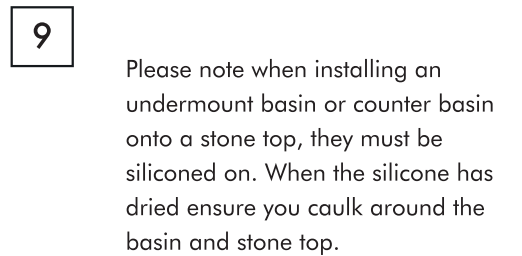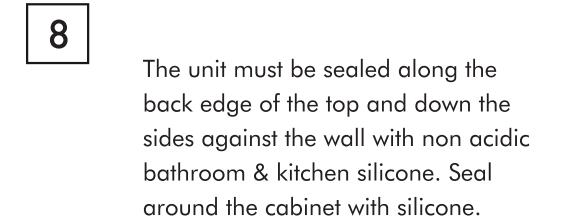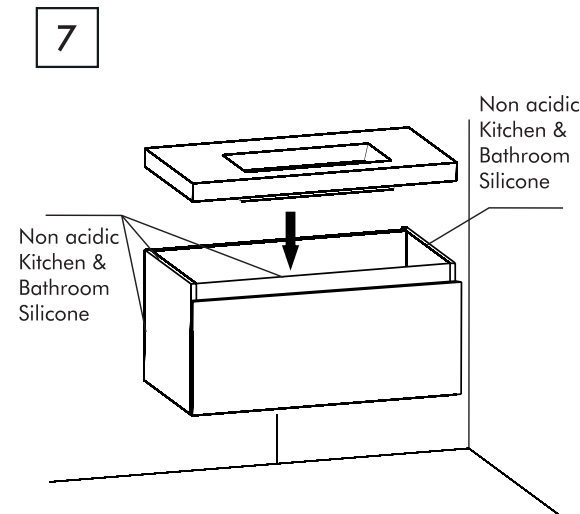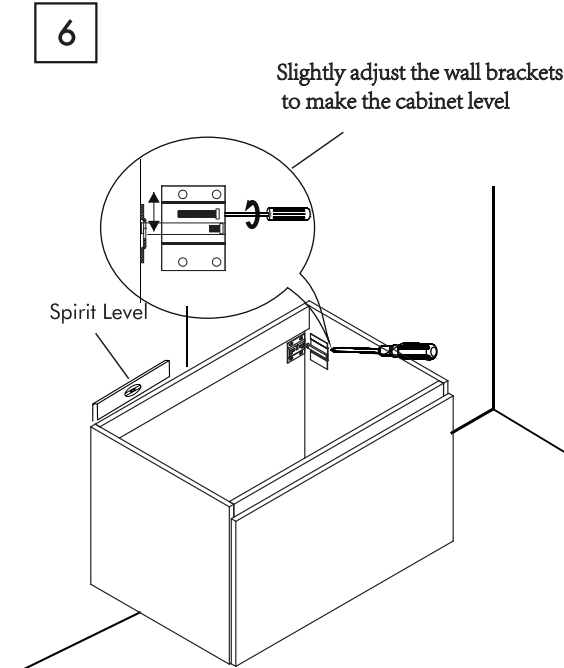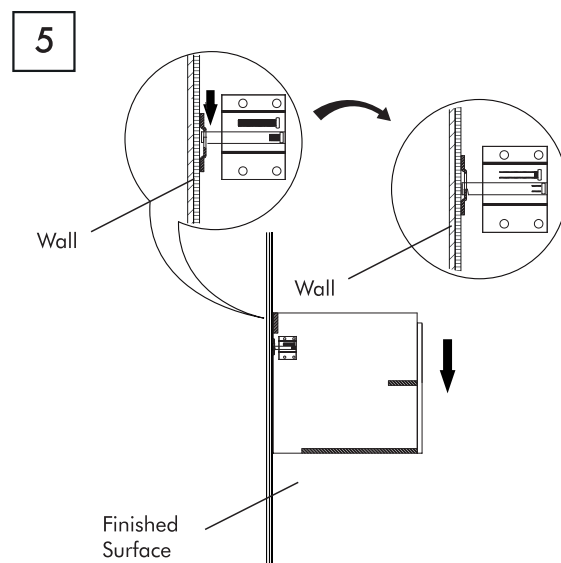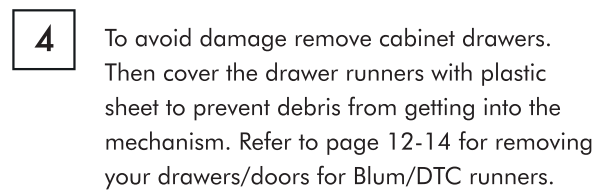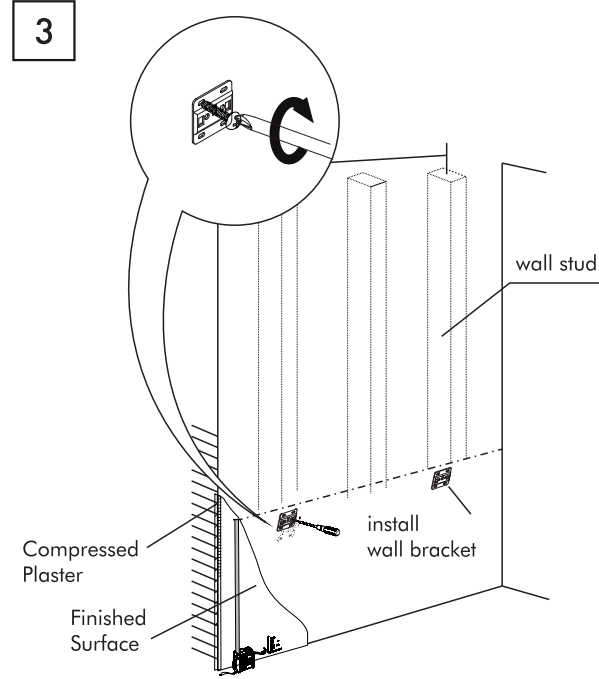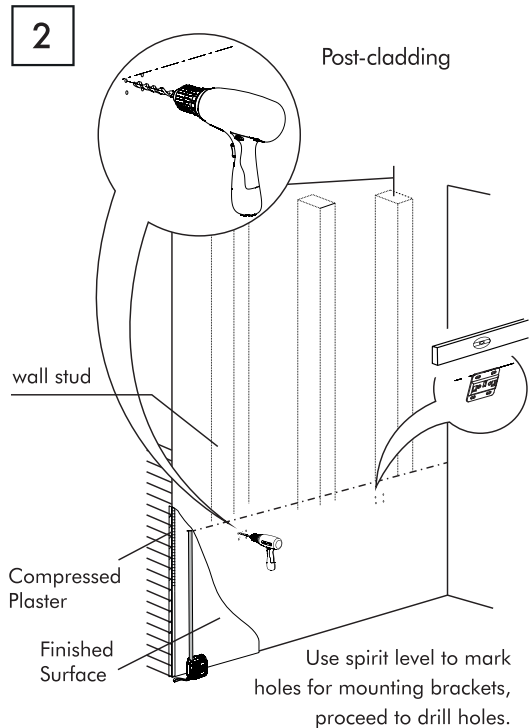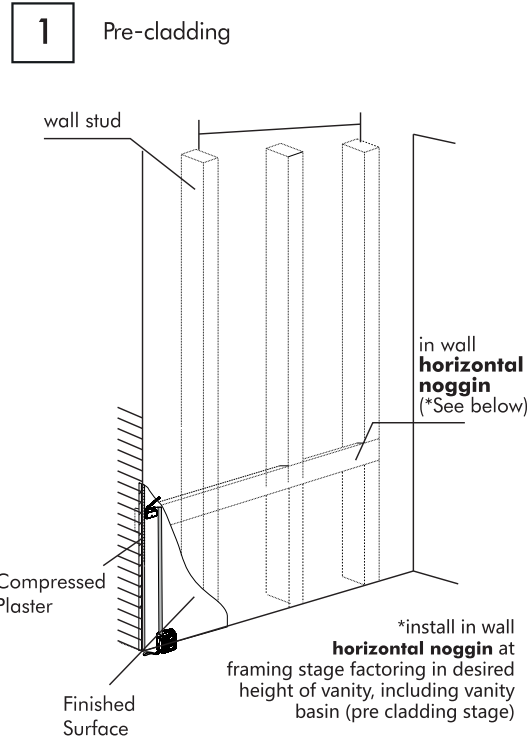

WALL HUNG VANITY WITH WALL BRACKET SYSTEM FOR CONCRETE WALLS

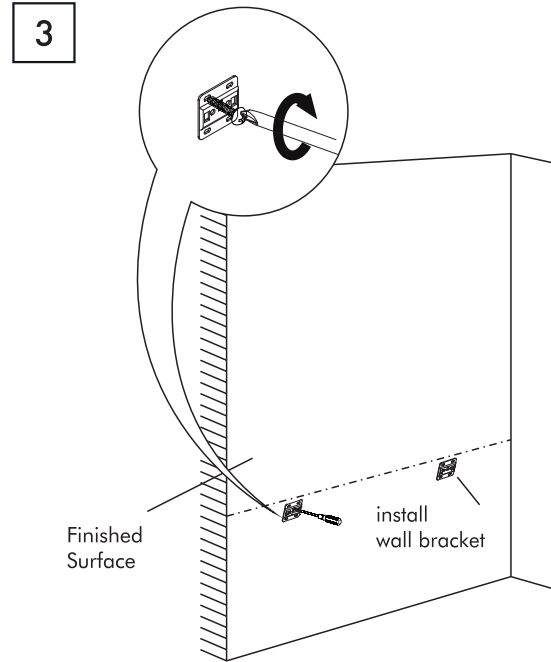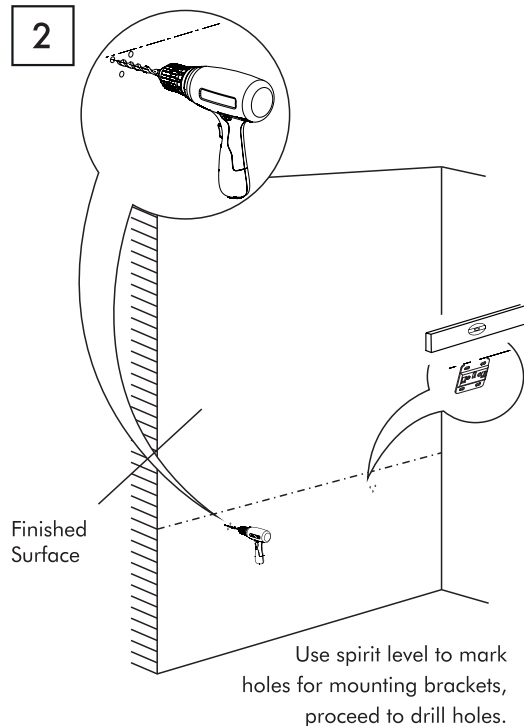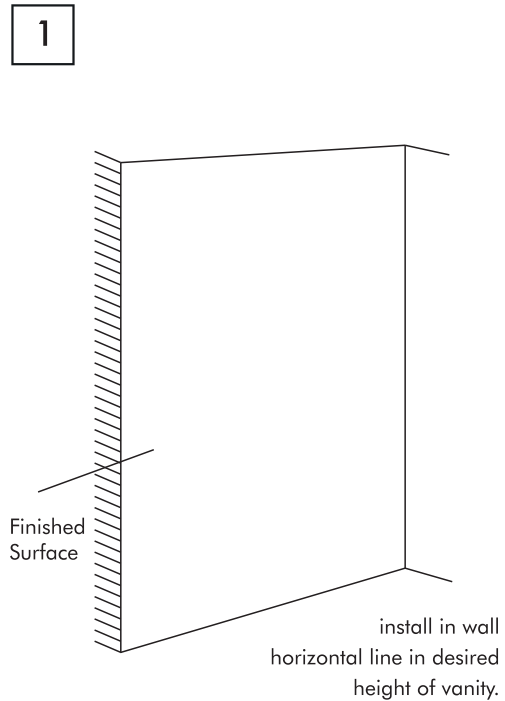


4 To avoid damage remove cabinet drawers. Then cover the drawer runners with plastic sheet to prevent debris from getting into the mechanism. Refer to page 12-14 for removing your drawers/doors for Blum/DTC runners.

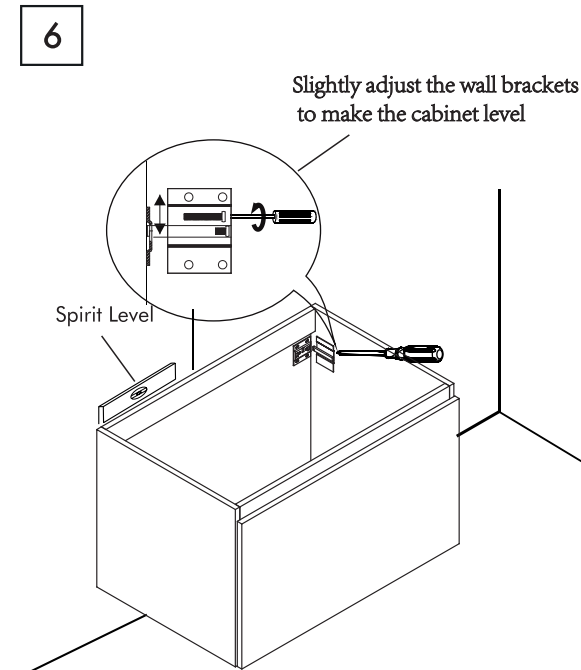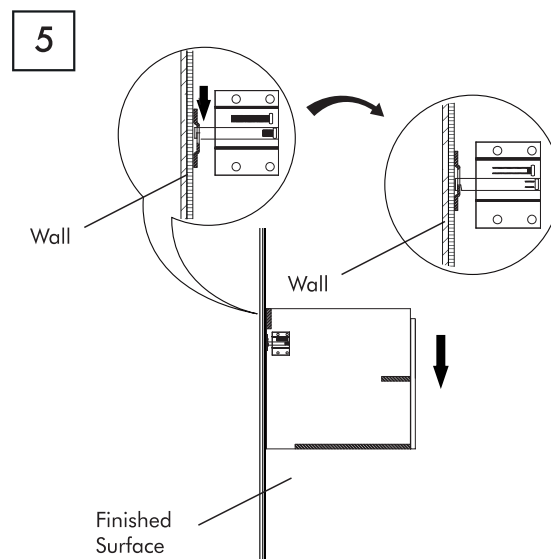

8 The unit must be sealed along the back edge of the top and down the sides against the wall with non acidic bathroom & kitchen silicone. Seal around the cabinet with silicone.

9 Please note when installing an undermount basin or counter basin onto a stone top, they must be siliconed on. When the silicone has dried ensure you caulk around the basin and stone top.

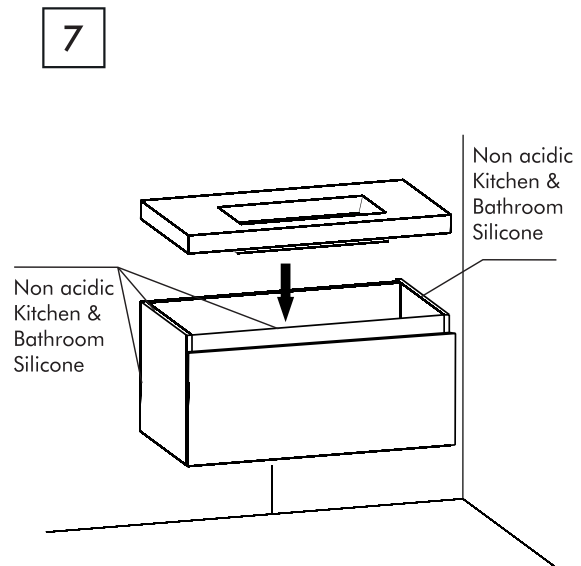


10 The vanity is now ready for the tapware and waste installation.

FREESTANDING VANITY (WITH ADJUSTING SCREWS)

1

Use spirit level, mark & install all brackets level

2

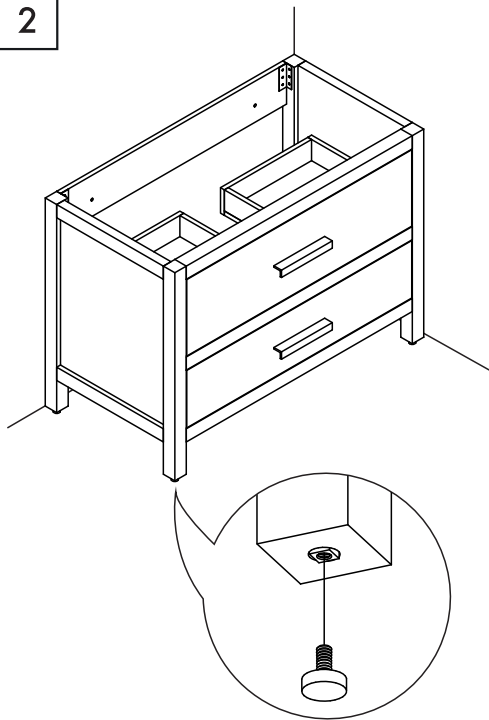

Reverse the carton while unpacking, cabinet legs upward, turn the leg end screws.


Note: Do not fix the screws when turn, left distance used to adjust.

Reverse the cabinet.

Note: The process needs two workers to avoid the drawers come out. It's necessary to measure the cabinet level to adjust well.

3

Place vanity onto wall in the desired height. Check level from side to side and front to back. Packers may be required to level vanity unit and prevent cabinet from twisting once vanity is level fasten to wall using screws, cap and boss provided. Installers must check and adjust to avoid mistakes.

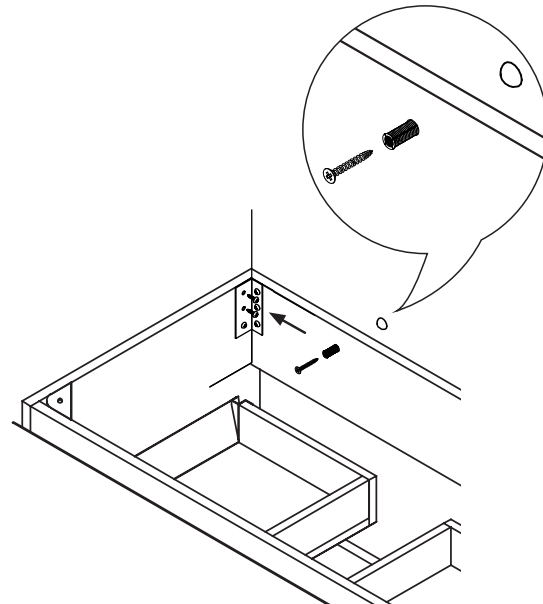

IMPORTANT: All fixing screws that hold the vanity unit onto the wall must fix through wall into horizontal noggin. Failure to do so will result in vanity falling off wall.

4

The unit must be sealed along the back edge of the top and down the sides against the wall with non acidic bathroom & kitchen silicone.

5


Please note when installing an undermount basin or counter basin onto a stone top, they must be siliconed on. When the silicone has dried ensure you caulk around the basin and stone top.

6


The vanity is now ready for the tapware and waste installation.

WALL HUNG STORAGE UNIT

1

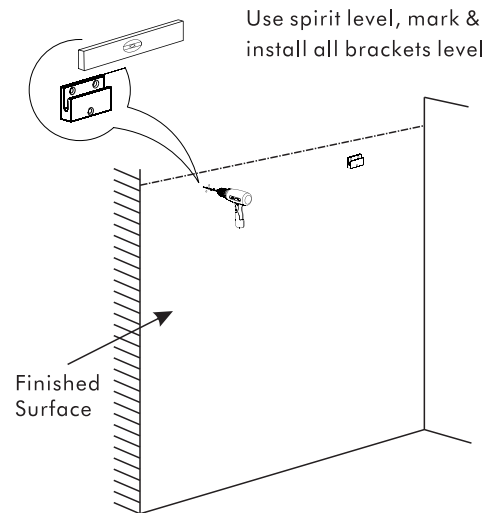

2

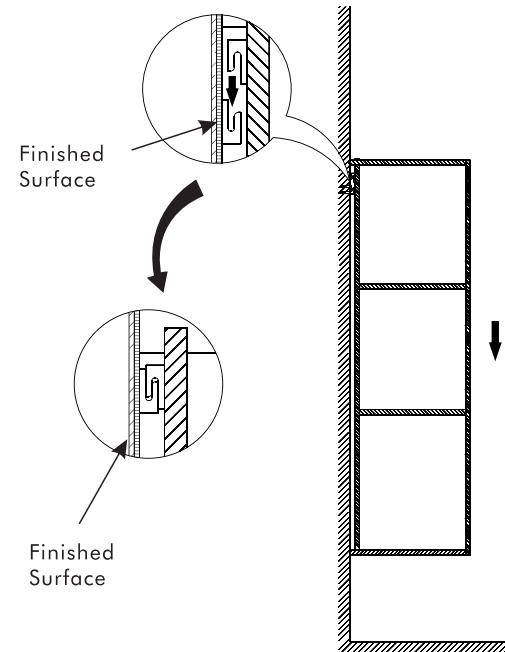

FREESTANDING VANITY



Please note all Freestanding storage units must be fixed into noggin. Using a minimum of 2 screws so as to avoid storage falling forward.

Place storage unit onto wall, locate noggin and then check for level. Use screws, caps and boss supplied to fix through holes of storage into noggin.

MIRROR CABINETS

1


Carefully remove mirror doors from cabinet

2

Locate stud in wall, using measuring tape mark stud centre on wall

3

Place mirror box and level at desired height. Mark out stud centres on mirror box backing board.

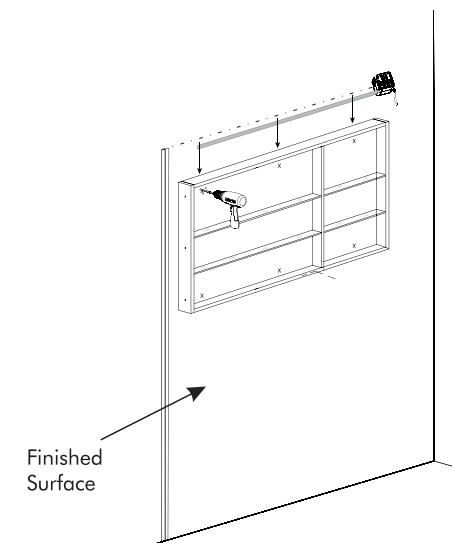

4


Use electric drill to drill holes at the marked position

5

Use prepacked screws, insert brass threaded boss and continue to screw into wall until all screws firmly holding mirror box on wall. Screw on chrome screw caps to brass box.

6

Carefully Reinstall mirror doors to cabinet.

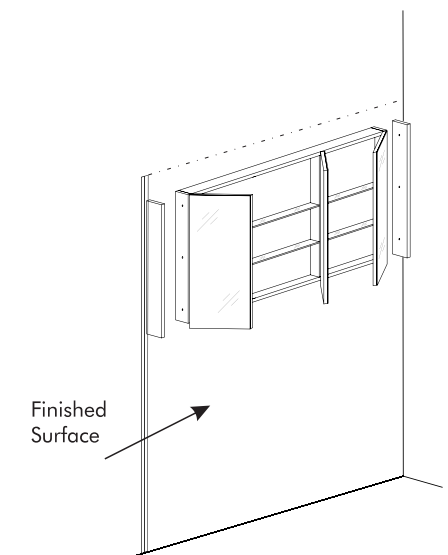

If cabinets are to be installed into wall cavity they must NOT be installed into load bearing wall.

DRAWER HINGE ADJUSTMENT AND REMOVAL

QUICK ASSEMBLY TROUBLE SHOOTING

The drawer slides unsteadily - what should I do?

This is usually caused by debris in the mechanism. Carefully remove any debris, and ensure that the drawer runners are covered during assembly.

The drawers do not fully close - what is the issue?

To address this, you should correct the front and back assembly position of the drawer slides. You may also need to check that the drawer size is correct, and that the drawer has been properly adjusted to be level.

How can I remove the drawer?


Turn the quick assembly fittings, and take out the lock pin.

How can I ensure that the drawers rebound?

If the distance of the rebound guide rail is less than 4mm, the fittings should be adjusted.


HETTICH DRAWER/HINGE INSTALLATION

1

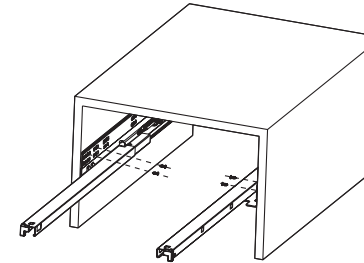


Fix the slide onto the cabinet.

2

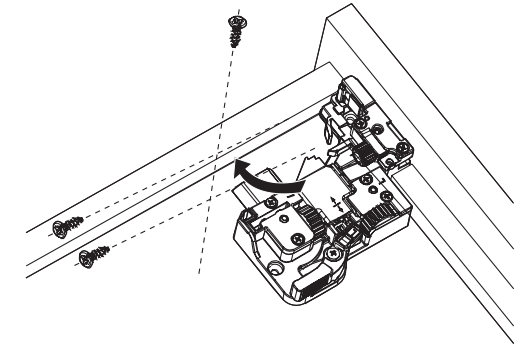


Move out the adjusting part and fix the locking device onto the drawer bottom.

3

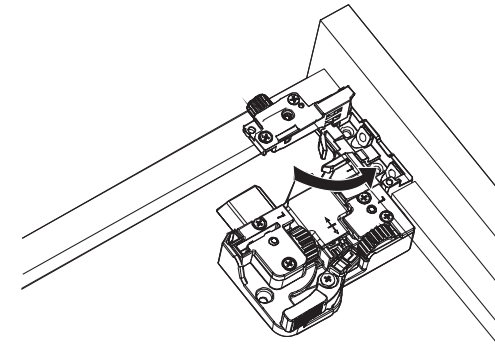


Put the adjusting part back and tighten the screws.

4

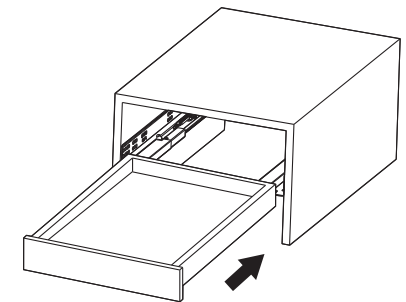


5

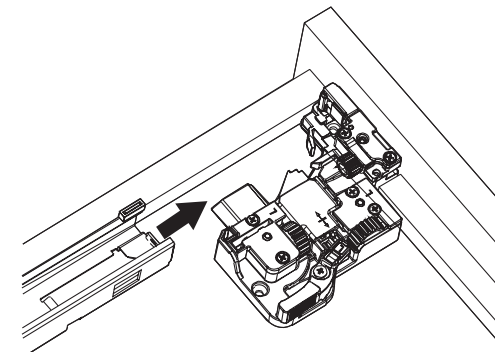

Lay the drawer bottom onto the slide then push the drawer into the cabinet.


HETTICH DRAWER/HINGE ADJUSTMENT/REMOVAL

ADJUSTMENT

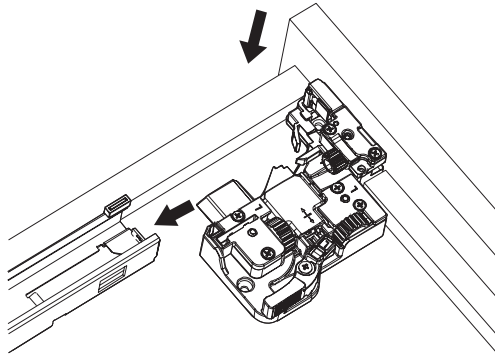


Up and down adjustment.

ADJUSTMENT

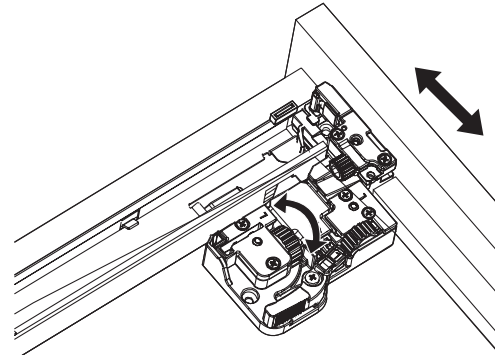


Side adjustment.

ADJUSTMENT

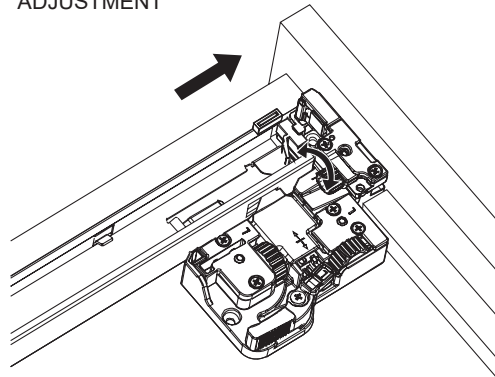


Depth Adjustment.

REMOVAL

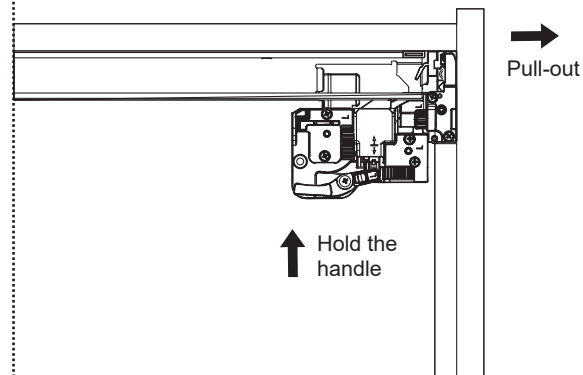


REMOVAL

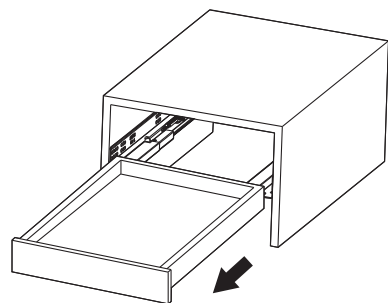


Hold the handle and pull-out the drawer.

UNIHOOPER GENERAL DRAWER

1

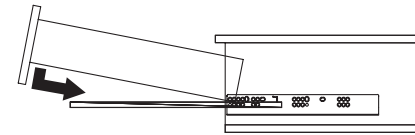


2

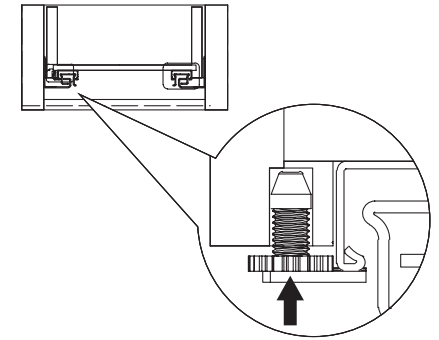


Insertion.

3

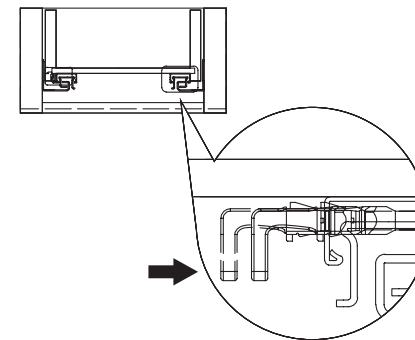


Slide in.


4

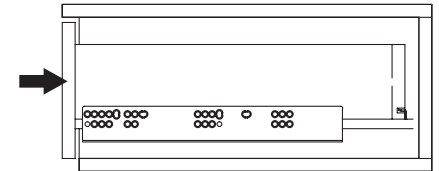



ADJUSTMENT

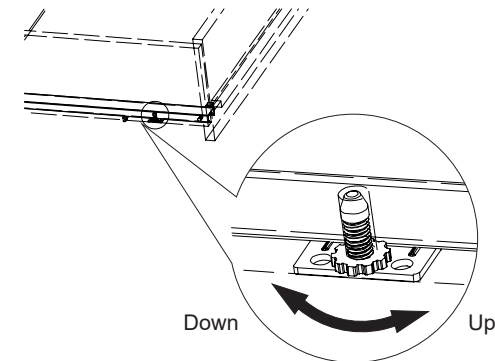


REMOVAL

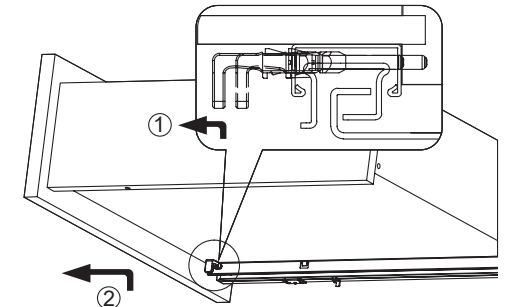


UNIHOOPER QUICK ASSEMBLY DRAWER

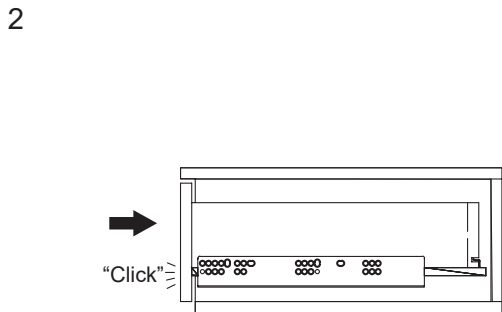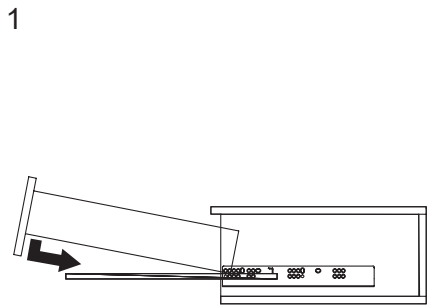




ADJUSTMENT

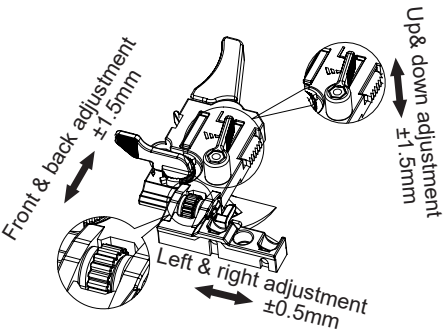




REMOVAL

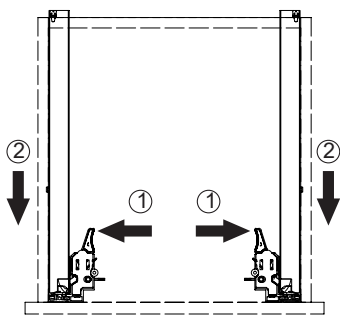

INCORRECT DEMONSTRATION 1 HOW TO RESET THE DRAWER

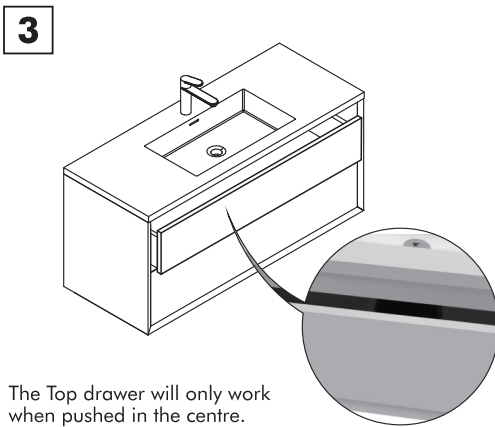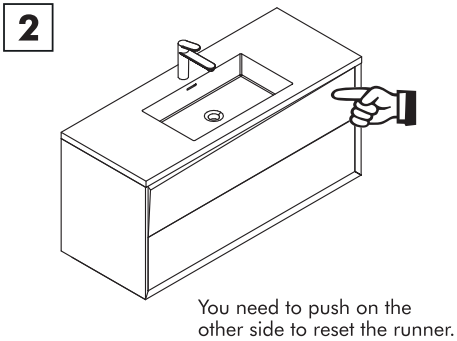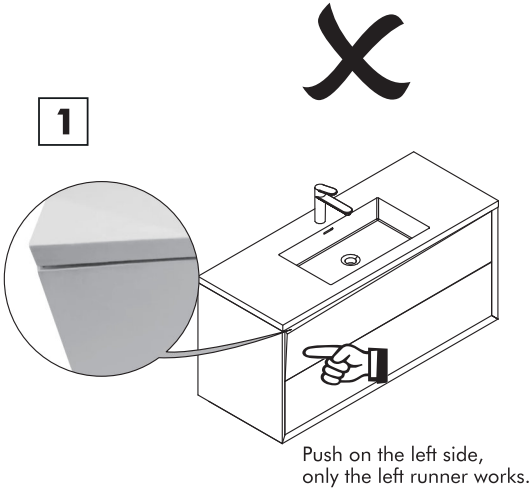


INCORRECT DEMONSTRATION 2 HOW TO RESET THE DRAWER

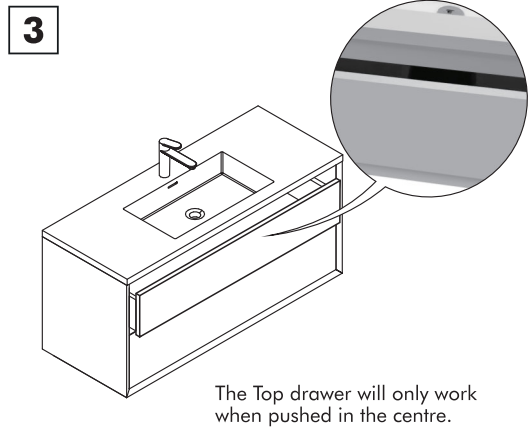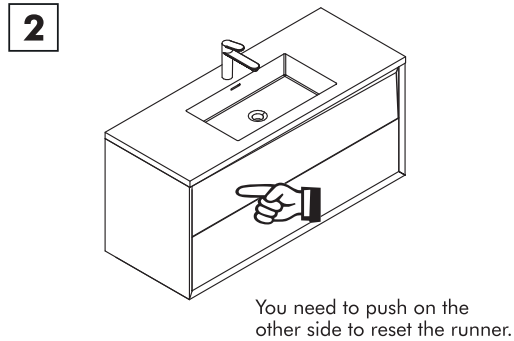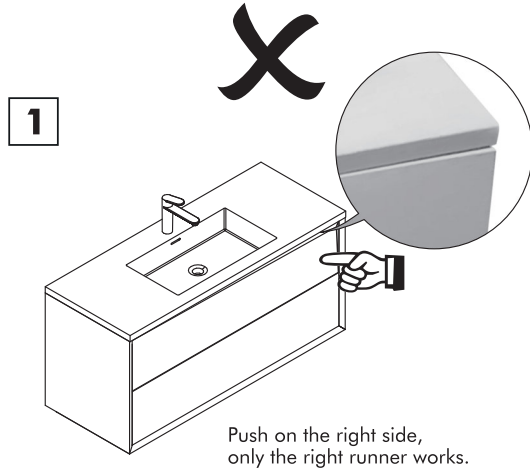


CORRECT DEMONSTRATION Wall Hung Cabinets With Push-open system.

1

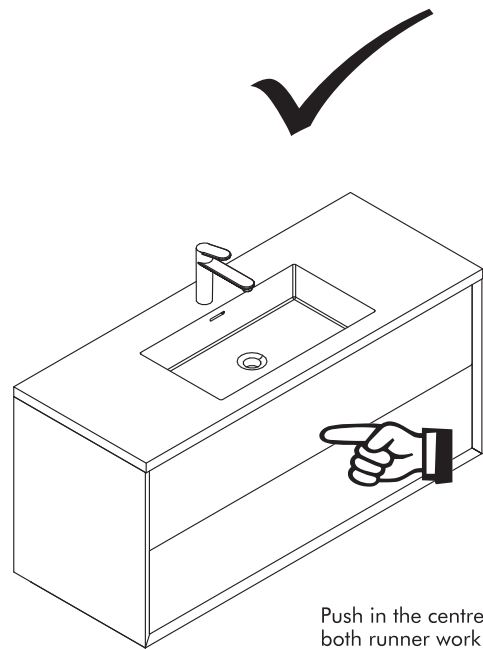

2

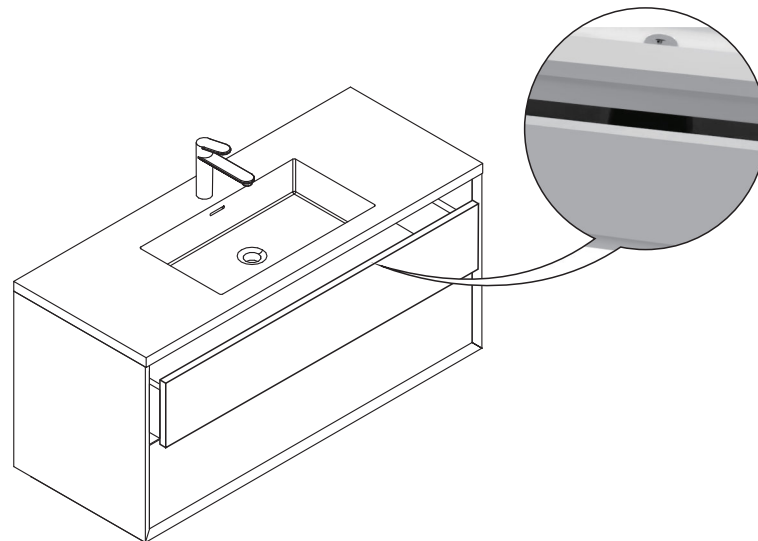

CARE INSTRUCTIONS

to allow your products to remain as elegant as the day they were installed please read the guide below.

DOOR AND CABINET CARE:

Regular cleaning with a damp cloth is sufficient. Never use strong detergents or abrasive cleaners as this may damage the surface finish of your furniture.

GLASS CARE:

When cleaning glass panels or mirrors, use a cloth with approved window/glass cleaner. Do not use washing powders or any other substance containing abrasives, as these will scratch the glass. Bathroom furniture may deteriorate if subjected to heavy water spillage or prolonged condensation.

POLYMARBLE BASIN CARE:

To maintain your Polymarble basin it is recommended to regularly clean your basin using a damp sponge with warm soapy water. Avoid using abrasive cleaners, ammonia-based products or bleaches as these products will damage the surface of your Polymarble basin.

SOLID SURFACE COUNTERTOP/BASIN CARE:

For general cleaning, just use soap and water or any ammonia based household cleaners. For stubborn stains, use a mild abrasive cleaner or a diluted solution of bleach. To remove light scratches and to renew the finish, use a combination of mild abrasive and a "Kitchen Scrub" pad or the equivalent pad. Matte Finish : To remove deep scratches and cuts, use a 600grit sandpaper equipped in the package using a sanding block. Sand until the scratch disappears. Be sure to feather out the area so that you do not leave a low spot in your counter top. Next, restore the finish by using a mild abrasive cleaner and a "Kitchen Scrub" pad or the equivalent pad.