




# Installation Guide

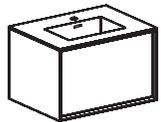


600

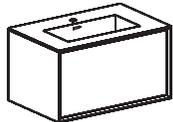

750

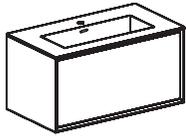


900

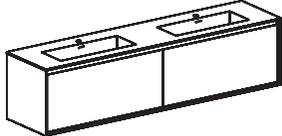


1500

1

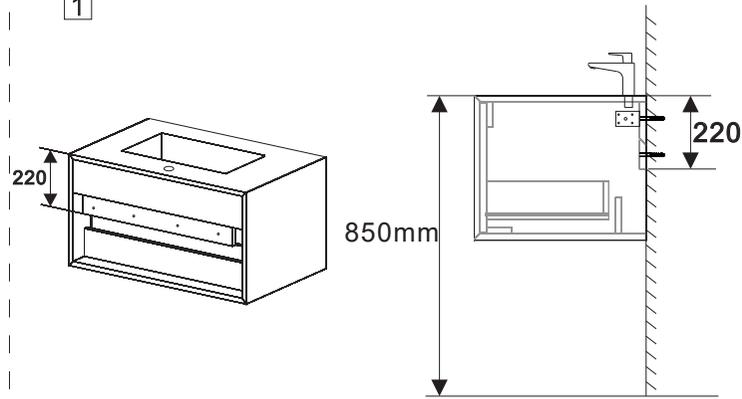

4

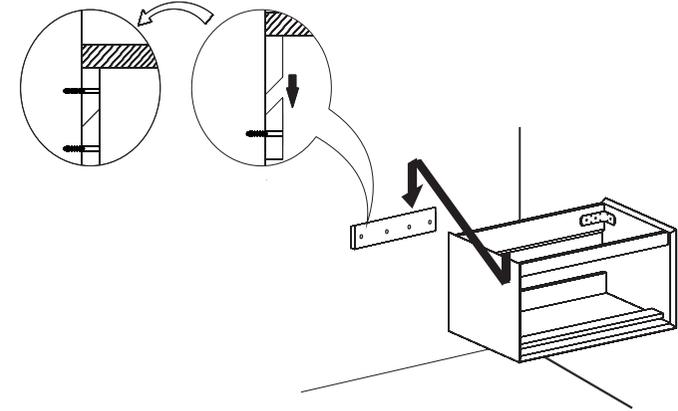

Electric drill



Drill bit  
( $\phi 8 / \phi 5$ )



Tape measure  
(3m~5m)



Silicone




Pencil




Screwdriver

Tools required for installation

2

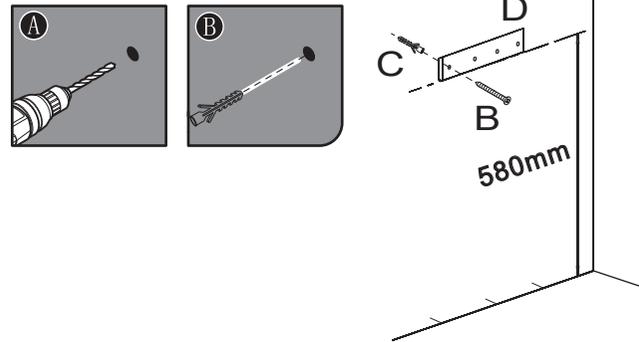

5

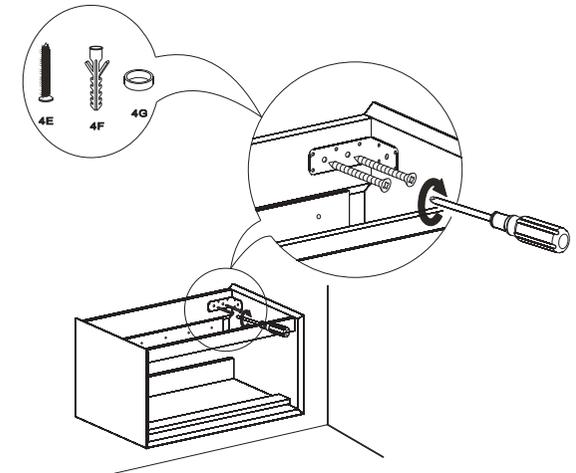

## CABINET



4B




4E



4C



4F




1D



4G

3

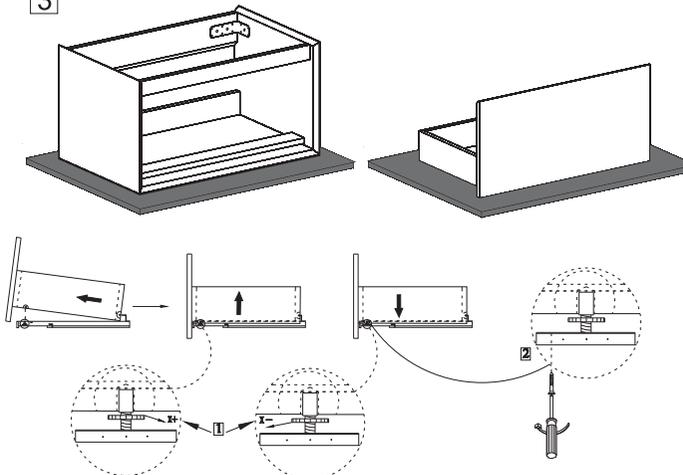

6

