



INSTRUCTION

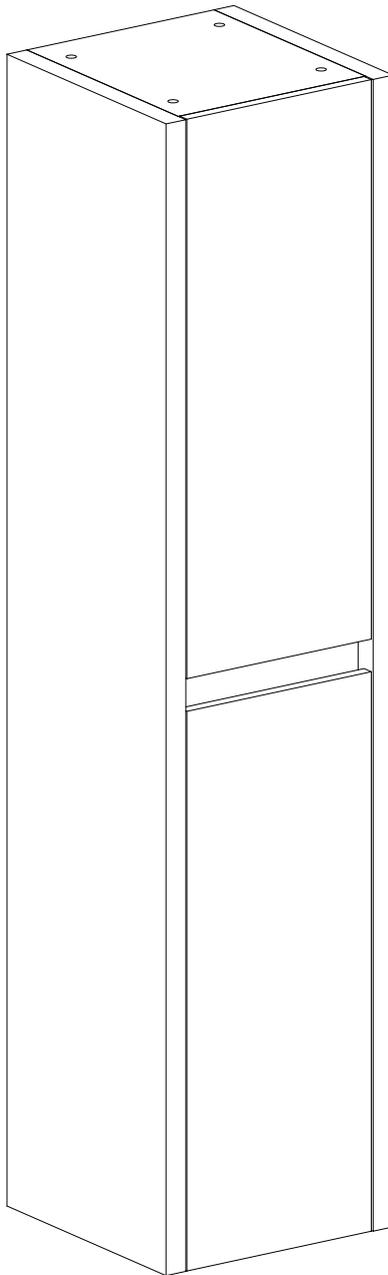


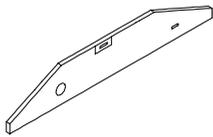


Spirit level




Tape measure
(3m~5m)

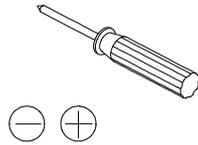

Screwdriver

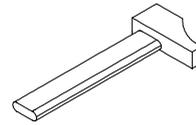

Hammer

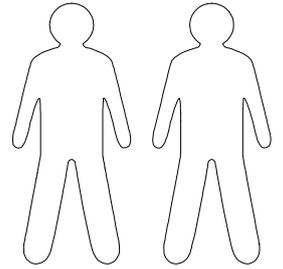


Electric drill




Drill bit
(Ø8)



Pencil

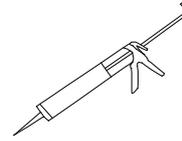


Silicone

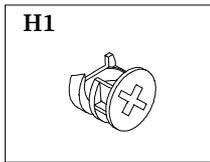


H1

16*

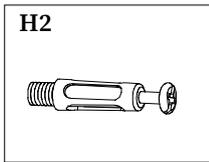


H2

16*

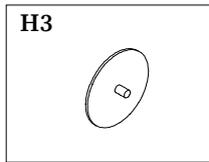


H3

16*

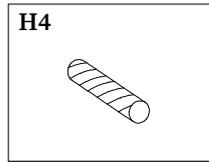


H4

30*φ8*30

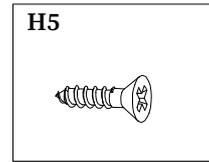


H5

36*φ4*16

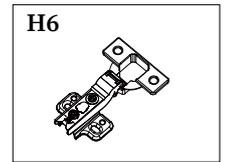


H6

4*

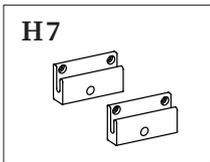


H7

2

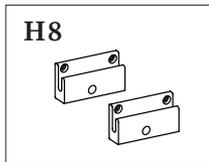


H8

1*

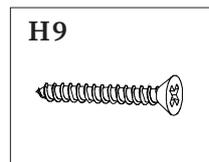



H9

6*Ø4x50


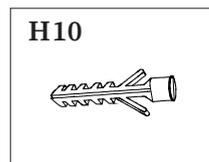




H10



6*Ø8x40

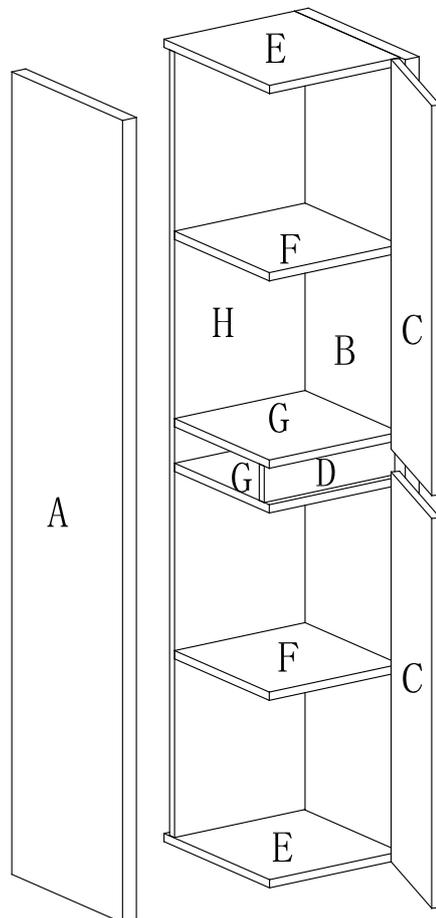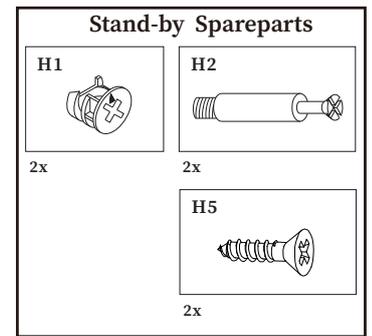

1

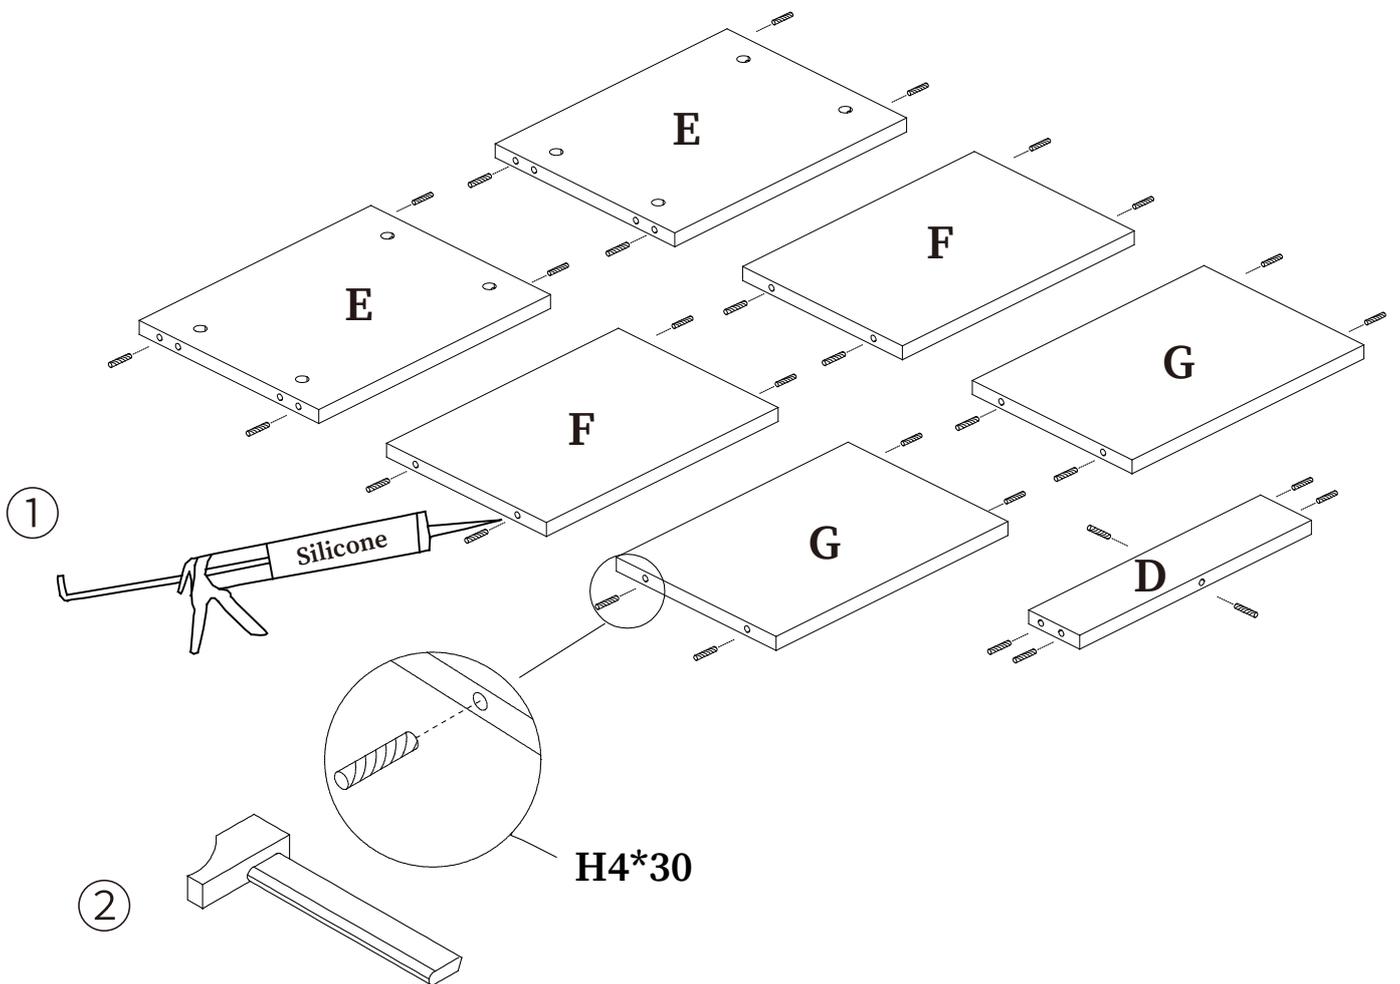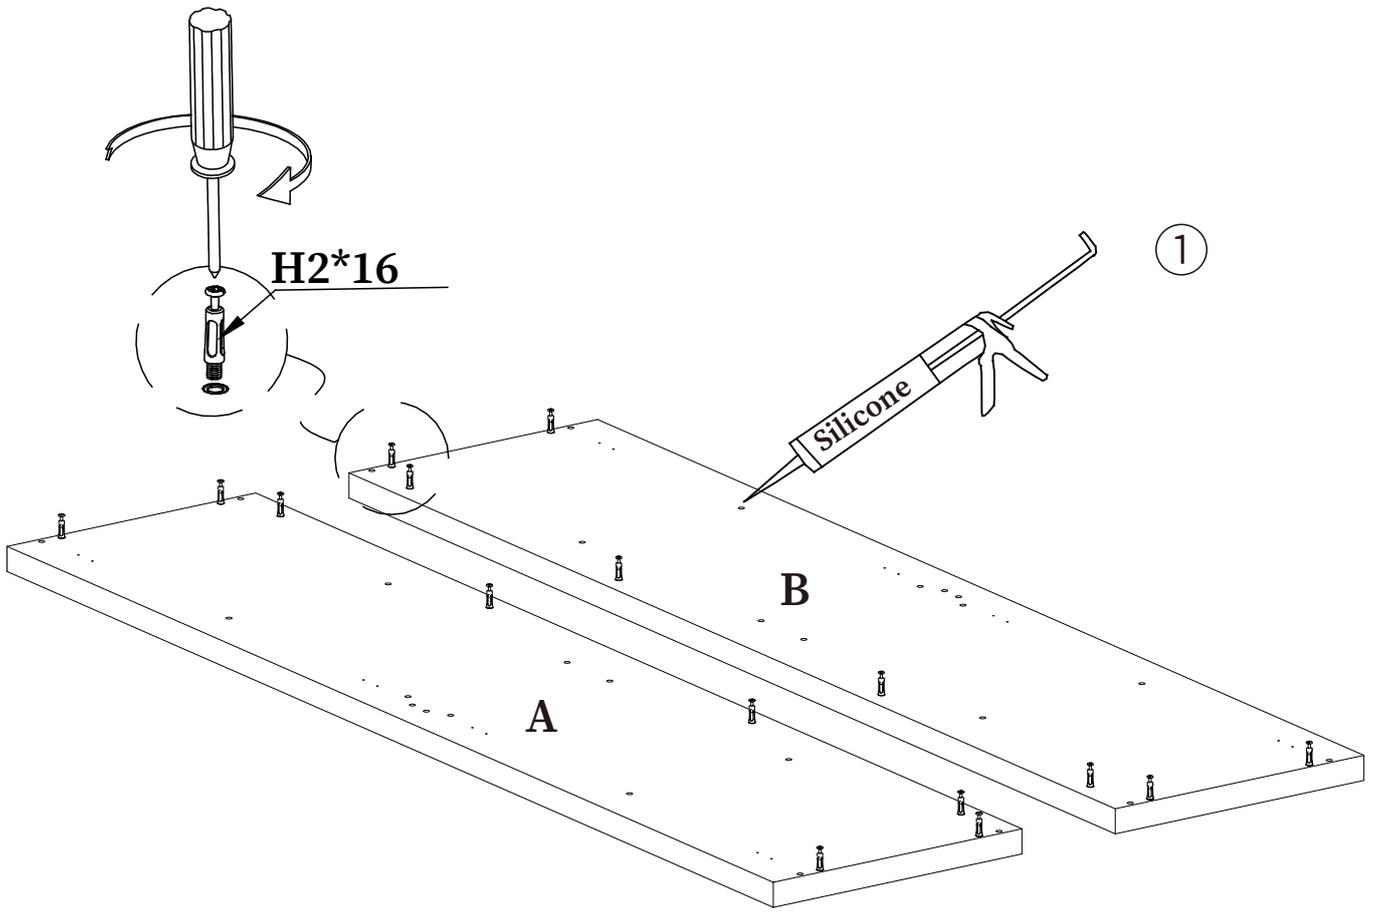

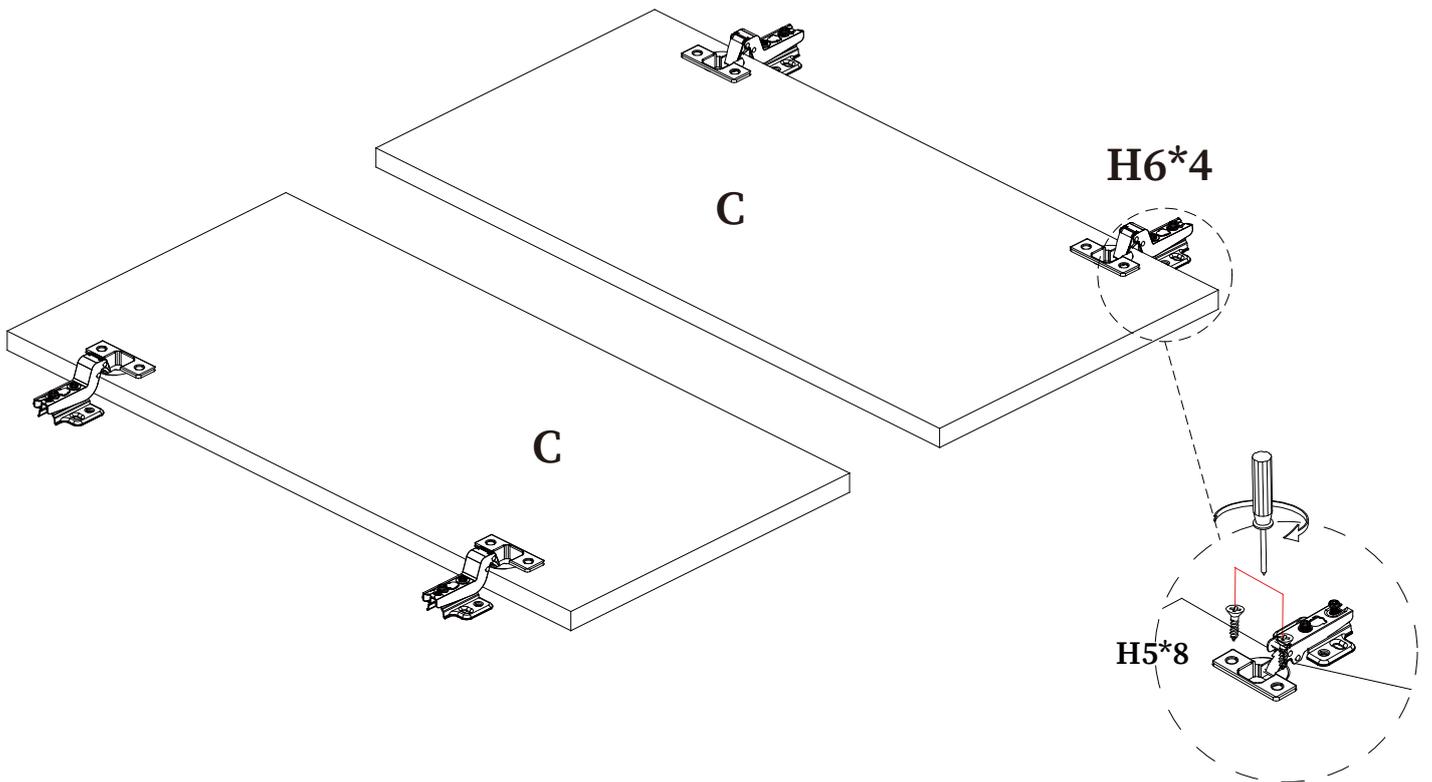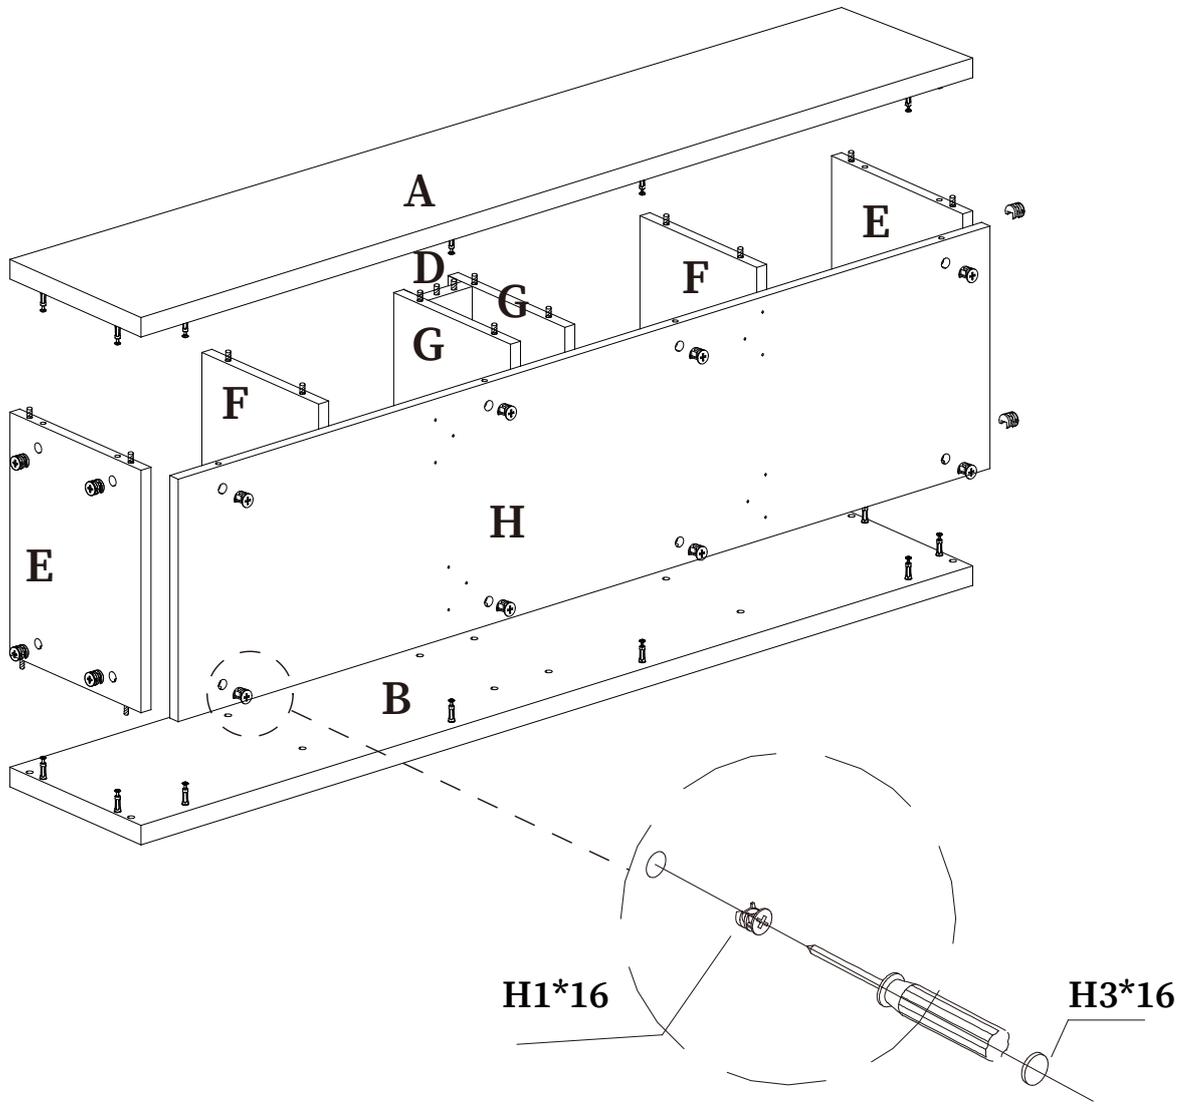

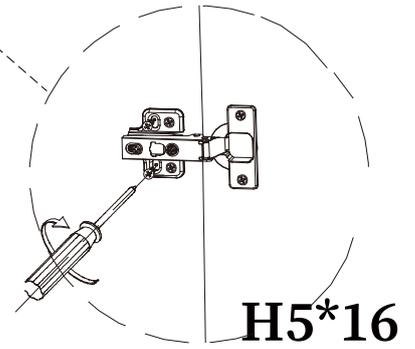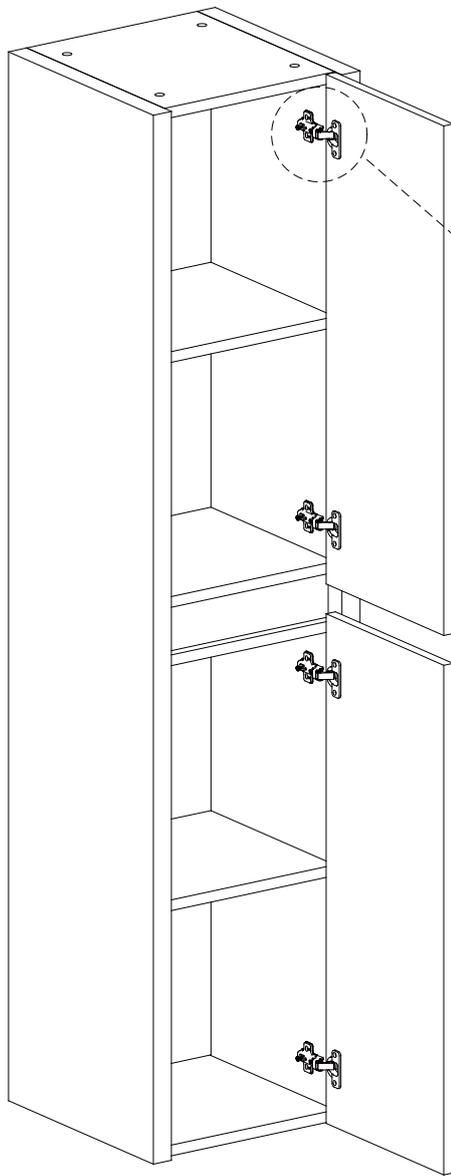

REGLAGES DES PORTES

