

Fig.1 OVERALL DIMENSION

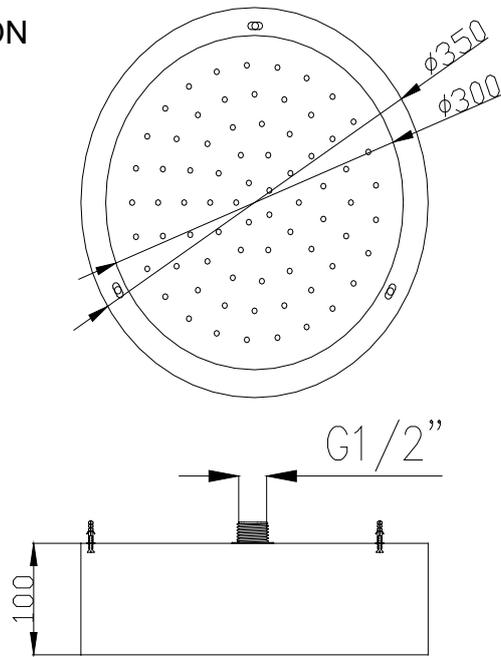


Fig.2 TO STICK THE PAPER TEMPLATE TO THE SEILING.
FIX THE SCREW HOLE POSITION.


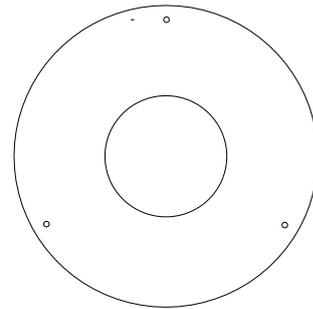


Fig.3



TO CONNECT THE RAIN SHOWER INLET TO THE
WALL PRE-BURIED PIPE WATER SUPPLY .
SCREW THEM TO FIX .

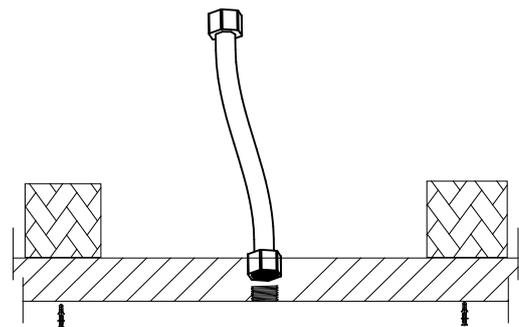