




INSTRUCTION

ROAK-SC-NFIO-KD

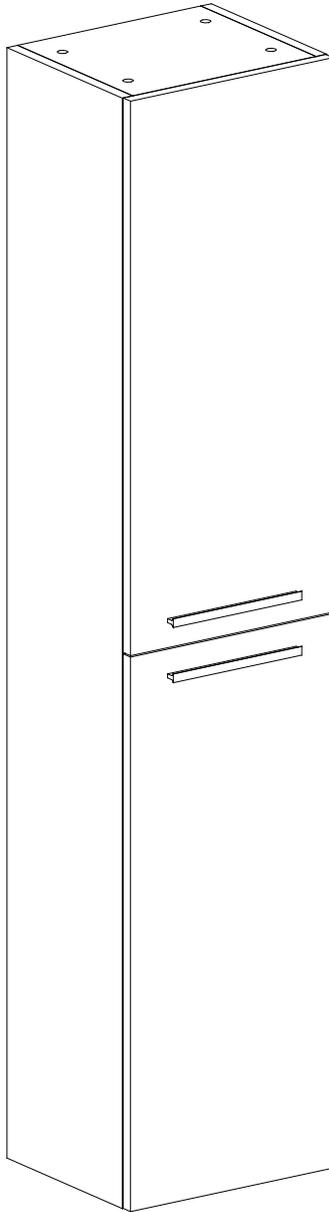


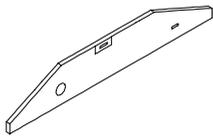


Spirit level





Tape measure
(3m~5m)

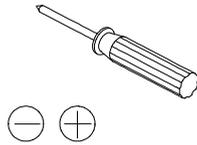

Screwdriver

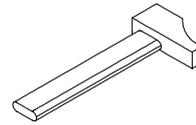

Hammer

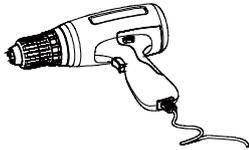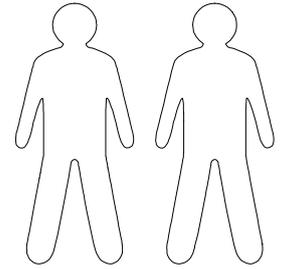


Electric drill




Drill bit
(Ø8)



Pencil

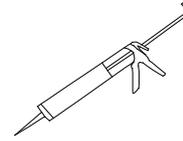


Silicone

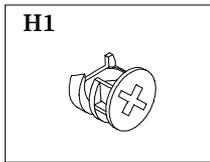


H1

16*

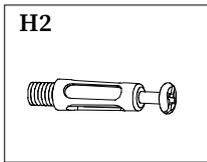

H2

16*

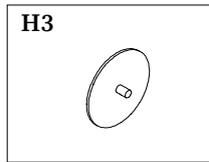


H3

16*




H4

28*φ8*30

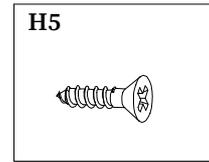


H5

16*φ4*16

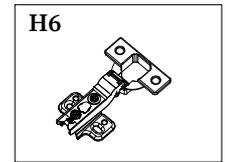


H6

4*

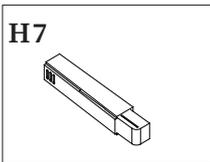


H7

2*

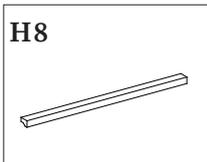


H8

2*

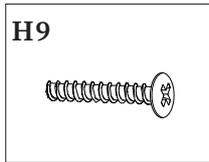


H9

4*φ4*24

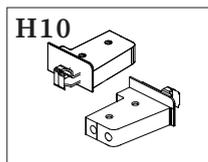


H10

2*

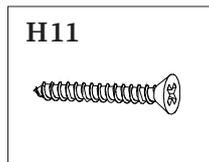


H11

8*Ø4x28

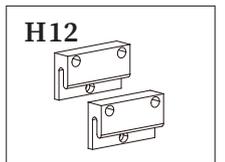


H12

1*

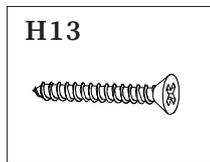



H13



6*Ø4x50

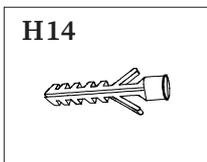



H14

6*Ø8x40

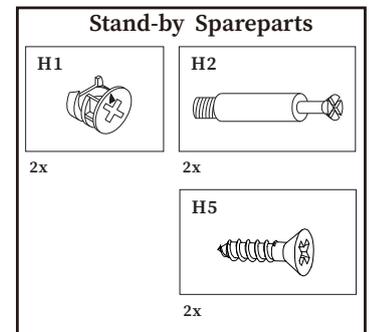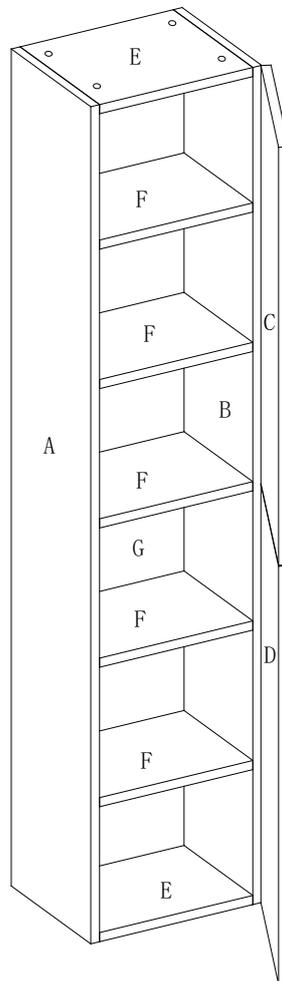


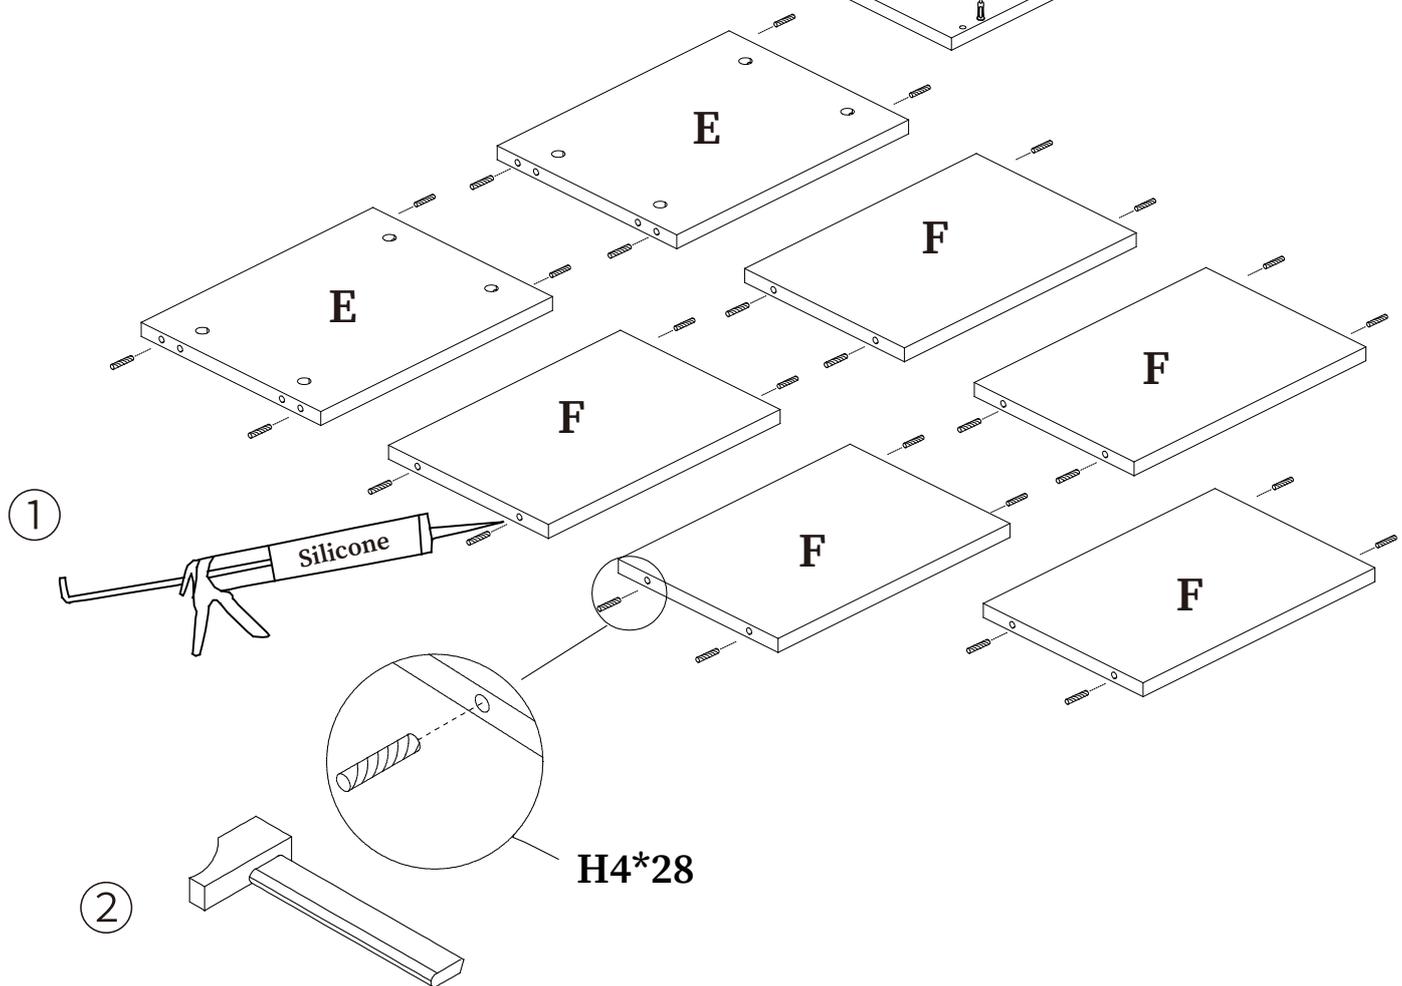
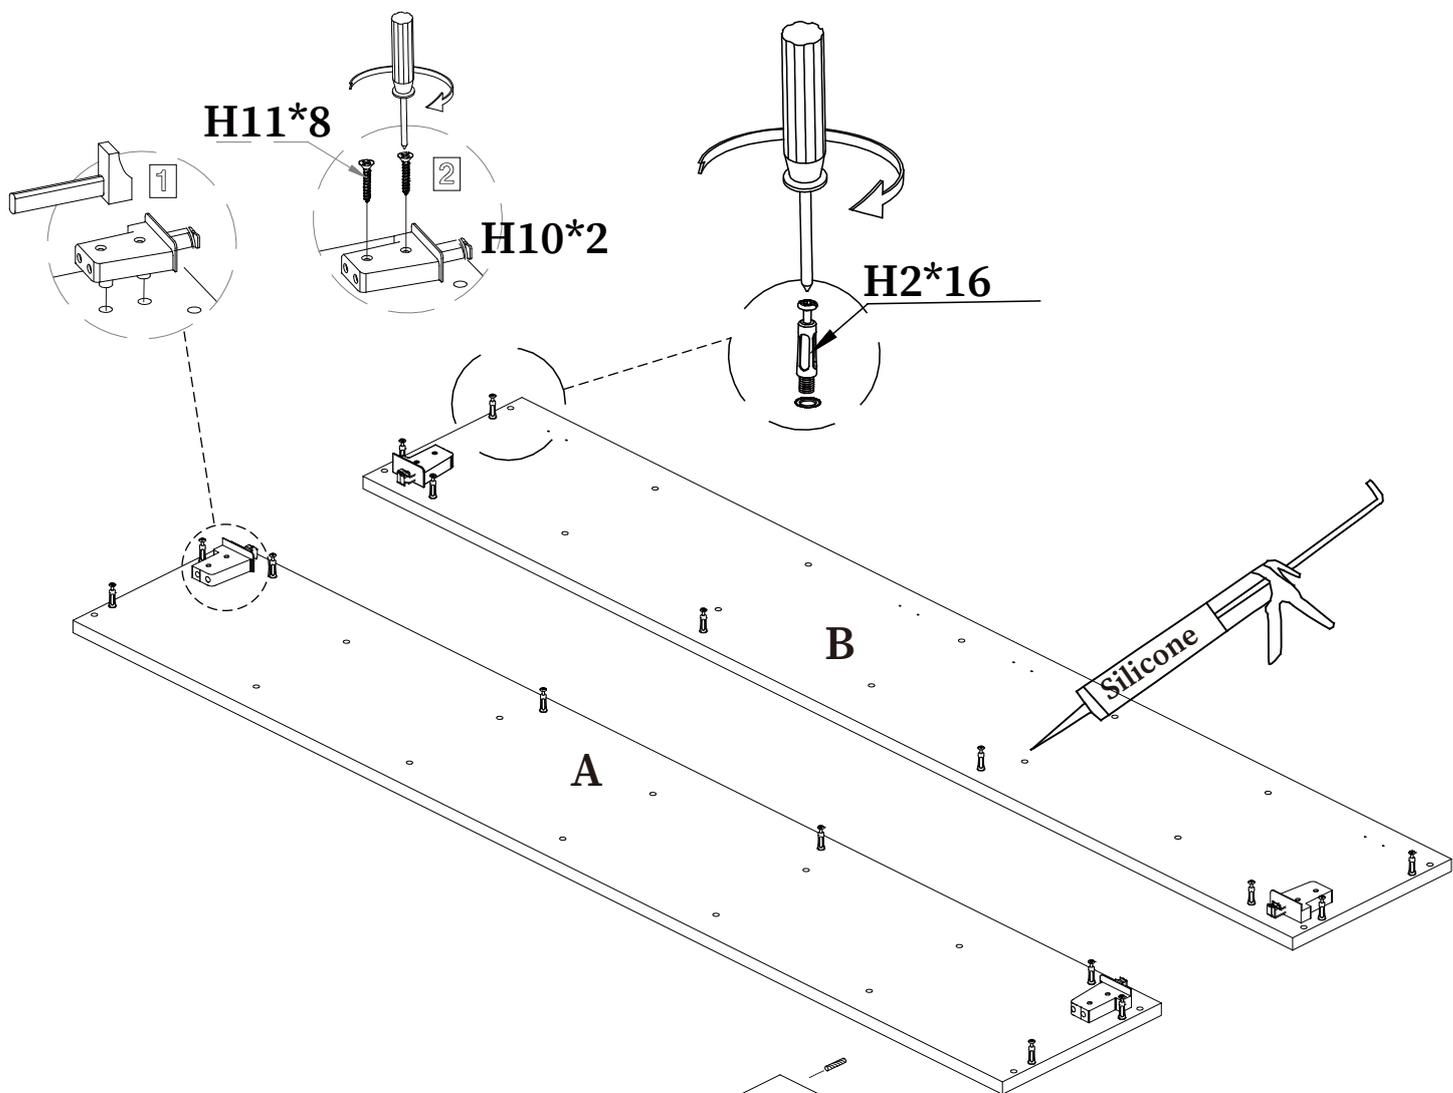


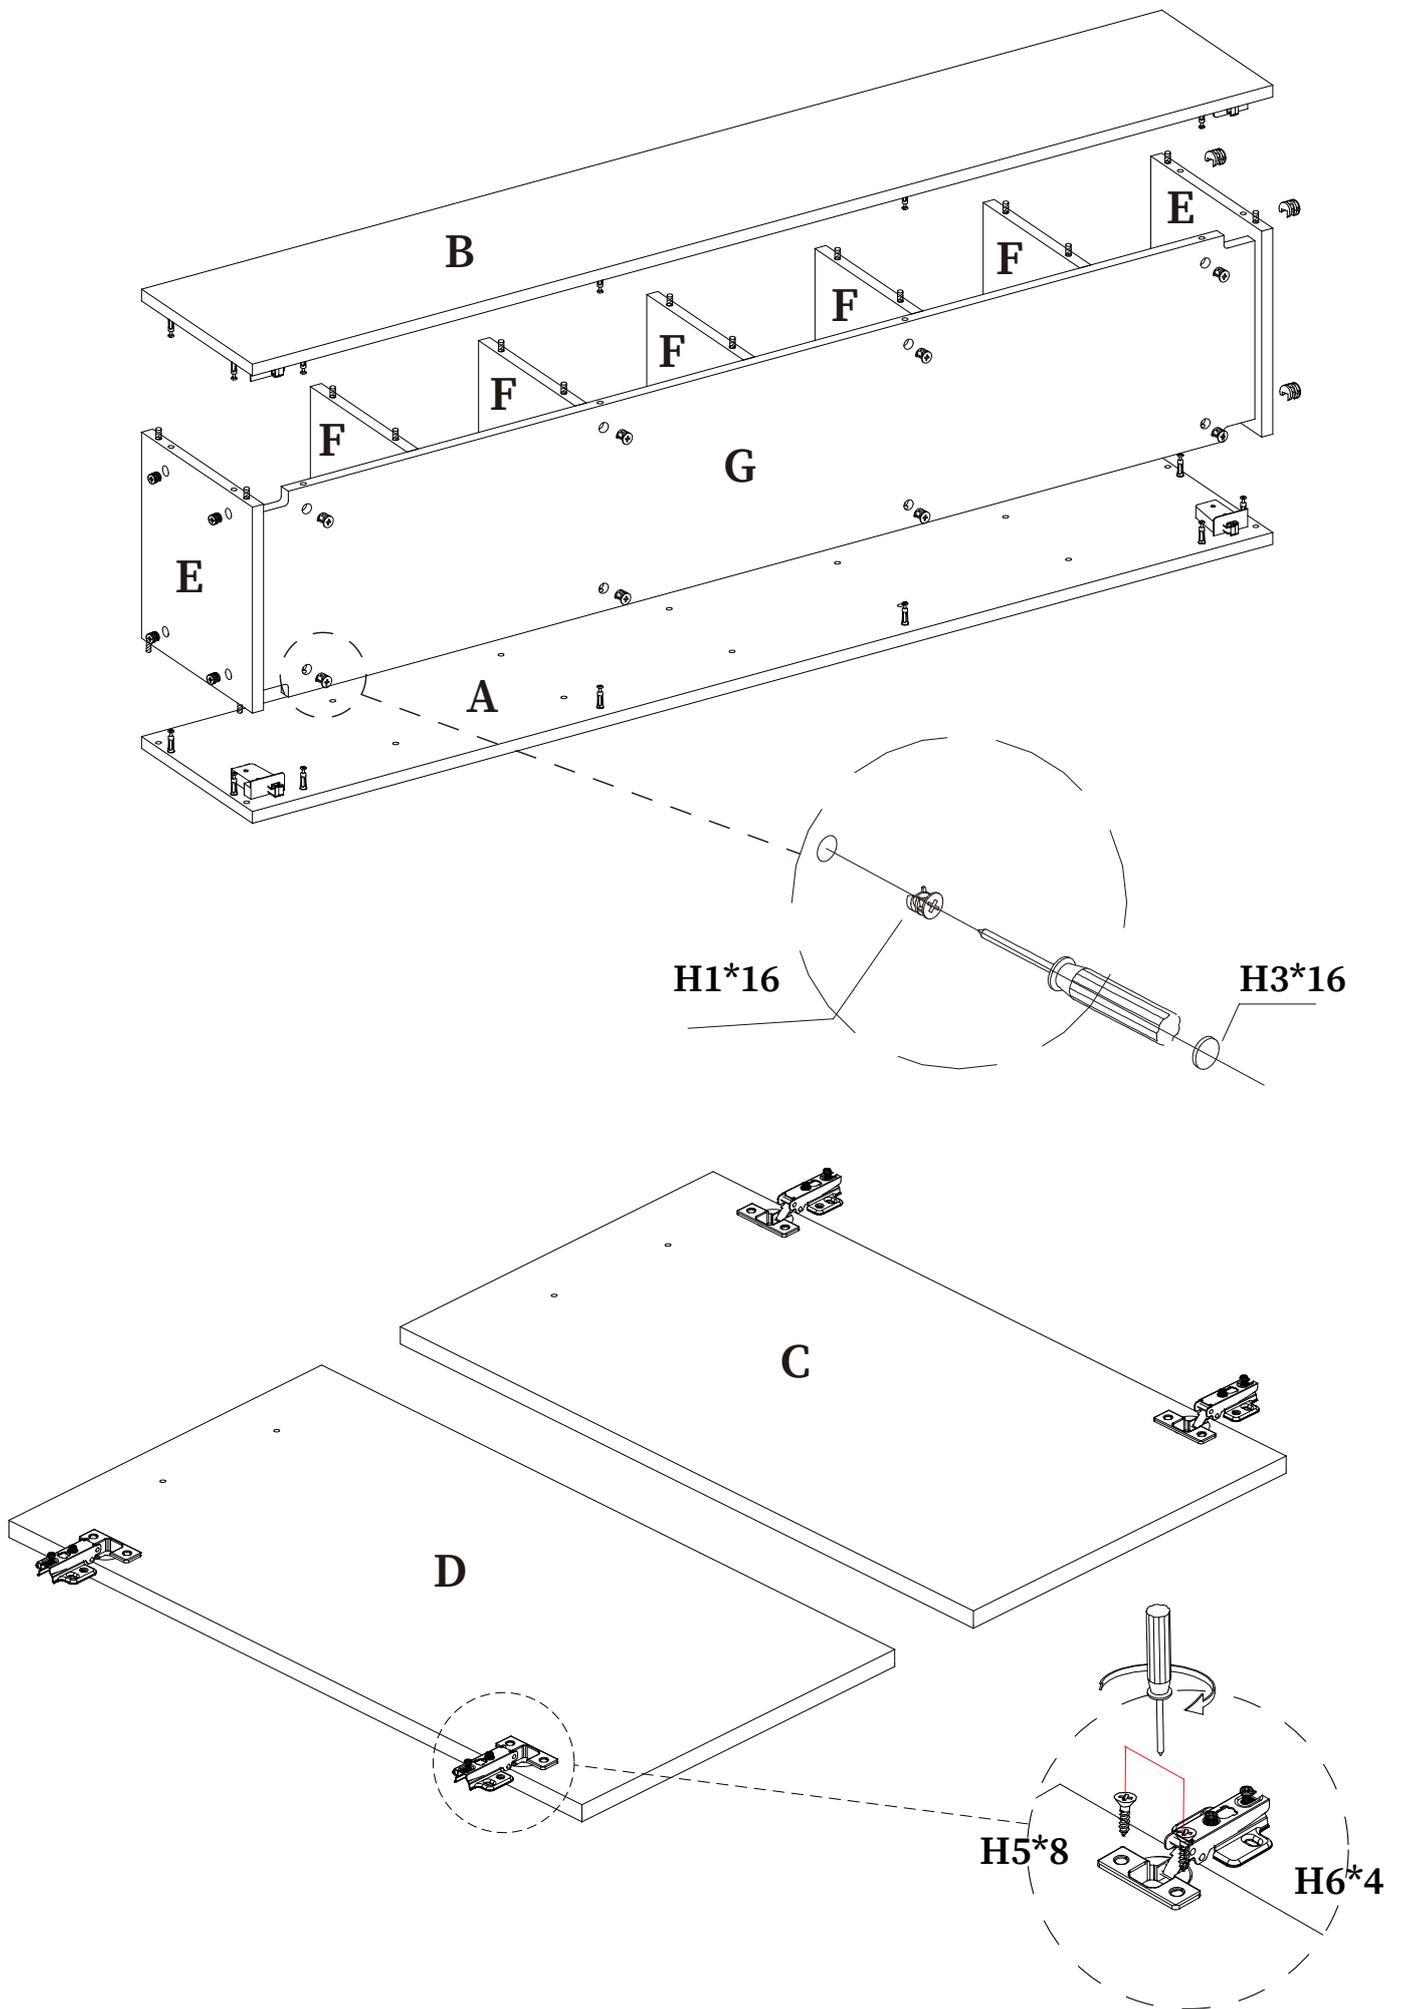


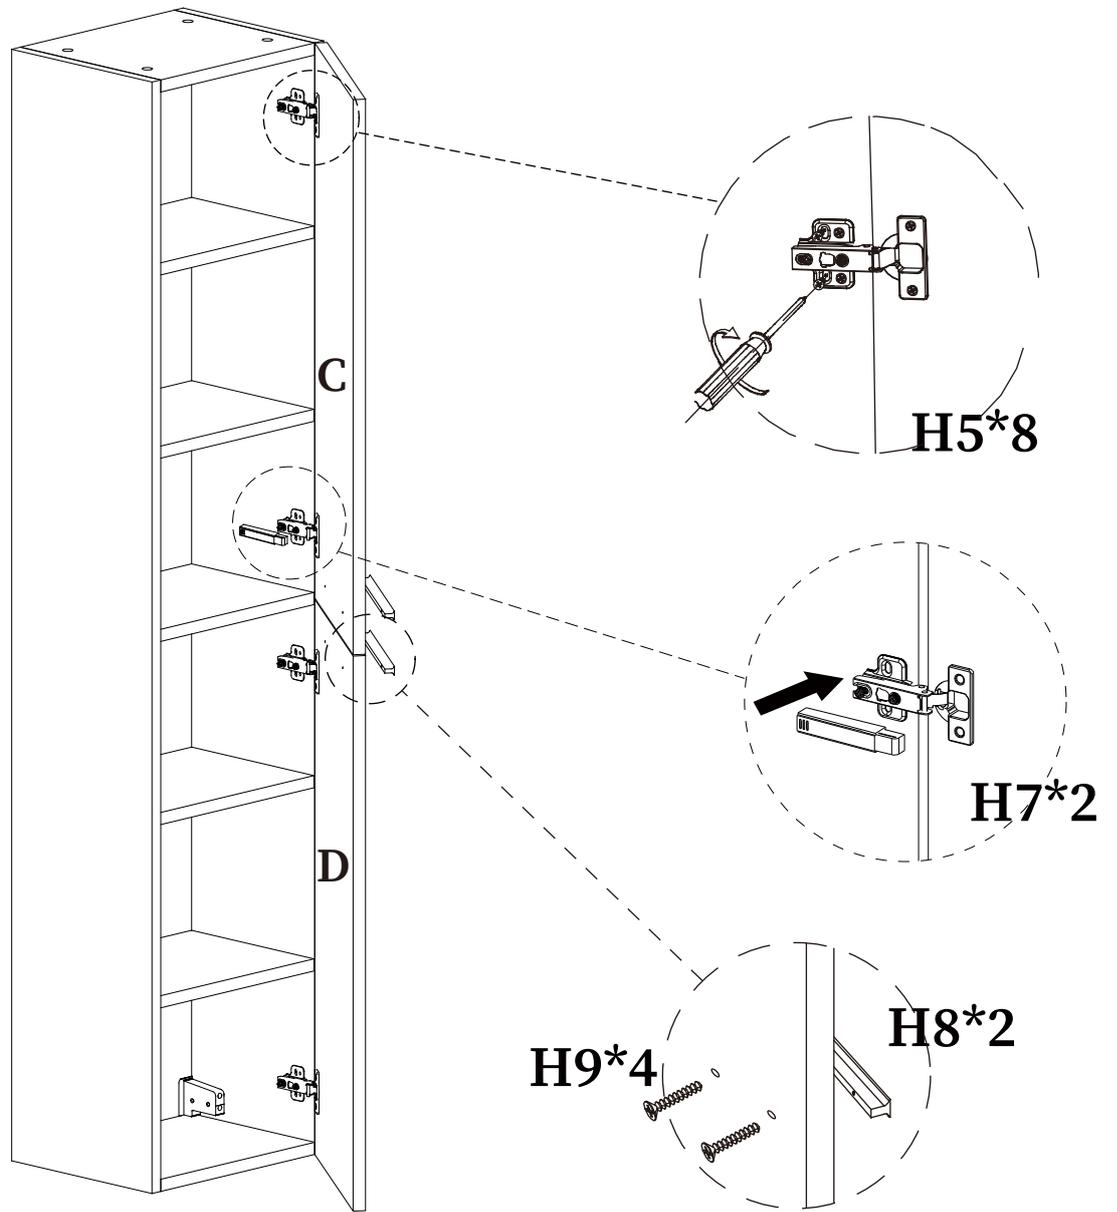


REGLAGES DES PORTES

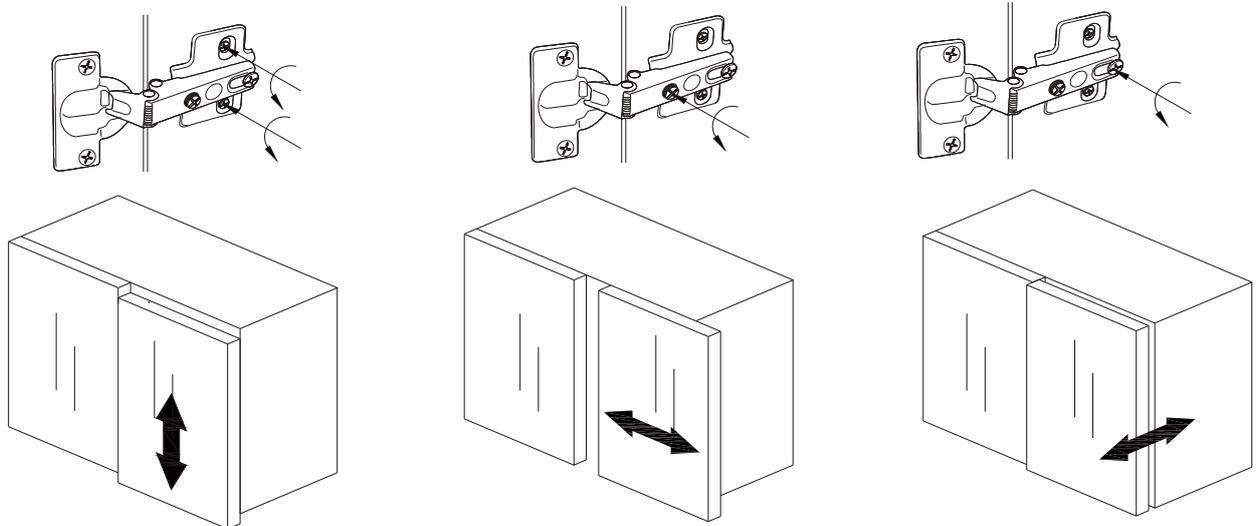

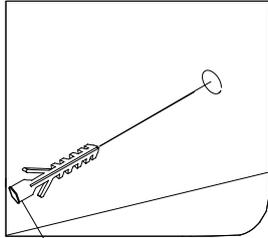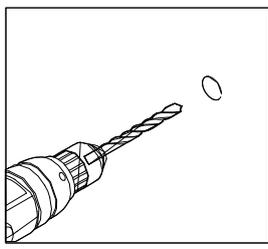

H14*6

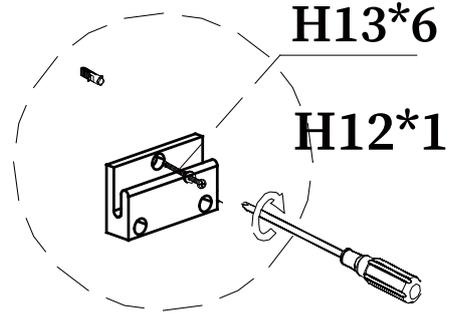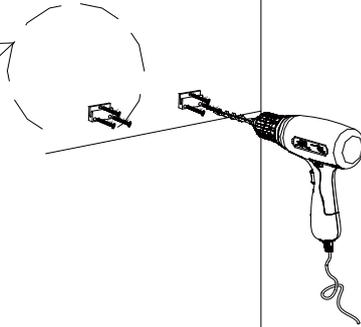

H13*6

H12*1

