


Three Function Concealed Shower Set Installation


INSTALLATION MANUAL Tools You Will Need :

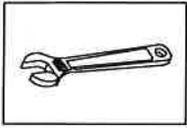


Adjustable wrench



Hexagon wrench

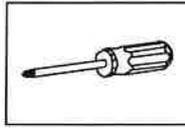


Phillips Screwdriver

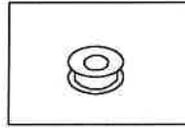


Pipe Tape

Notes before installation :


1. Please check that all components are present.
2. Before installation ensure that all feed lines are clear of debris and on/off valve is present.
3. Ensure water pressure is between 20-125 PSI (includes combination of hot and cold feed lines).
4. Pictures in the manual are general in content and may not represent exactly your purchased faucet.
If you are having difficulties please contact a professional plumber.
5. If you will be away from home for an extended period you should shut off the main water supply.

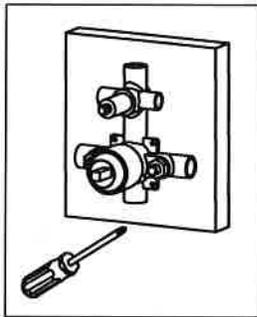


1. Confirm the installed place of the pressure balance valve and fixed on the wood block .

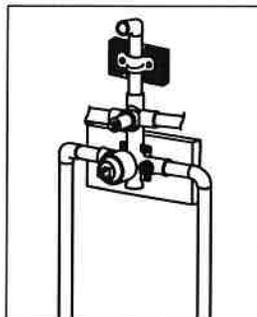


2. Connect the hot&cold inlet tube and outlet tube, then make sure the tube fix stable on the wooden wall.

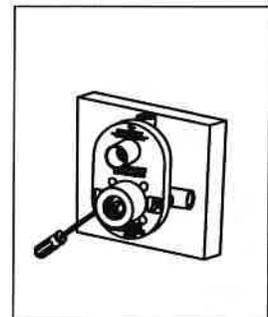


3. Lock the install protective cover into the body. (155*100mm oval type).

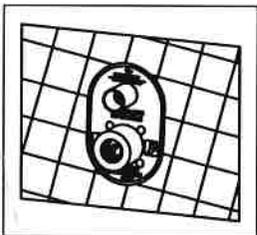


4. Please cut the size of the tile hole according to the size and shape of the protected cover (about 5mm bigger than the protected cover from each side) . And please put the tile outside the wooden wall (please noted that we keep the same central point for the tile hole with the protected cover) .

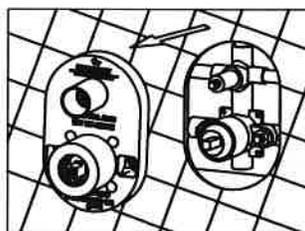

5. Loosen the screw and remove protect cover.

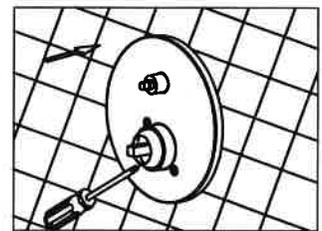

6. Lock the deck plate into the body and cling to the wall, then tight the screw.

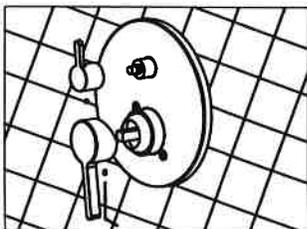

7. Put on the handle, then tight the screw.