



# Concealed Shower Set Installation


## INSTALLATION MANUAL Tools You Will Need :

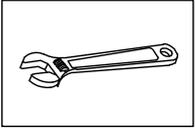


Adjustable wrench

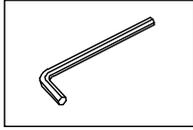

Hexagon wrench

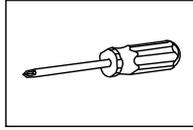

Phillips Screwdriver

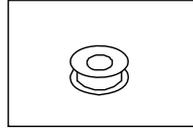


Pipe Tape


### Notes before installation :

1. Please check that all components are present.
2. Before installation ensure that all feed lines are clear of debris and the on/off valve is present.
3. Ensure water pressure is between 20-125 PSI (includes combination of hot and cold feed lines).
4. Pictures in the manual may not represent exact purchased product. If you are having difficulties please contact a professional plumber.
5. Shut off the main water supply if you will be away from home for an extended period.
6. Rinse all water pipes before installation to insure no impurities remain inside.
7. When welding the shower valve to the water pipe, take out the cartridge and any seals in the valve. When welding is complete, wait for body of the valve to cool down, then re-install the cartridge and the seal parts.
8. A force of 11-13 N.m is needed to securely lock the cartridge.


**⚠ All valves have to passed air and pressure testing before shipment. If you wish to request pressure testing before installation, it must be through a professionally licensed plumber and air pressure must not exceed 125 PSI.**

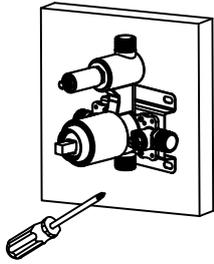


1. Confirm the installed place of the pressure balance valve and fixed on the wood block .

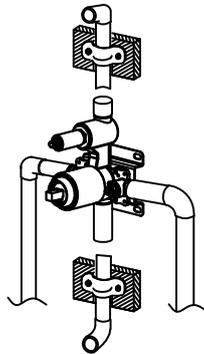


2. Connect the hot&cold inlet tube and outlet tube,then make sure the tube fix stable on the wooden wall.

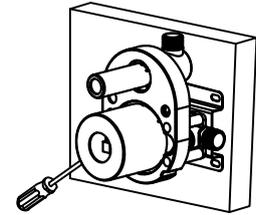


3. Lock the install protective cover into the body. ( 155\*135mm oval type).

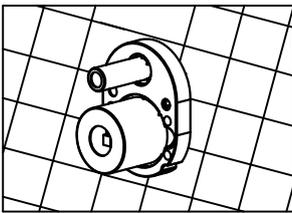


4. Please cut the size of the tile hole according to the size and shape of the protected cover ( about 5mm bigger than the protected cover from each side ) . And please put the tile outside the wooden wall ( please noted that we keep the same central point for the tile hole with the protected cover ) .

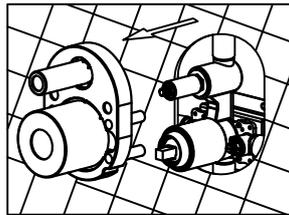


5. Loosen the screw and remove protect cover.

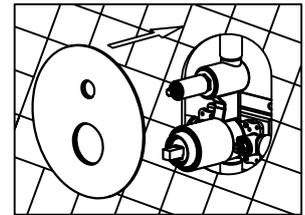


6. Lock the deck plate into the body and cling to the wall.

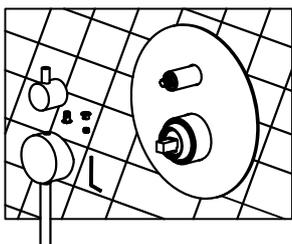

7. Put on the handle, then tight the screw.

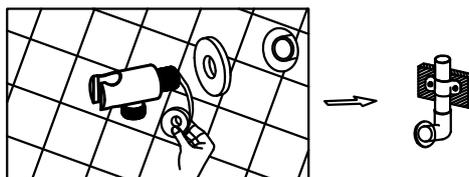

8. Warp the thread of spout with teflon tape (ensure it must warp clockwise).Screw-in to the inlet pipe inside the wall, then install the decorative cover on the wall clingy.

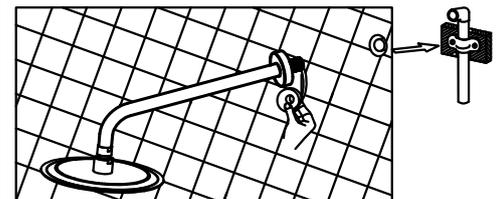

9. Install the shower arm,shower head and flange to the fitting.(stick to the wall).Tighten the showerhead to the shower arm with the pipe tape.(Make sure the pipe tape with clockwise direction).