




1. Before installation, make sure the measured distance for the rough-in is 300mm or greater

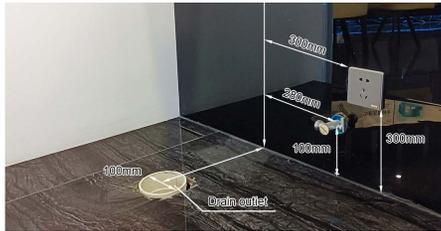

*Please follow recommended measurements in the illustration above (if possible)



2. Put the flange ring into the drain outlet and mark the positions of the screws



3. Take off the flange ring and drill four holes for the screws



4. Put the screws in the four holes



5. Put the flange ring into the drain outlet and install it



6. Install two long screws as seen in the illustration above



7. Raise the toilet seat



8. Take off the entire toilet seat and unscrew the flexible tube and black wire



9. Turn over the toilet bowl and install the flange ring as seen above



10. Apply an adhesive (such as epoxy) on the bottom of the toilet (adhesive sold separately)



11. Move the toilet to the location where it will be installed



12. Make sure the two holes in the bottom of the toilet align with the two long screws attached to the flange ring, then install



13. Put the toilet seat back on the toilet and reconnect the flexible tube and black wire



14. Push the cover down to set it in place



15. Apply an adhesive to fix the toilet in place and insulate the outside dirt from entering (adhesive sold separately)



16. Connect the flexible tube to the inlet angle valve

Attention: The above installation steps are universal for all models of toilets and are only for your reference during installation.

If you find that the details in the pictures do not match the actual product, please ignore them!