



INSTALLATION INSTRUCTIONS

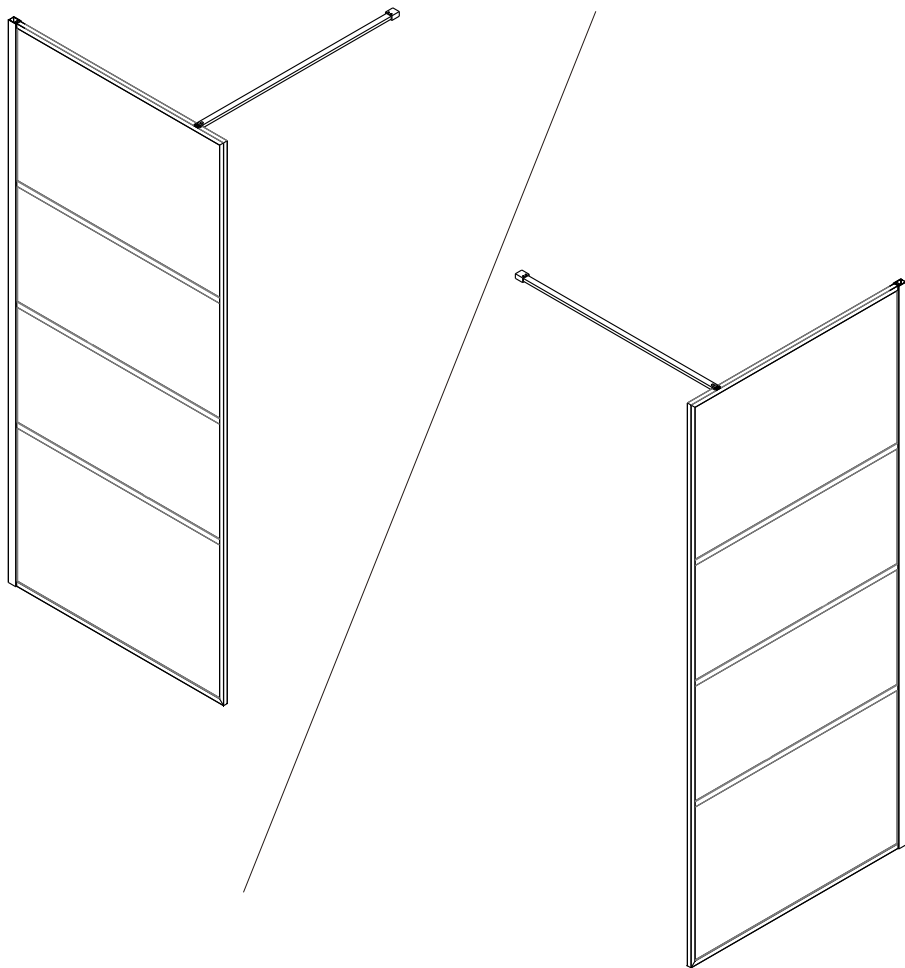




TIFP-3479-B
TIFPT-3266-B


V1.0-2025-7-4

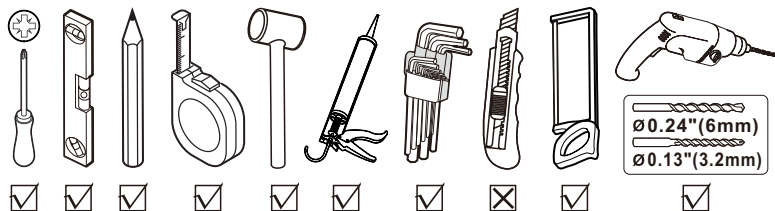


WARNING

When the glass is placed upright, something soft should be placed on the bottom of the Tempered Glass. Please don't hit the corners and the surrounding, otherwise the glass will burst.

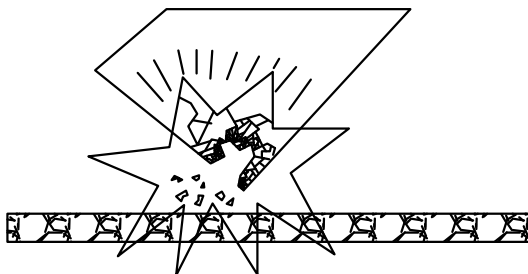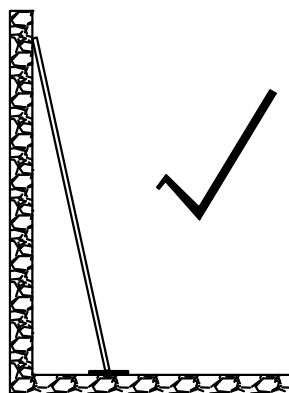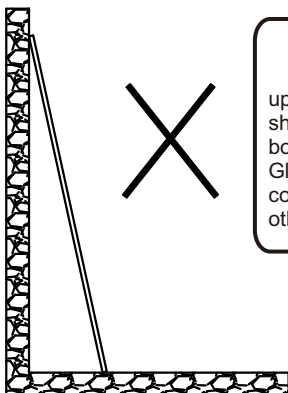





[01] x1

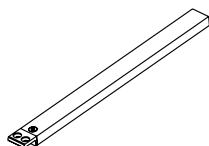

[02] x1

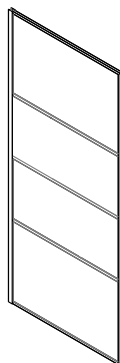


[03] x1



[04] x1



[07] x4



ST4x35

[08] x4



ST4x8

[09] x2




ST4x8

[10] x3







[11] x3





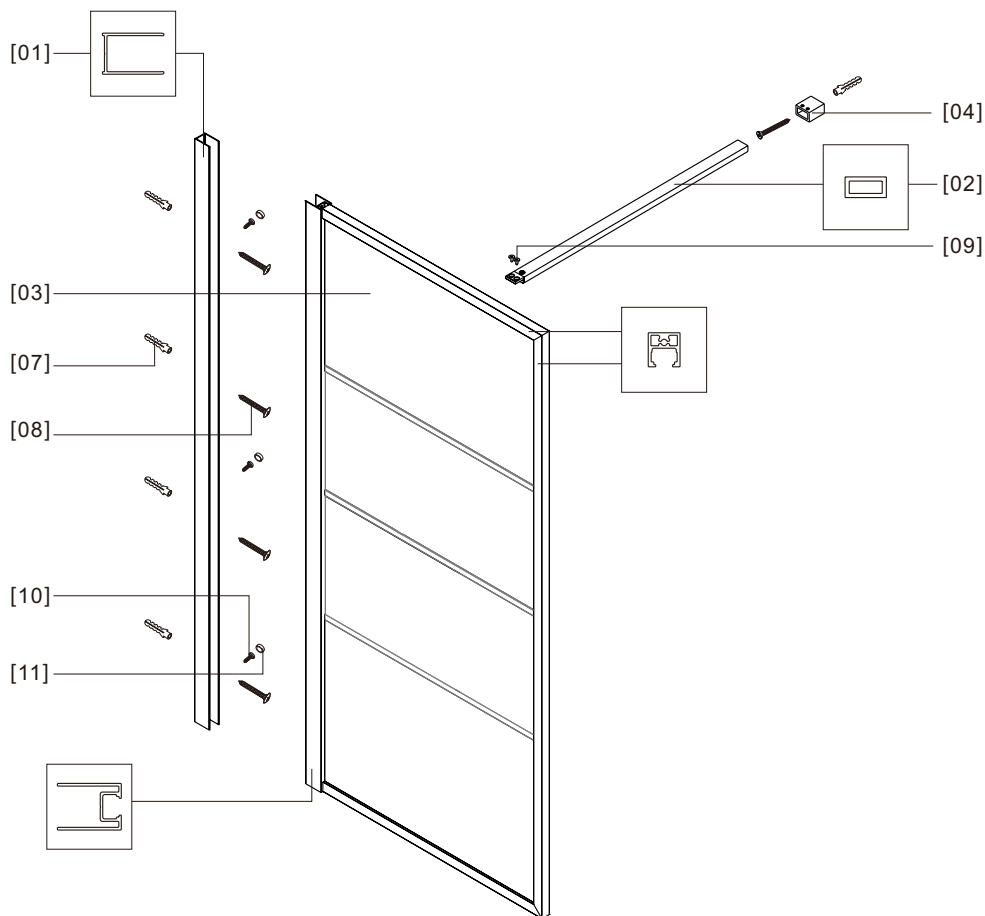







01

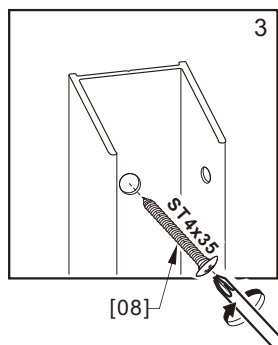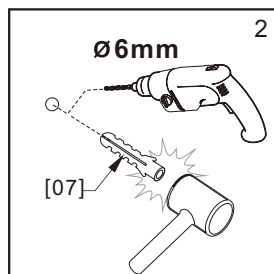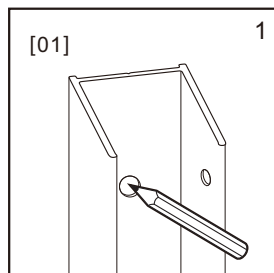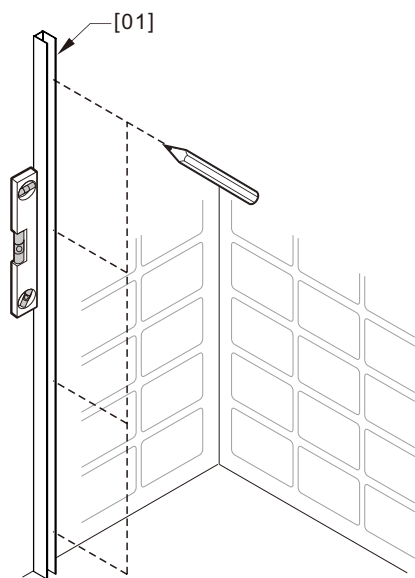



02

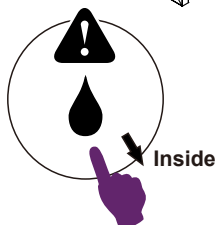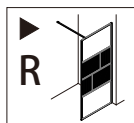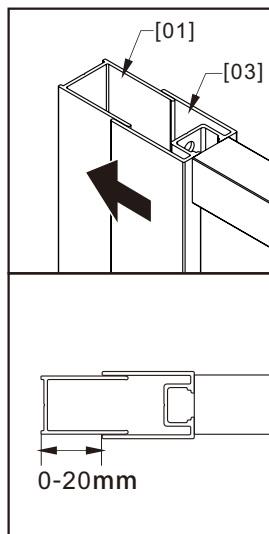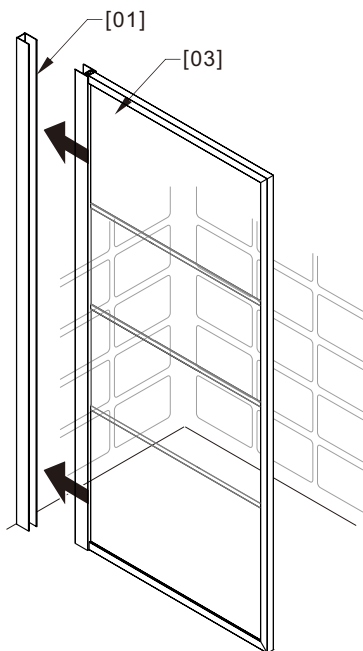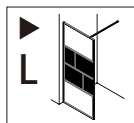


Glass side with easy clean symbol must be installed inside of shower enclosure

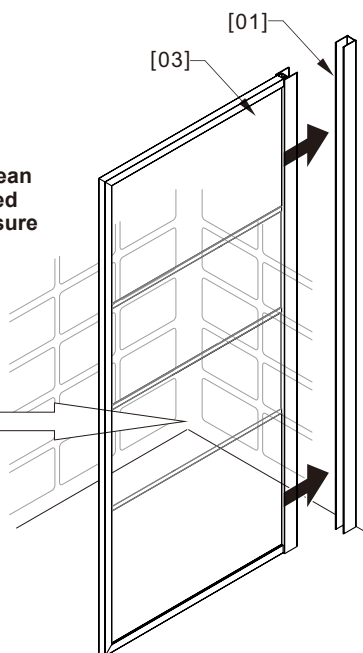


03

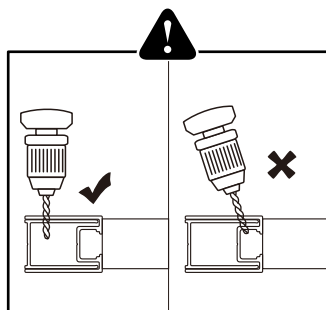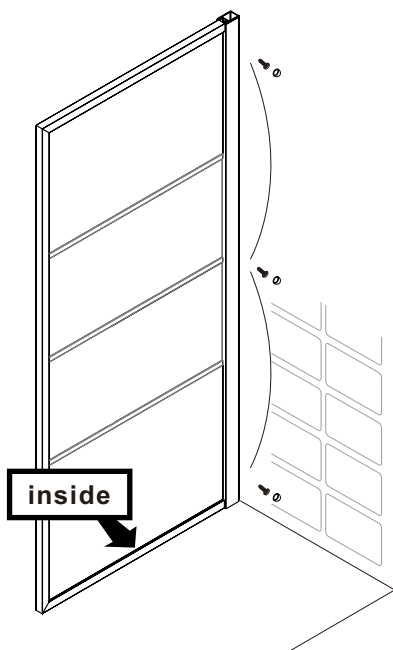












3x

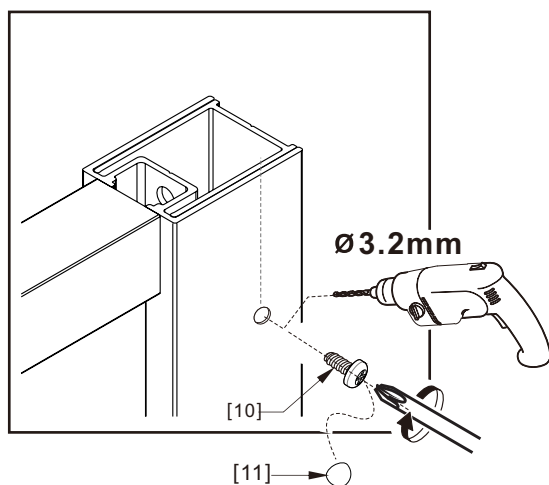

04

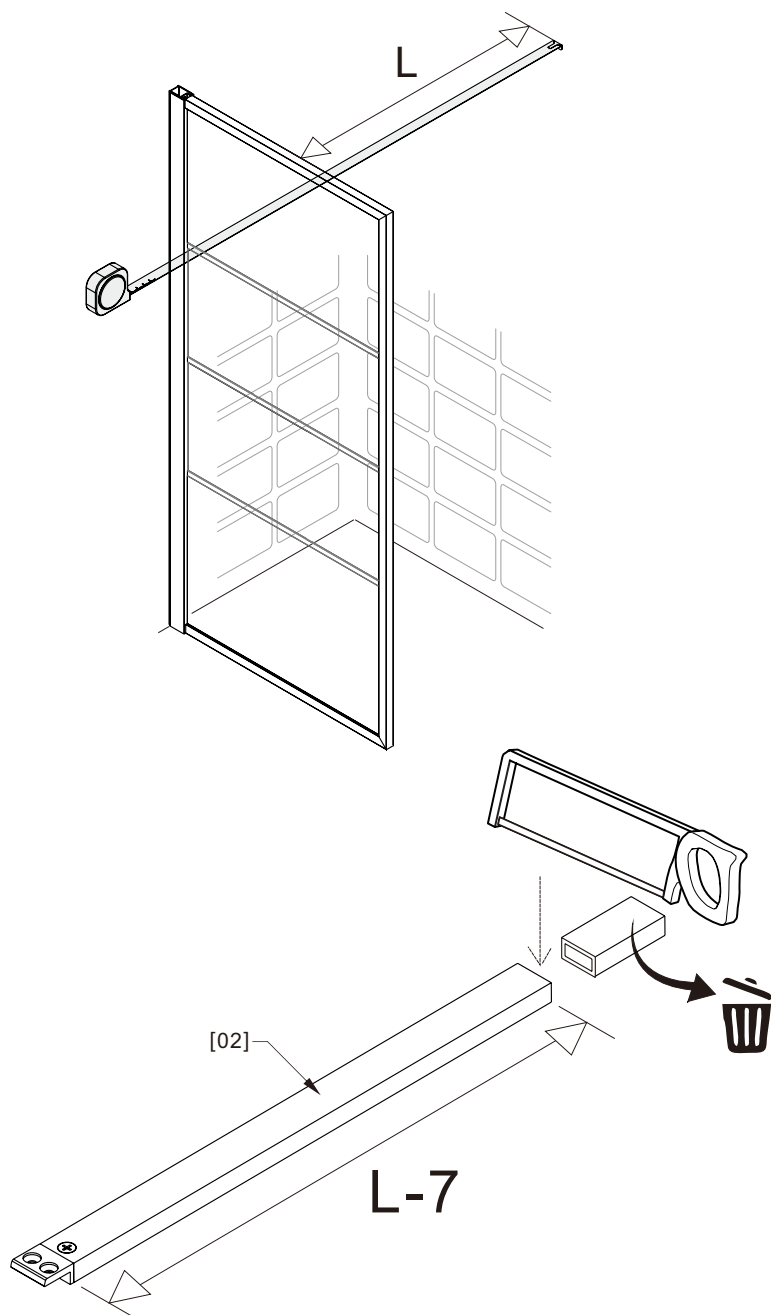

05

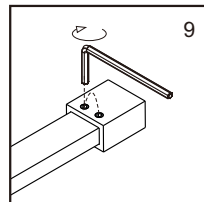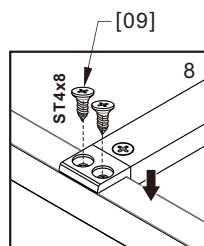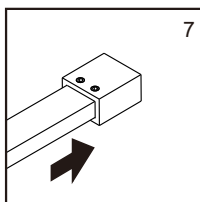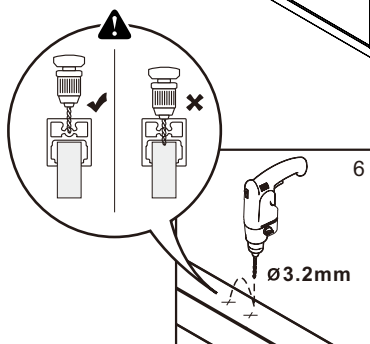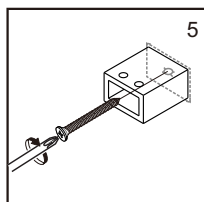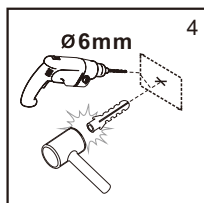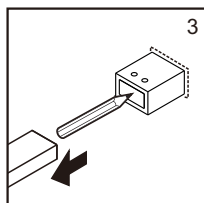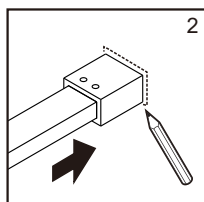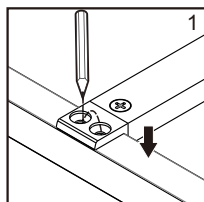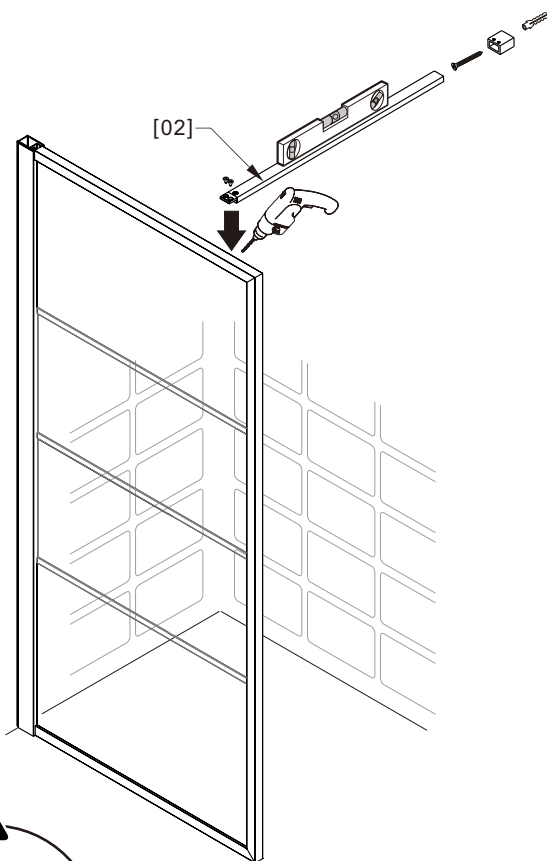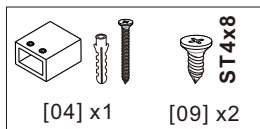

06

