

INSTALLATION INSTRUCTIONS

MODERN 4/6L ONE PIECE TOILET

Model TT-0382Y-MB-ADA

Complies with ASME
A112.19.2/CSA B125.1-2013.



⚠ CAUTION: PRODUCT IS FRAGILE. TO AVOID BREAKAGE AND POSSIBLE INJURY HANDLE WITH CARE!


RECOMMENDED TOOLS AND MATERIALS

Putty Knife	Regular Screwdriver	Adjustable Wrench	Sealant	Tape Measure
Hacksaw	Wax Ring/Gasket	Flexible Supply Tube	Closet Bolts	Carpenters Level

1 REMOVE OLD TOILET (IF NEW INSTALLATION PROCEED TO STEP 2)


- Close toilet supply valve and flush tank completely. Towel or sponge remaining water from tank and bowl.
 - Disconnect and remove supply line. *NOTE: If replacing valve, first shut off main water supply!*
 - Remove old mounting hardware, remove toilet and plug floor waste opening to prevent escaping sewer gases.
 - Remove closet bolts from flange and clean away old wax, putty, etc. from base area.
- NOTE:** *Mounting surface must be clean and level **before** new toilet is installed!*

2

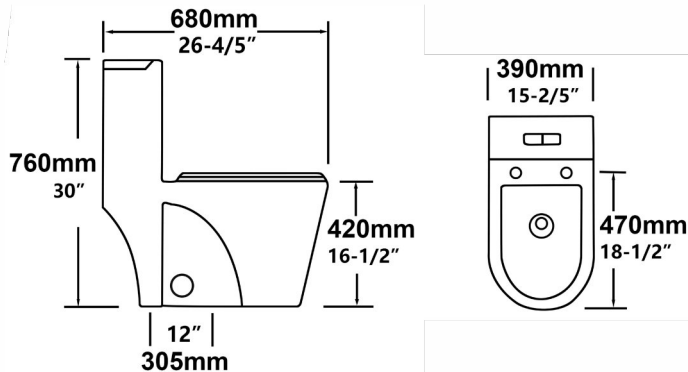

DIMENSIONS (Nominal) *NOTE: Distance from wall to closet flange centerline (rough-in) must be 12" (305 mm) minimum.*

3

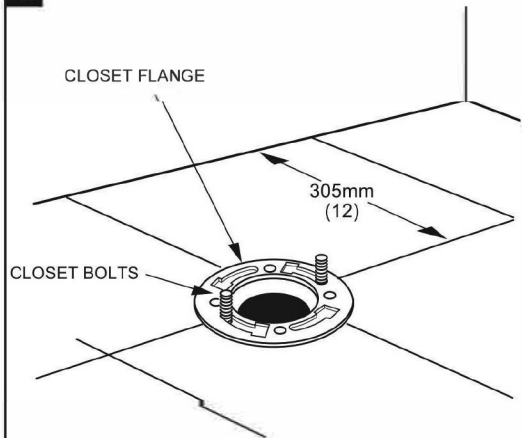

INSTALL CLOSET BOLTS

Install closet bolts in flange channel, turn 90°, and slide into place 6" (152 mm) apart and parallel to wall.