




INSTRUCTION

WAL-SC-AUG-KD

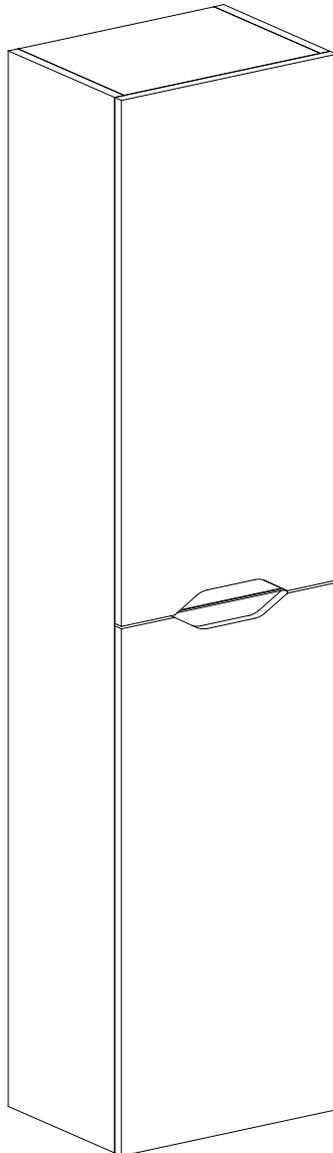


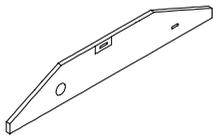


Spirit level





Tape measure
(3m~5m)

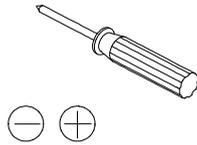

Screwdriver

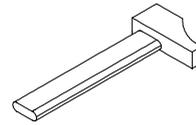

Hammer

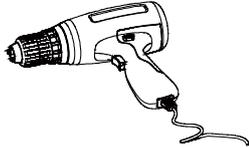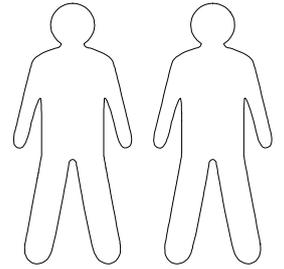


Electric drill




Drill bit
(Ø8)



Pencil

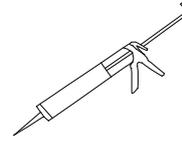


Silicone

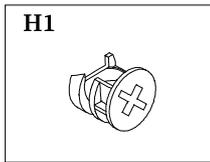


H1

16*

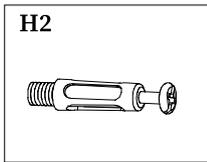


H2

16*

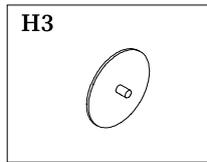


H3

16*

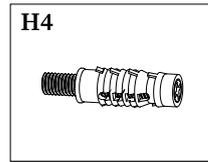


H4

12*

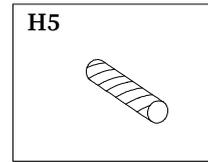


H5

8*φ8*30

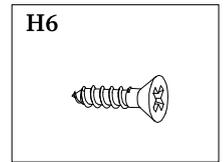


H6

24*φ4*16

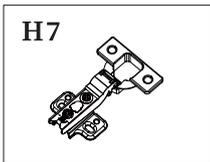


H7

4*

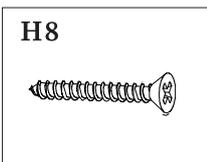


H8

5*Ø4x28

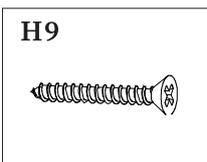




H9



6*Ø4x50

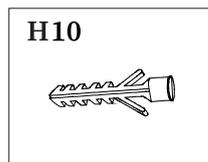




H10

6*Ø8x40

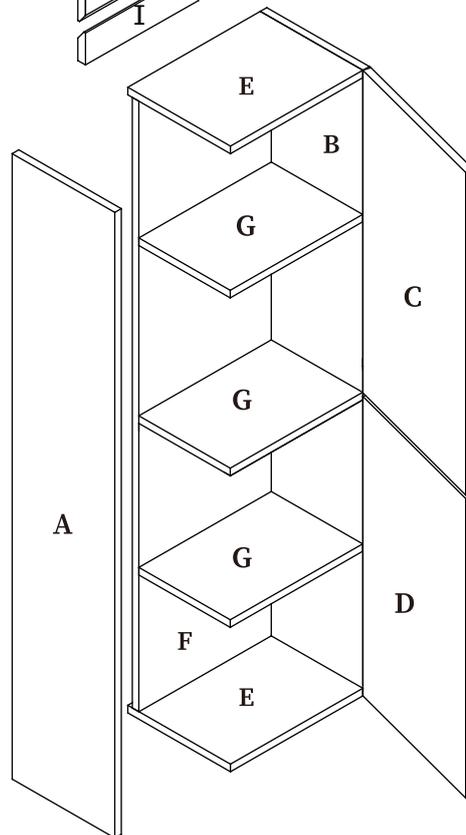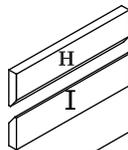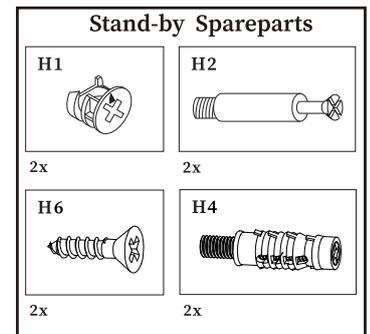

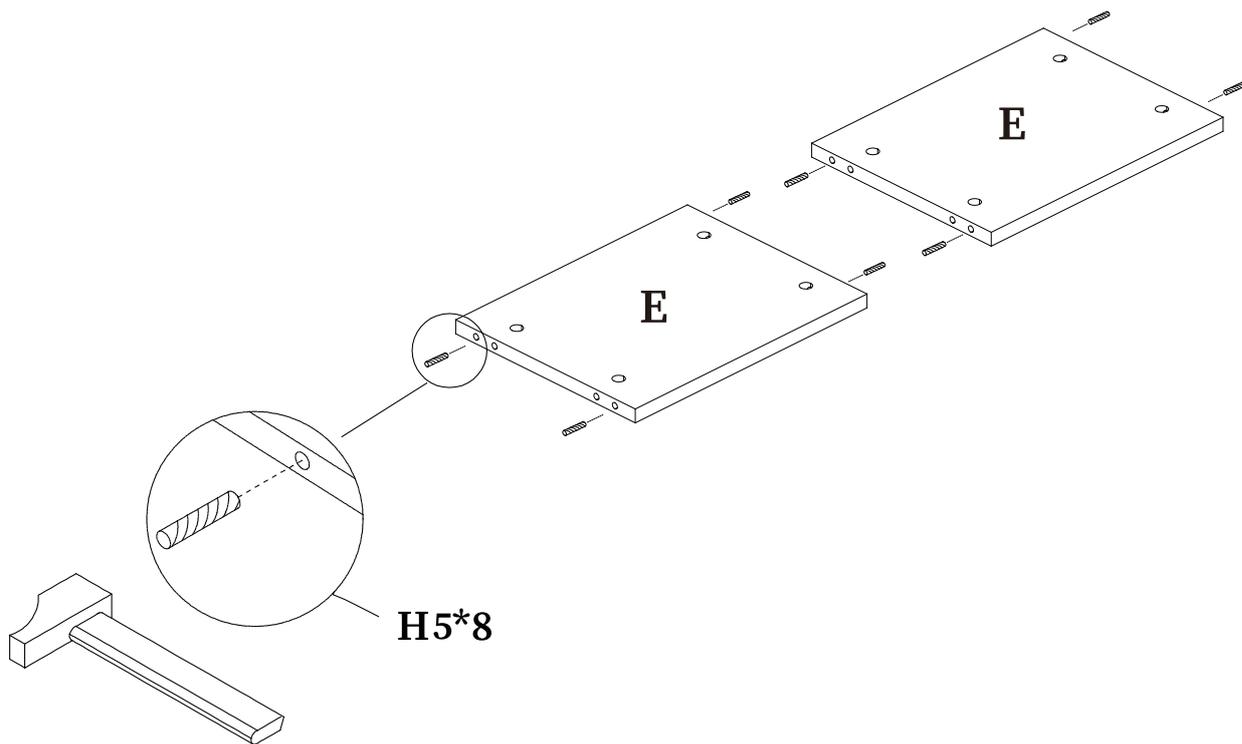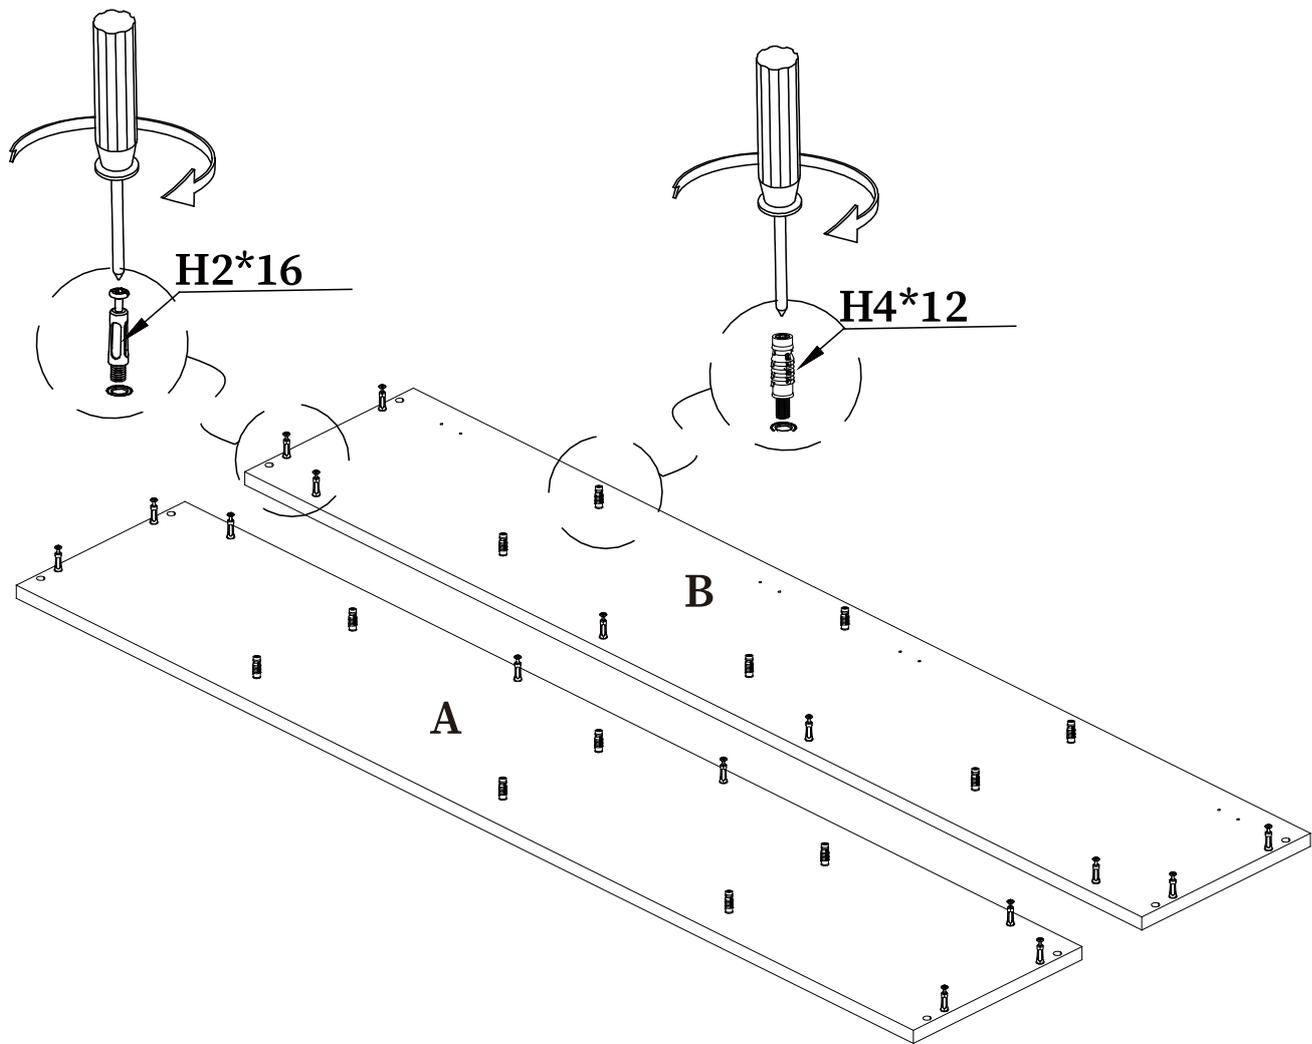

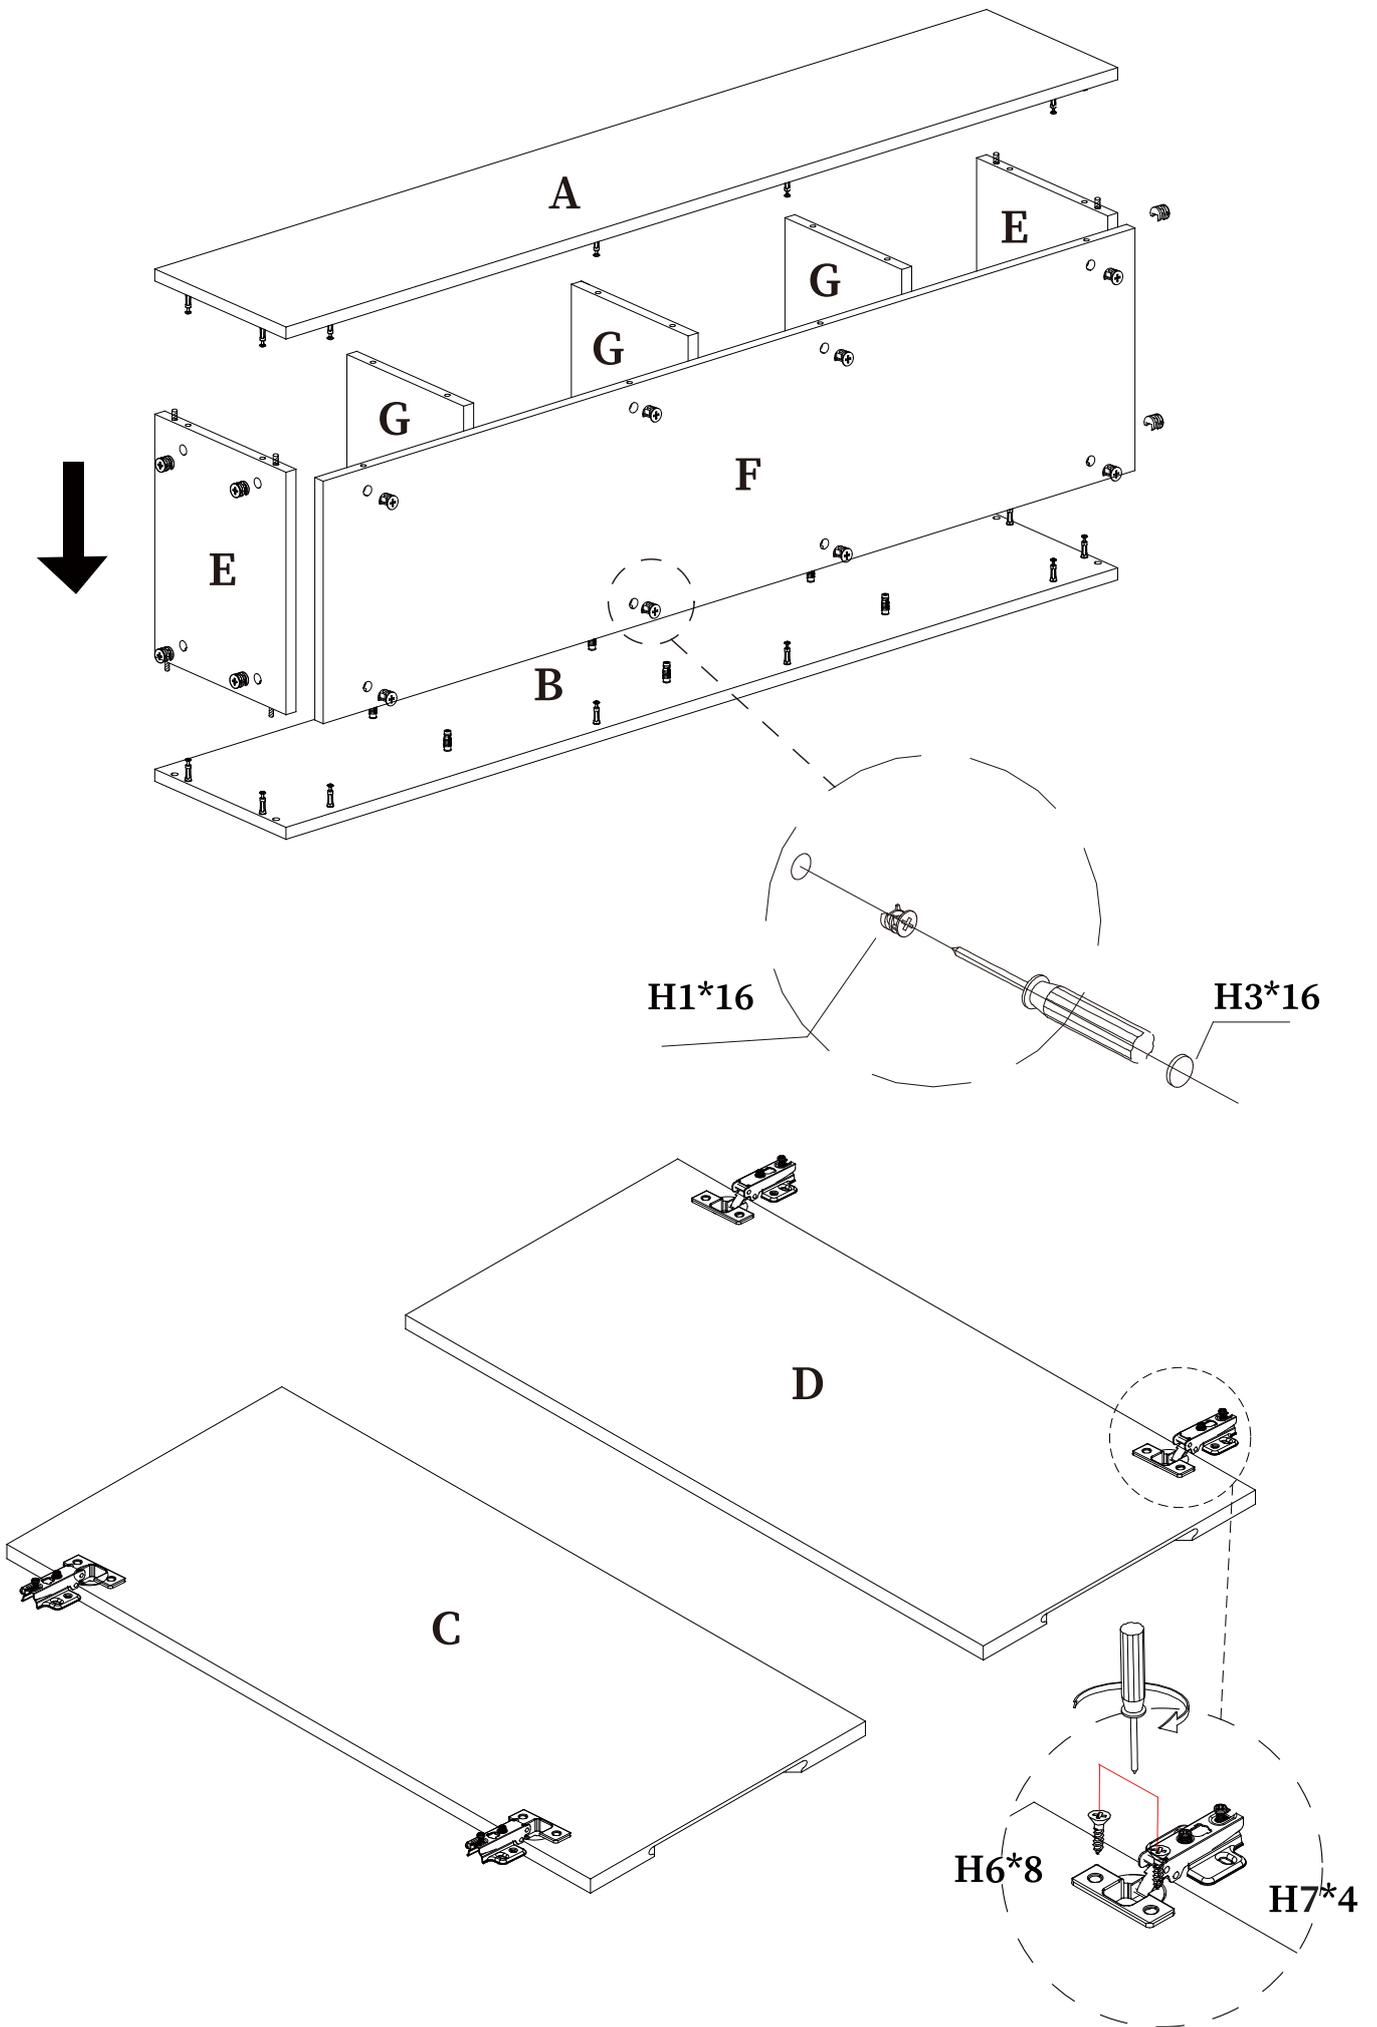

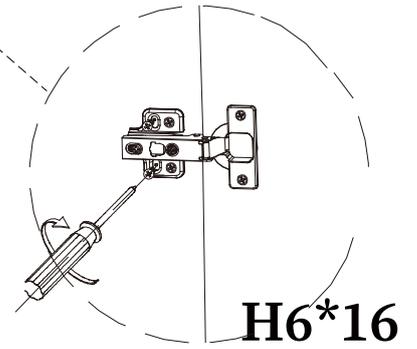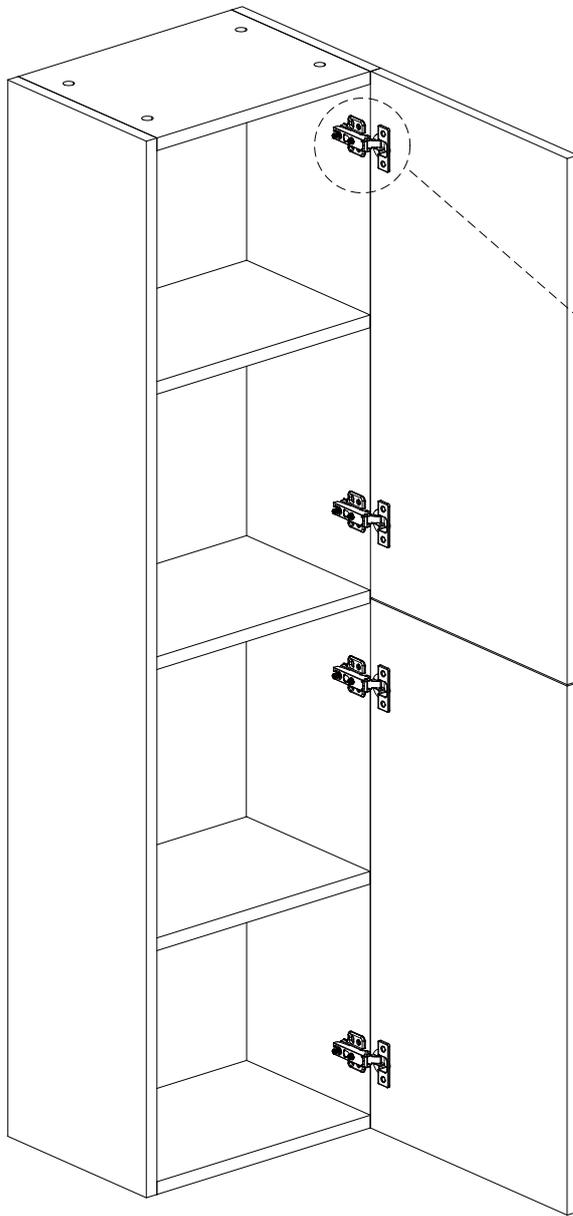

REGLAGES DES PORTES

